


# 2008 Ninja® 500R

## PARTS DIAGRAM

### Air Cleaner

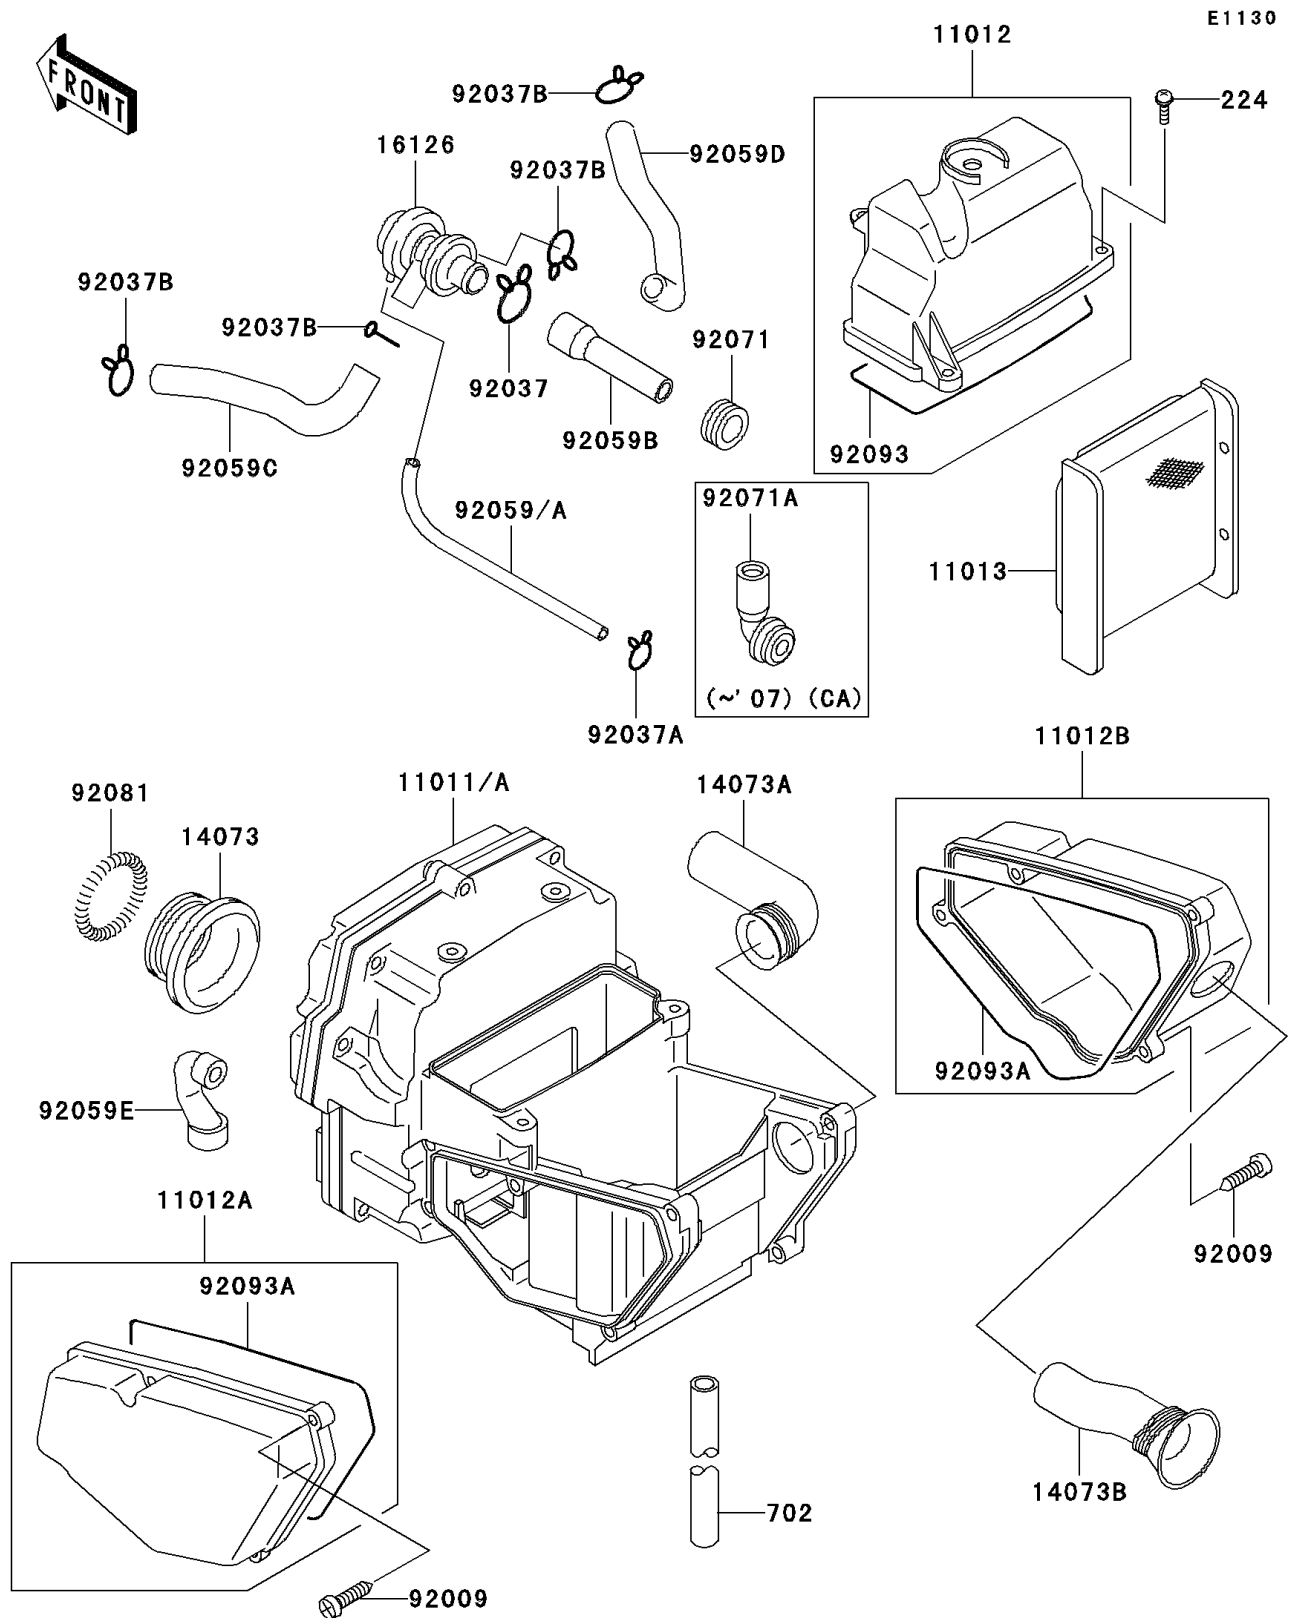

# 2008 Ninja® 500R

## PARTS LIST

### Air Cleaner

ITEM NAME	PART NUMBER	QUANTITY
SCREW-PAN-WP-CROS,6X20 (Ref # 224)	224AA0620	4
TUBE-RUBBER,5X350 (Ref # 702)	702A05350	1
CASE-AIR FILTER (Ref # 11011A)	11011-1649	1
CAP,AIR FILTER CASE,UPP (Ref # 11012)	11012-1571	1
CAP,AIR FILTER,LH (Ref # 11012A)	11012-1608	1
CAP,AIR FILTER,RH (Ref # 11012B)	11012-1609	1
ELEMENT-AIR FILTER (Ref # 11013)	11013-1252	1
DUCT,CARBURATOR (Ref # 14073)	14073-1292	2
DUCT,INTAKE (Ref # 14073A)	14073-1293	1
DUCT (Ref # 14073B)	14073-1295	1
VALVE,AIR SWITCH (Ref # 16126)	16126-1283	1
SCREW,TAPPING,5X30 (Ref # 92009)	92009-1488	8
CLAMP,TUBE (Ref # 92037)	92037-1076	1
CLAMP (Ref # 92037A)	92037-1712	1
CLAMP,TUBE (Ref # 92037B)	92037-213	4
TUBE,4X9X290 (Ref # 92059)	92059-1043	1
TUBE,AIR FILTER-ACV (Ref # 92059B)	92059-1770	1
TUBE,AIR SWITCH,LH (Ref # 92059C)	92059-1771	1
TUBE,AIR SWITCH,RH (Ref # 92059D)	92059-1772	1
TUBE,BREATHER (Ref # 92059E)	92059-1773	1
GROMMET,AIR FILTER (Ref # 92071)	92071-1028	1
SPRING,COIL,BLACK (Ref # 92081)	92081-1457	2
SEAL,AIR FILTER CAP (Ref # 92093)	92093-1233	1
SEAL,AIR FILTER (Ref # 92093A)	92093-1234	2