

Front Hub

Let the Good Times Roll®

This diagram illustrates the assembly of a vehicle wheel, showing the tire, rim, and various mounting and suspension components. The parts are labeled with the following part numbers:

- 39092**: Pin
- 92200**: Nut
- 92093A**: Washer
- 92210A**: Washer
- 92026A**: Washer
- 92026**: Pin
- 92045**: Pin
- 41009**: Tire
- 41022**: Tire
- 41023**: Tire
- 41034**: Tire
- 41026/A**: Tire
- 41025/A**: Tire
- 92045A**: Pin
- 92145**: Spring
- 41048**: Spring
- 41035**: Spring
- 41050**: Spring
- 92200A**: Nut
- 92145A**: Spring
- 92093**: Washer
- 41068**: Pin
- 92210**: Washer
- 41053**: Spring
- 92153**: Pin



2004 KLX125

PARTS LIST

Front Hub

ITEM NAME	PART NUMBER	QUANTITY
PIN-HAIR,COTTER (Ref # 39092)	39092-S005	1
TIRE,FR (Ref # 41009)	41009-S005	1
TUBE-TIRE (Ref # 41022)	41022-S001	1
BAND-RIM (Ref # 41023)	41023-S001	1
RIM,FR WHEEL,17X1.40 (Ref # 41025A)	41025-S016	1
SPOKE-ASSY,FRONT WHEEL (Ref # 41026A)	41026-S011	1
DRUM-ASSY,FRONT WHEEL (Ref # 41034)	41034-S001	1
PANEL-ASSY-BRAKE (Ref # 41035)	41035-S001	1
SHOE-BRAKE (Ref # 41048)	41048-S002	1
CAM-BRAKE (Ref # 41050)	41050-S002	1
LEVER-BRAKE CAM (Ref # 41053)	41053-S002	1
AXLE,FR (Ref # 41068)	41068-S006	1
SPACER,FRONT HUB BEARING (Ref # 92026)	92026-S039	1
SPACER,FRONT AXLE,RH (Ref # 92026A)	92026-S041	1
BEARING-BALL,FRONT HUB,RH (Ref # 92045)	92045-S028	1
BEARING-BALL,FRONT HUB,LH (Ref # 92045A)	92045-S031	1
SEAL (Ref # 92093)	92093-S008	1
SEAL,FRONT HUB DUST (Ref # 92093A)	92093-S009	1
SPRING,REAR BRAKE SHOE (Ref # 92145)	92145-S047	2
SPRING,FR BK CAM LEVER (Ref # 92145A)	92145-S051	1
BOLT (Ref # 92153)	92153-S130	1
WASHER (Ref # 92200)	92200-S069	1
WASHER (Ref # 92200A)	92200-S071	1
NUT (Ref # 92210)	92210-S001	1
NUT (Ref # 92210A)	92210-S052	1