


Front Hub

Let the Good Times Roll®

This diagram illustrates the assembly of a motorcycle wheel. The main components shown are the wheel rim (41009), the tire (41025/A), the spokes (41034), the hub (41023), and the axle (41026/A). The tire is mounted on the rim, and the spokes are attached to the hub and the rim. The axle is shown passing through the hub and the rim. Various fasteners and components are labeled with part numbers: 39092 (a small pin), 92210 (a nut), 92200 (a washer), 92026A (a nut), 92045 (a washer), 41026/A (the axle), 41023 (the hub), 41022 (the tire), 92026 (a nut), and 92045 (a washer).

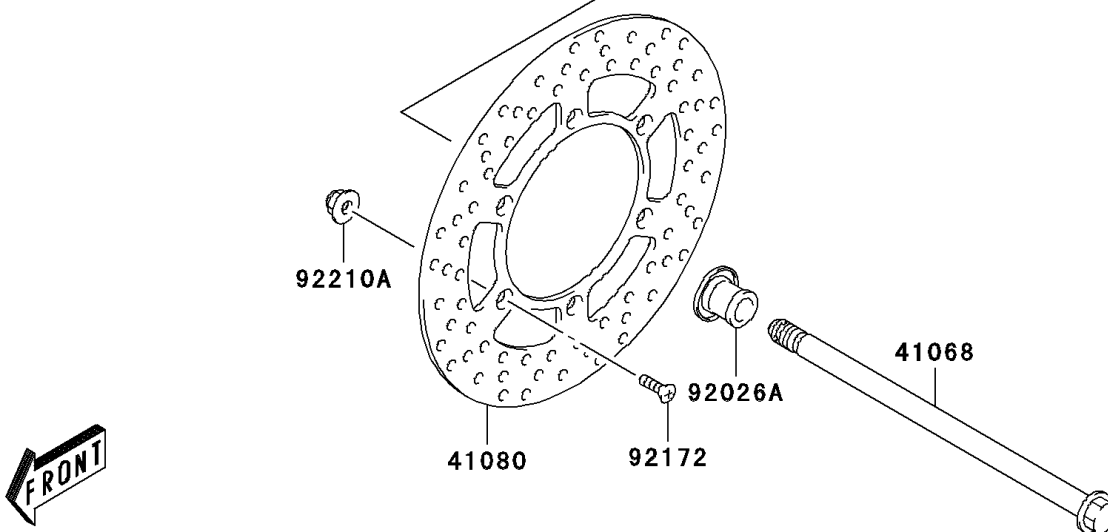

2004 KLX125L

PARTS LIST

Front Hub

ITEM NAME	PART NUMBER	QUANTITY
PIN-HAIR,COTTER (Ref # 39092)	39092-S005	1
TIRE,FR (Ref # 41009)	41009-S007	1
TUBE-TIRE (Ref # 41022)	41022-S003	1
BAND-RIM (Ref # 41023)	41023-S003	1
RIM (Ref # 41025A)	41025-S018	1
SPOKE-ASSY (Ref # 41026A)	41026-S012	1
DRUM-ASSY,FRONT WHEEL (Ref # 41034)	41034-S002	1
AXLE,FR (Ref # 41068)	41068-S005	1
DISC (Ref # 41080)	41080-S004	1
SPACER,FRONT HUB BEARING (Ref # 92026)	92026-S050	1
SPACER,FRONT AXLE (Ref # 92026A)	92026-S051	2
BEARING-BALL,FRONT HUB (Ref # 92045)	92045-S002	2
SCREW (Ref # 92172)	92172-S109	3
WASHER (Ref # 92200)	92200-S079	1
NUT (Ref # 92210)	92210-S064	1
NUT (Ref # 92210A)	92210-S066	3