


Front Hub

Let the Good Times Roll®

This diagram illustrates the assembly of a motorcycle wheel. The main components shown are the tire (41009), the rim (41025/A), the spokes (41034), the hub (41023), and the axle (41022). The tire is mounted on the rim, and the spokes connect the rim to the hub. The hub is mounted on the axle. The axle is secured with a nut (92210) and a washer (92200). The hub is secured with a nut (92026A) and a washer (92045). The axle is also secured with a nut (92026) and a washer (92045). The diagram includes the following labels:

- 39092: Pin
- 92210: Nut
- 92200: Washer
- 92026A: Nut
- 92045: Washer
- 41026/A: Axle
- 41009: Tire
- 41025/A: Rim
- 41034: Spokes
- 41023: Hub
- 41022: Axle
- 92026: Nut
- 92045: Washer

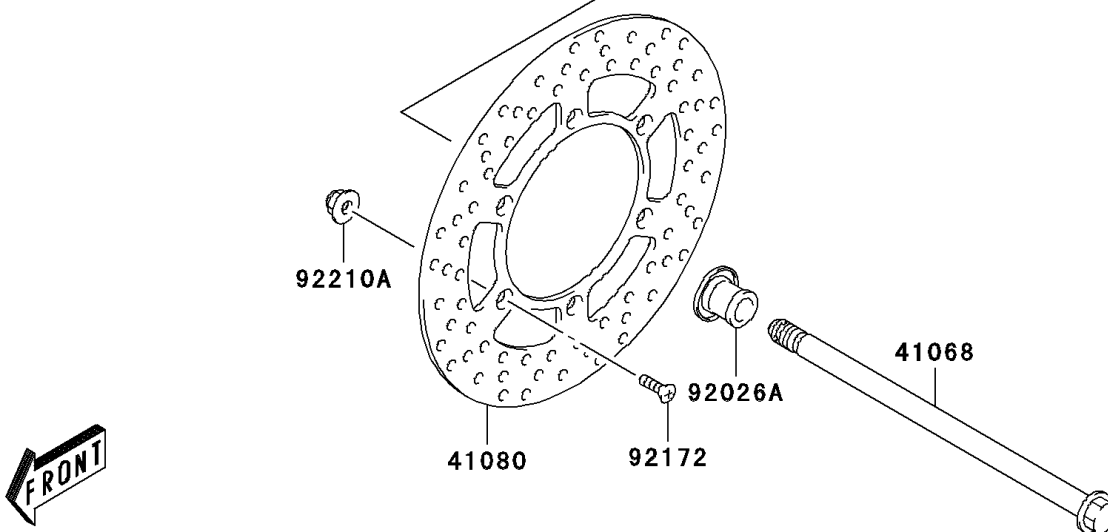

2005 KLX125L

PARTS LIST

Front Hub

ITEM NAME	PART NUMBER	QUANTITY
PIN-HAIR,COTTER (Ref # 39092)	39092-S005	1
TIRE,FR (Ref # 41009)	41009-S007	1
TUBE-TIRE (Ref # 41022)	41022-S003	1
BAND-RIM (Ref # 41023)	41023-S003	1
RIM (Ref # 41025A)	41025-S018	1
SPOKE-ASSY (Ref # 41026A)	41026-S012	1
DRUM-ASSY,FRONT WHEEL (Ref # 41034)	41034-S002	1
AXLE,FR (Ref # 41068)	41068-S005	1
DISC (Ref # 41080)	41080-S004	1
SPACER,FRONT HUB BEARING (Ref # 92026)	92026-S050	1
SPACER,FRONT AXLE (Ref # 92026A)	92026-S051	2
BEARING-BALL,FRONT HUB (Ref # 92045)	92045-S002	2
SCREW (Ref # 92172)	92172-S109	3
WASHER (Ref # 92200)	92200-S079	1
NUT (Ref # 92210)	92210-S064	1
NUT (Ref # 92210A)	92210-S066	3