


Front Hub

Let the Good Times Roll®

This diagram illustrates the assembly of a motorcycle wheel. The main components shown are the tire (41009), the rim (41025), the spokes (41034), the hub (41023), and the axle (41026). The tire is mounted on the rim, and the spokes are attached to the hub and the rim. The axle is shown passing through the hub and the rim. Various fasteners and components are labeled with callouts: 39092 (a small pin), 92210 (a nut), 92200 (a washer), 92026A (a hub nut), 92045 (a hub washer), 41026 (the axle), 41023 (the hub), 41022 (the tire), 92026 (a rim nut), and 92045 (a rim washer).

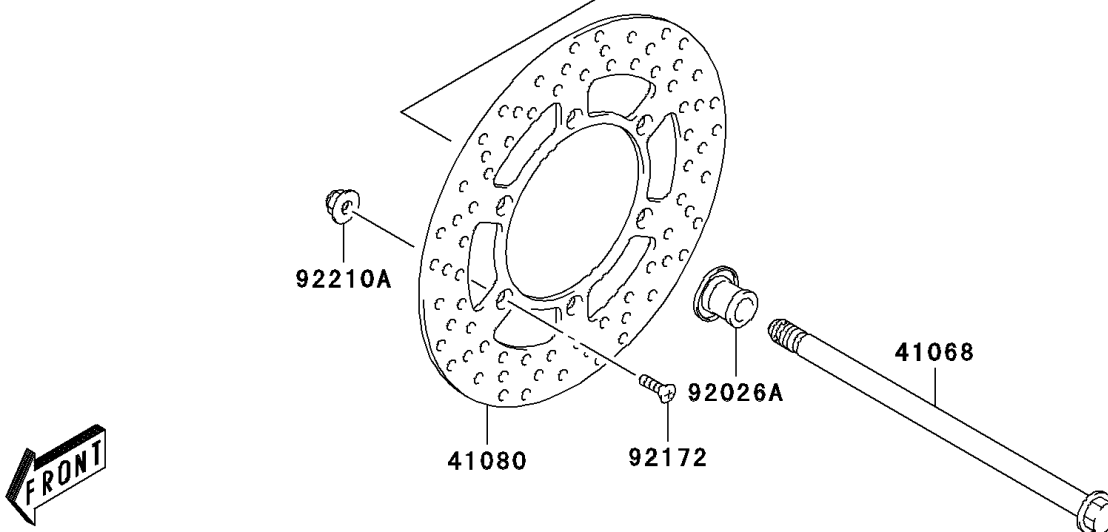

2006 KLX125L

PARTS LIST

Front Hub

ITEM NAME	PART NUMBER	QUANTITY
PIN-HAIR,COTTER (Ref # 39092)	39092-S005	1
TIRE,FR (Ref # 41009)	41009-S007	1
TUBE-TIRE (Ref # 41022)	41022-S003	1
BAND-RIM (Ref # 41023)	41023-S003	1
RIM (Ref # 41025)	41025-S018	1
SPOKE-ASSY (Ref # 41026)	41026-S012	1
DRUM-ASSY,FRONT WHEEL (Ref # 41034)	41034-S002	1
AXLE,FR (Ref # 41068)	41068-S005	1
DISC (Ref # 41080)	41080-S004	1
SPACER,FRONT HUB BEARING (Ref # 92026)	92026-S050	1
SPACER,FRONT AXLE (Ref # 92026A)	92026-S051	2
BEARING-BALL,FRONT HUB (Ref # 92045)	92045-S002	2
SCREW (Ref # 92172)	92172-S109	3
WASHER (Ref # 92200)	92200-S079	1
NUT (Ref # 92210)	92210-S064	1
NUT (Ref # 92210A)	92210-S066	3