


2001 Prairie 300

PARTS DIAGRAM

Ignition Switch

Kawasaki

Let the Good Times Roll®

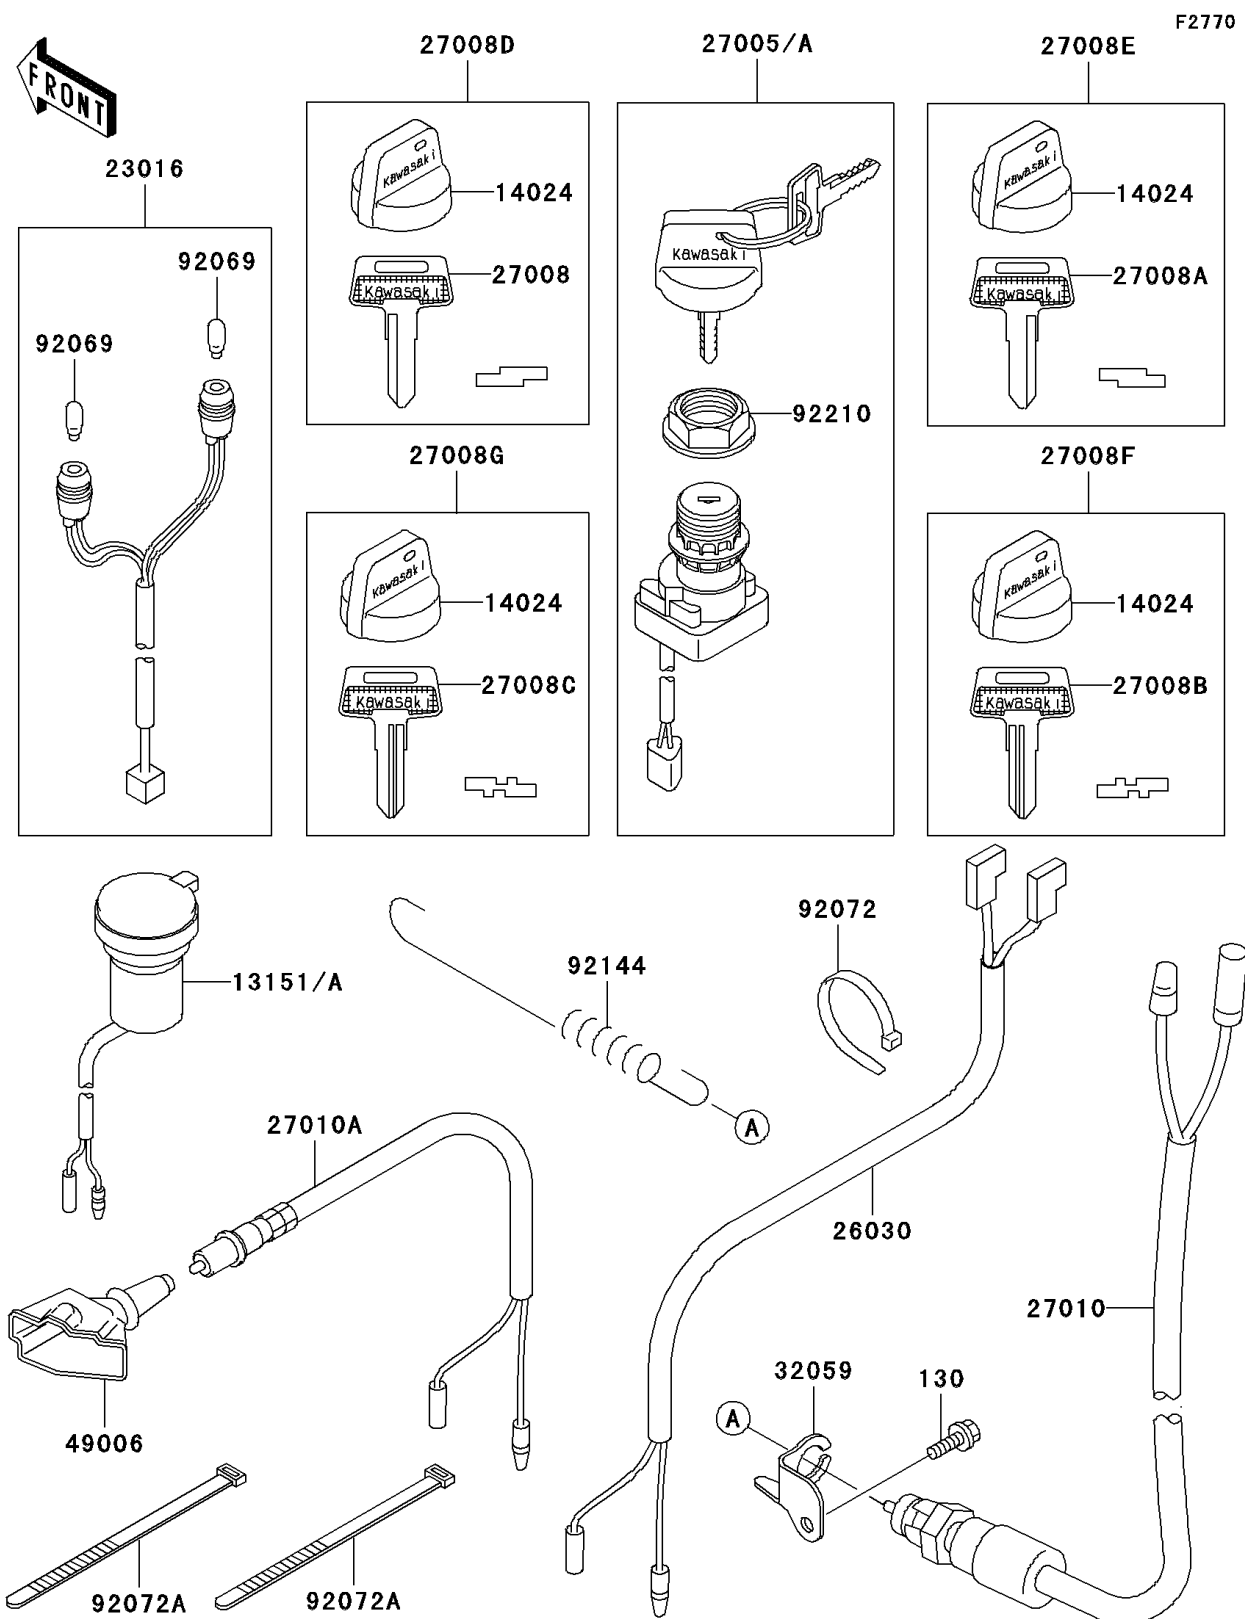

2001 Prairie 300

PARTS LIST

Ignition Switch

ITEM NAME	PART NUMBER	QUANTITY
BOLT-FLANGED,6X10 (Ref # 130)	130J0610	1
SWITCH-COMP,D.C.TERMINAL (Ref # 13151A)	13151-1094	1
COVER,KEY (Ref # 14024)	14024-1551	4
LAMP-ASSY,NEUTRAL&REVERSE (Ref # 23016)	23016-1083	1
HARNESS (Ref # 26030)	26030-1058	1
SWITCH-ASSY-IGNITION (Ref # 27005A)	27005-1229	1
KEY-LOCK,BLANK (Ref # 27008)	27008-1041	1
KEY-LOCK,BLANK (Ref # 27008A)	27008-1042	1
KEY-LOCK,BLANK (Ref # 27008B)	27008-1043	1
KEY-LOCK,BLANK (Ref # 27008C)	27008-1044	1
KEY-LOCK,BLANK,W/COVER (Ref # 27008D)	27008-1132	1
KEY-LOCK,BLANK,W/COVER (Ref # 27008E)	27008-1133	1
KEY-LOCK,BLANK,W/COVER (Ref # 27008F)	27008-1134	1
KEY-LOCK,BLANK,W/COVER (Ref # 27008G)	27008-1135	1
SWITCH,BRAKE LAMP (Ref # 27010)	27010-025	1
SWITCH,BRAKE (Ref # 27010A)	27010-1294	1
BRACKET-SWITCH,REAR BRAKE (Ref # 32059)	32059-1136	1
BOOT (Ref # 49006)	49006-1261	1
BULB,12V 3W,T7 (Ref # 92069)	92069-1020	2
BAND,L=149 (Ref # 92072)	92072-031	1
BAND,L=186 (Ref # 92072A)	92072-056	2
SPRING,BRAKE LAMP SWITCH (Ref # 92144)	92144-1343	1
NUT,IGNITION SWITCH (Ref # 92210)	92210-1109	1