

PARTS DIAGRAM

Fuel Evaporative System(ALF)(CA)

Let the Good Times Roll®

Exploded view diagram of the front suspension assembly, showing the front frame, control arms, steering knuckle, and various suspension components with their part numbers.

Front View: Indicated by an arrow pointing left.

Key Components and Part Numbers:

- Ref. Frame:** Reference frame components.
- 130:** Upper control arm.
- 130A:** Upper control arm bracket.
- 16164:** Coil spring.
- 92072:** Coil spring plate.
- 92161:** Coil spring spacer.
- 92171B:** Coil spring pin.
- 92192B:** Coil spring pin.
- 92170:** Coil spring pin.
- 92075:** Coil spring pin.
- 49019:** Coil spring pin.
- 92192:** Coil spring pin.
- 11057A:** Control arm bracket.
- 92037:** Control arm bracket.
- 11057B:** Control arm bracket.
- 49019:** Control arm pin.
- 92075:** Control arm pin.
- 92170:** Control arm pin.
- 92192C:** Control arm pin.
- 92037A:** Control arm pin.
- 92171A:** Control arm pin.
- 92171:** Control arm pin.
- 11057:** Control arm bracket.
- 92154:** Control arm bracket.
- 16126:** Control arm bracket.
- 92015:** Control arm bracket.
- 92192D:** Control arm pin.
- 92037A:** Control arm pin.
- 92192A:** Control arm pin.
- 92171B:** Control arm pin.
- 92171A:** Control arm pin.
- 92037A:** Control arm pin.

2020 MULE PRO-FXT™

PARTS LIST

Fuel Evaporative System(ALF)(CA)



ITEM NAME	PART NUMBER	QUANTITY
-----------	-------------	----------