

Engine Cover(s)

Let the Good Times Roll®

Exploded view diagram of the front crankcase assembly. The diagram shows the following components and their assembly relationships:

- 14091A**: Front crankcase cover, shown with **132** (screws) and **551** (pins).
- 92055A**: Oil seal, shown between the cover and the crankcase.
- 32190**: Front crankcase, shown with **551A** (pins) and **92153** (bolts).
- 92153** and **411A**: Bolts and washers used for securing the crankcase.
- Ref. Crankcase**: Reference to the main crankcase assembly.

A "FRONT" arrow indicates the orientation of the assembly.



2007 Ultra LX

PARTS LIST

Engine Cover(s)



ITEM NAME	PART NUMBER	QUANTITY
-----------	-------------	----------