


# 2020 MULE 4000 TRANS™

## PARTS DIAGRAM

### Driven Converter/Drive Belt

E1392

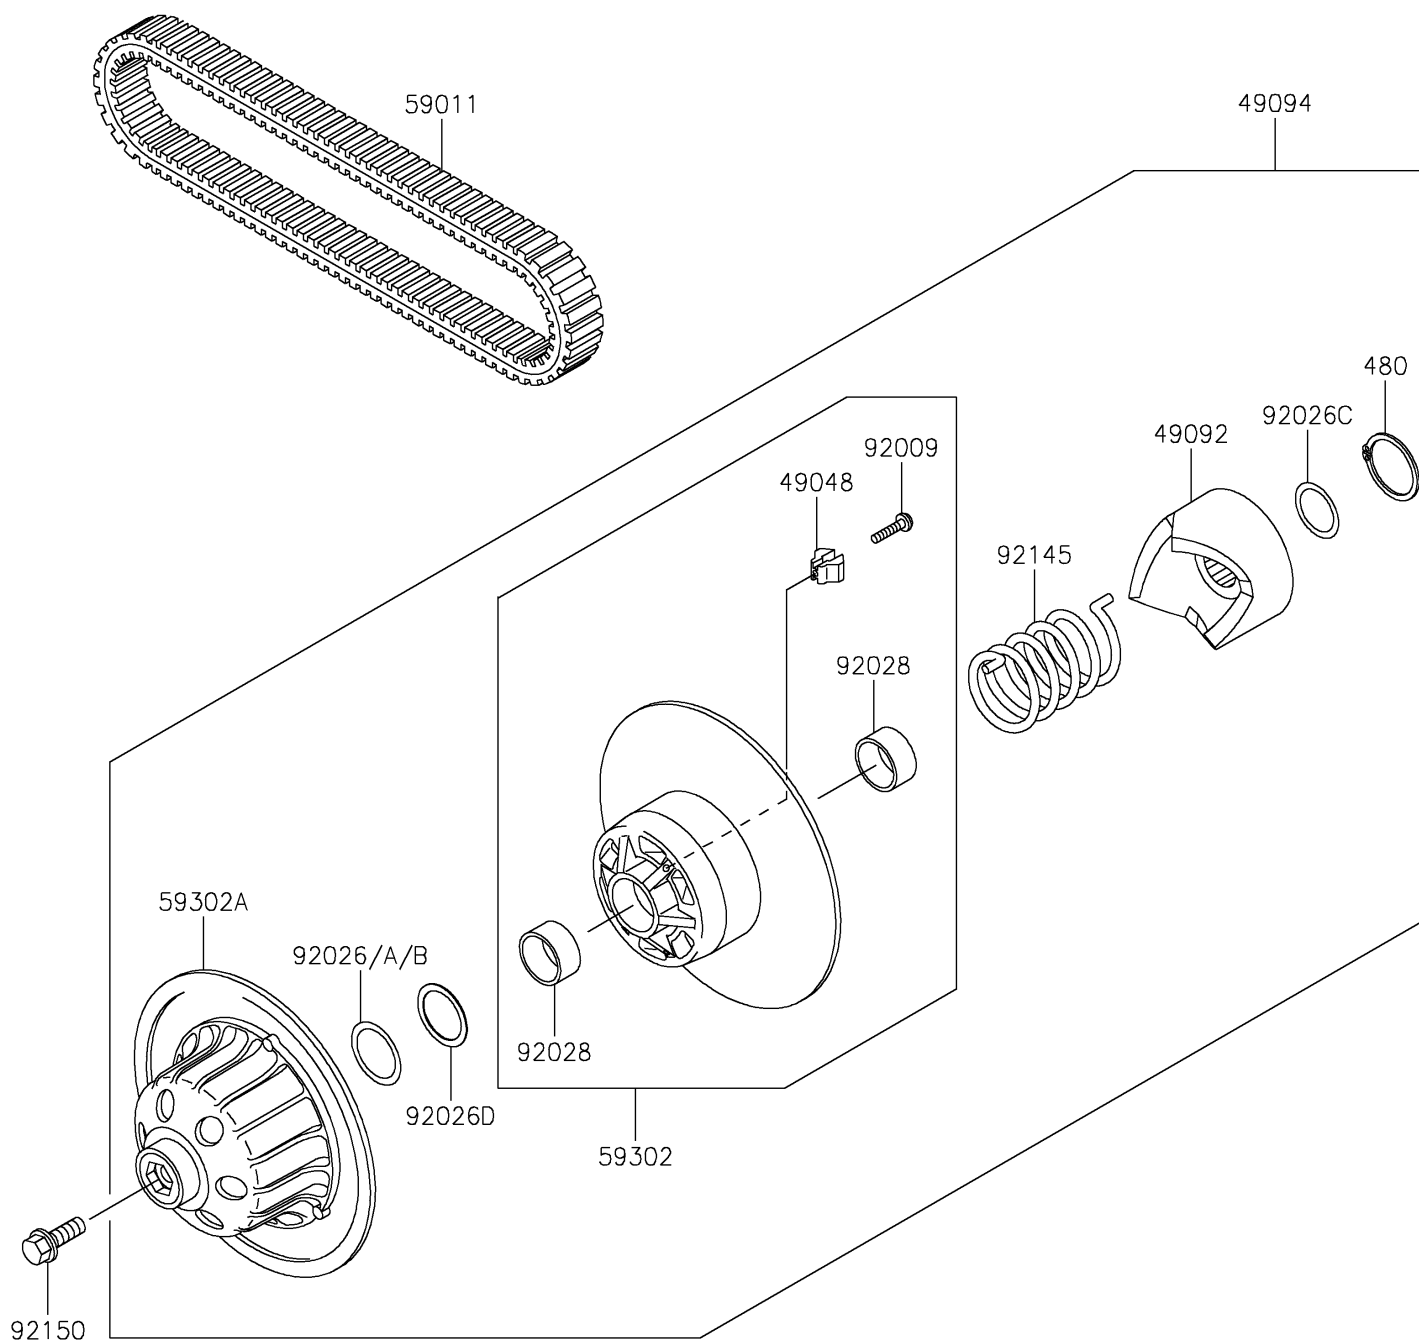

# 2020 MULE 4000 TRANS™

## PARTS LIST

### Driven Converter/Drive Belt

| ITEM NAME                           | PART NUMBER | QUANTITY |
|-------------------------------------|-------------|----------|
| SHOE (Ref # 49048)                  | 49048-1060  | 3        |
| RAMP (Ref # 49092)                  | 49092-1068  | 1        |
| CONVERTER-ASSY-DRIVEN (Ref # 49094) | 49094-0045  | 1        |
| BELT, CONVERTER (Ref # 59011)       | 59011-1077  | 1        |
| SHEAVE-COMP, MOVABLE (Ref # 59302)  | 59302-0031  | 1        |
| SHEAVE-COMP (Ref # 59302A)          | 59302-0032  | 1        |
| SCREW, SHOE (Ref # 92009)           | 92009-1849  | 3        |
| SPACER, 39X50X0.50 (Ref # 92026)    | 92026-1507  | AR       |
| SPACER, 39X50X0.60 (Ref # 92026A)   | 92026-1508  | AR       |
| SPACER, 39X50X0.80 (Ref # 92026B)   | 92026-1510  | AR       |
| SPACER, 34X44X0.80 (Ref # 92026C)   | 92026-1521  | 1        |
| SPACER, 39X49.5X1.0 (Ref # 92026D)  | 92026-1603  | 1        |
| BUSHING (Ref # 92028)               | 92028-1864  | 2        |
| SPRING (Ref # 92145)                | 92145-1404  | 1        |
| BOLT, 12X35 (Ref # 92150)           | 92150-1009  | 1        |
| CIRCLIP-TYPE-C, 34MM (Ref # 480)    | 480J3400    | 1        |