

Throttle



PARTS LIST

Throttle

ITEM NAME	PART NUMBER	QUANTITY
BRACKET (Ref # 11056)	11056-7844	1
INSULATOR (Ref # 16073)	16073-0848	4
SENSOR,PRESSURE (Ref # 21176)	21176-0906	2
PIPE-COMP (Ref # 31064)	31064-0686	1
NOZZLE-INJECTION (Ref # 49033)	49033-0564	4
PIPE-INJECTION (Ref # 49056)	49056-0046	2
TUBE-ASSY,FUEL (Ref # 51044)	51044-0859	1
JOINT (Ref # 59071)	59071-0022	1
RING-O,INJECTION NOZZLE (Ref # 92055)	92055-0124	4
RING-O (Ref # 92055A)	92055-0761	2
RING-O (Ref # 92055B)	92055-0840	4
SPRING,THROTTLE STOP SCREW (Ref # 92144)	92144-1674	4
DAMPER (Ref # 92161)	92161-0673	2
SCREW (Ref # 92172)	92172-0156	4
SCREW,PIPE INJECTION (Ref # 92172A)	92172-0828	4
TUBE,3.2X7.4X30 (Ref # 92191)	92191-1550	1
TUBE,3.2X7.4X35 (Ref # 92192)	92192-1234	2
TUBE,3.2X7.4X85 (Ref # 92192G)	92192-1616	2
TUBE,3.2X7.4X45 (Ref # 92192H)	92192-1617	2
TUBE,3.2X7.4X200 (Ref # 92192I)	92192-1618	1
TUBE (Ref # 92192J)	92192-2610	1
WASHER,PILOT AIR SCREW (Ref # 92200)	92200-1564	4
WASHER (Ref # 92200A)	92200-3807	4
SCREW-PAN-CROS,5X10 (Ref # 220)	220AA0510	2