

Generator

Exploded view diagram of the engine assembly. The diagram shows the following components and their reference labels:

- Ref. Radiator**: Points to the radiator assembly at the top left.
- 21119**: Points to the main engine block.
- 92150**: Points to a bolt on the side of the engine block.
- Ref. Ignition System**: Points to the ignition coil and associated wiring.
- Ref. Cylinder Head /Cylinder**: Points to the cylinder head assembly on the right.
- 92171**: Points to a bolt on the cylinder head.
- Ref. Crankshaft /Piston(s)**: Points to the crankshaft and piston assembly at the bottom right.
- 92038**: Points to a pin or clip near the crankshaft.
- 21007**: Points to the front flange of the crankshaft.
- 92015**: Points to a bolt on the front flange.
- 21003**: Points to the main bearing cap.
- 224**: Points to multiple bolts securing the main bearing cap.
- FRONT**: A label with an arrow pointing left, indicating the front of the engine.

2022 KX™ 85

PARTS LIST

Generator

ITEM NAME	PART NUMBER	QUANTITY
STATOR (Ref # 21003)	21003-0219	1
ROTOR,I=4.0 (Ref # 21007)	21007-0073	1
IGNITER (Ref # 21119)	21119-0587	1
NUT,FLANGED,10MM (Ref # 92015)	92015-077	1
KEY,WOODRUFF (Ref # 92038)	92038-001	1
BOLT,FLANGED,6X16 (Ref # 92150)	92150-1506	2
CLAMP,L=60 (Ref # 92171)	92171-0652	1
SCREW-PAN-WP-CROS,6X14 (Ref # 224)	224AA0614	3