


1998 Ninja® ZX™ -11

PARTS DIAGRAM

Chassis Electrical Equipment

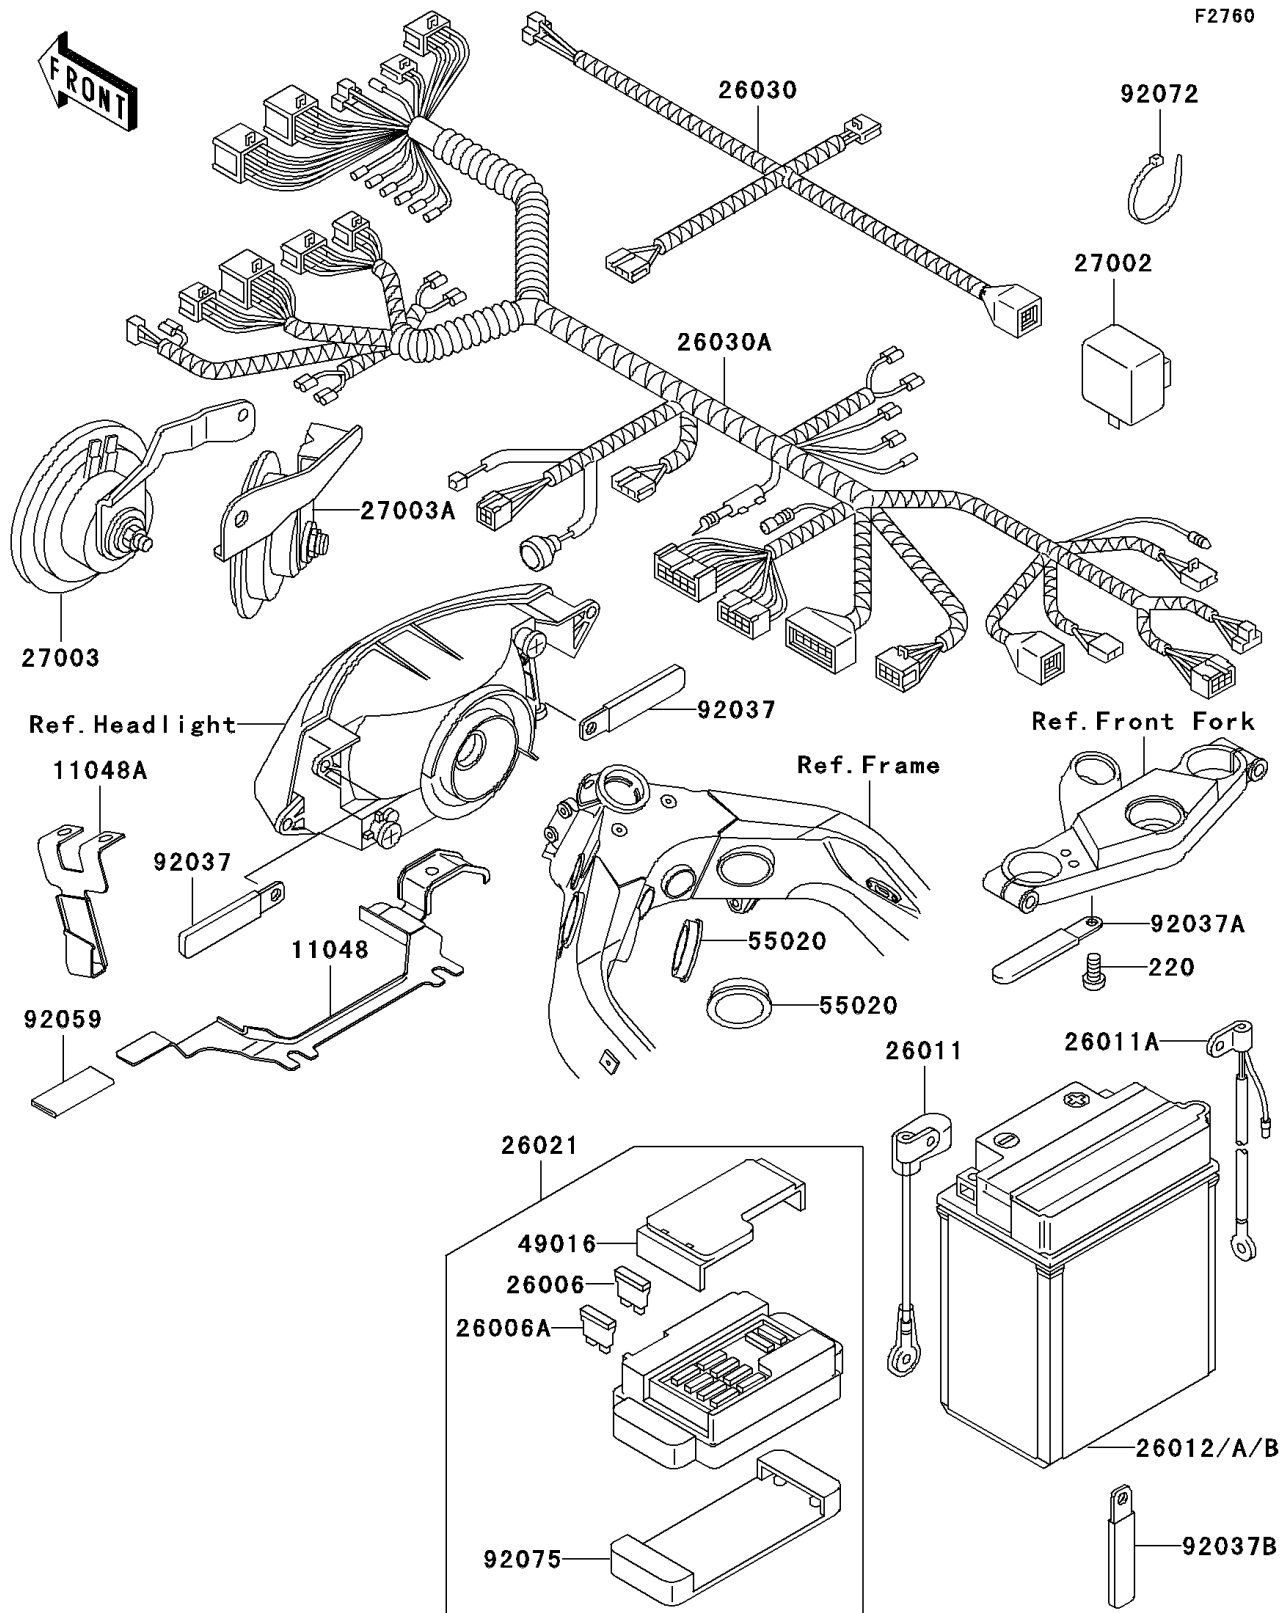

1998 Ninja® ZX™ -11

PARTS LIST

Chassis Electrical Equipment

ITEM NAME	PART NUMBER	QUANTITY
SCREW-PAN-CROS (Ref # 220)	220C0510	1
BRACKET,CLAMP (Ref # 11048)	11048-1193	1
BRACKET,RELAY (Ref # 11048A)	11048-1241	1
FUSE,30A-G (Ref # 26006)	26006-1067	1
FUSE,10A-R (Ref # 26006A)	26006-1068	8
WIRE-LEAD,BATTERY(-) (Ref # 26011)	26011-1563	1
WIRE-LEAD,BATTERY(+) (Ref # 26011A)	26011-1564	1
JUNCTION BOX (Ref # 26021)	26021-1089	1
HARNESS,FR (Ref # 26030)	26030-1006	1
HARNESS,MAIN (Ref # 26030A)	26030-1322	1
RELAY-ASSY,SIGNAL LAMP (Ref # 27002)	27002-1092	1
HORN,LH (Ref # 27003)	27003-1320	1
HORN,RH (Ref # 27003A)	27003-1363	1
COVER-SEAL,FUSE (Ref # 49016)	49016-1177	1
GUARD,HARNESS (Ref # 55020)	55020-1481	2
CLAMP,WIRING HARNESS,L=60 (Ref # 92037)	92037-1069	2
CLAMP,L=45 (Ref # 92037A)	92037-1539	1
CLAMP (Ref # 92037B)	92037-1993	2
TUBE,11X12X40 (Ref # 92059)	92059-1637	1
BAND,L=185 (Ref # 92072)	92072-1195	6
DAMPER,JUNCTION BOX (Ref # 92075)	92075-1688	1
BATTERY,YTX14-BS,12V 12AH (Ref # 26012A)	26012-1302	1
BATTERY,YTX14-BS,12V 12AH (Ref # 26012B)	26012-1334	1