


2026 ELIMINATOR® SE ABS

PARTS DIAGRAM

Clutch

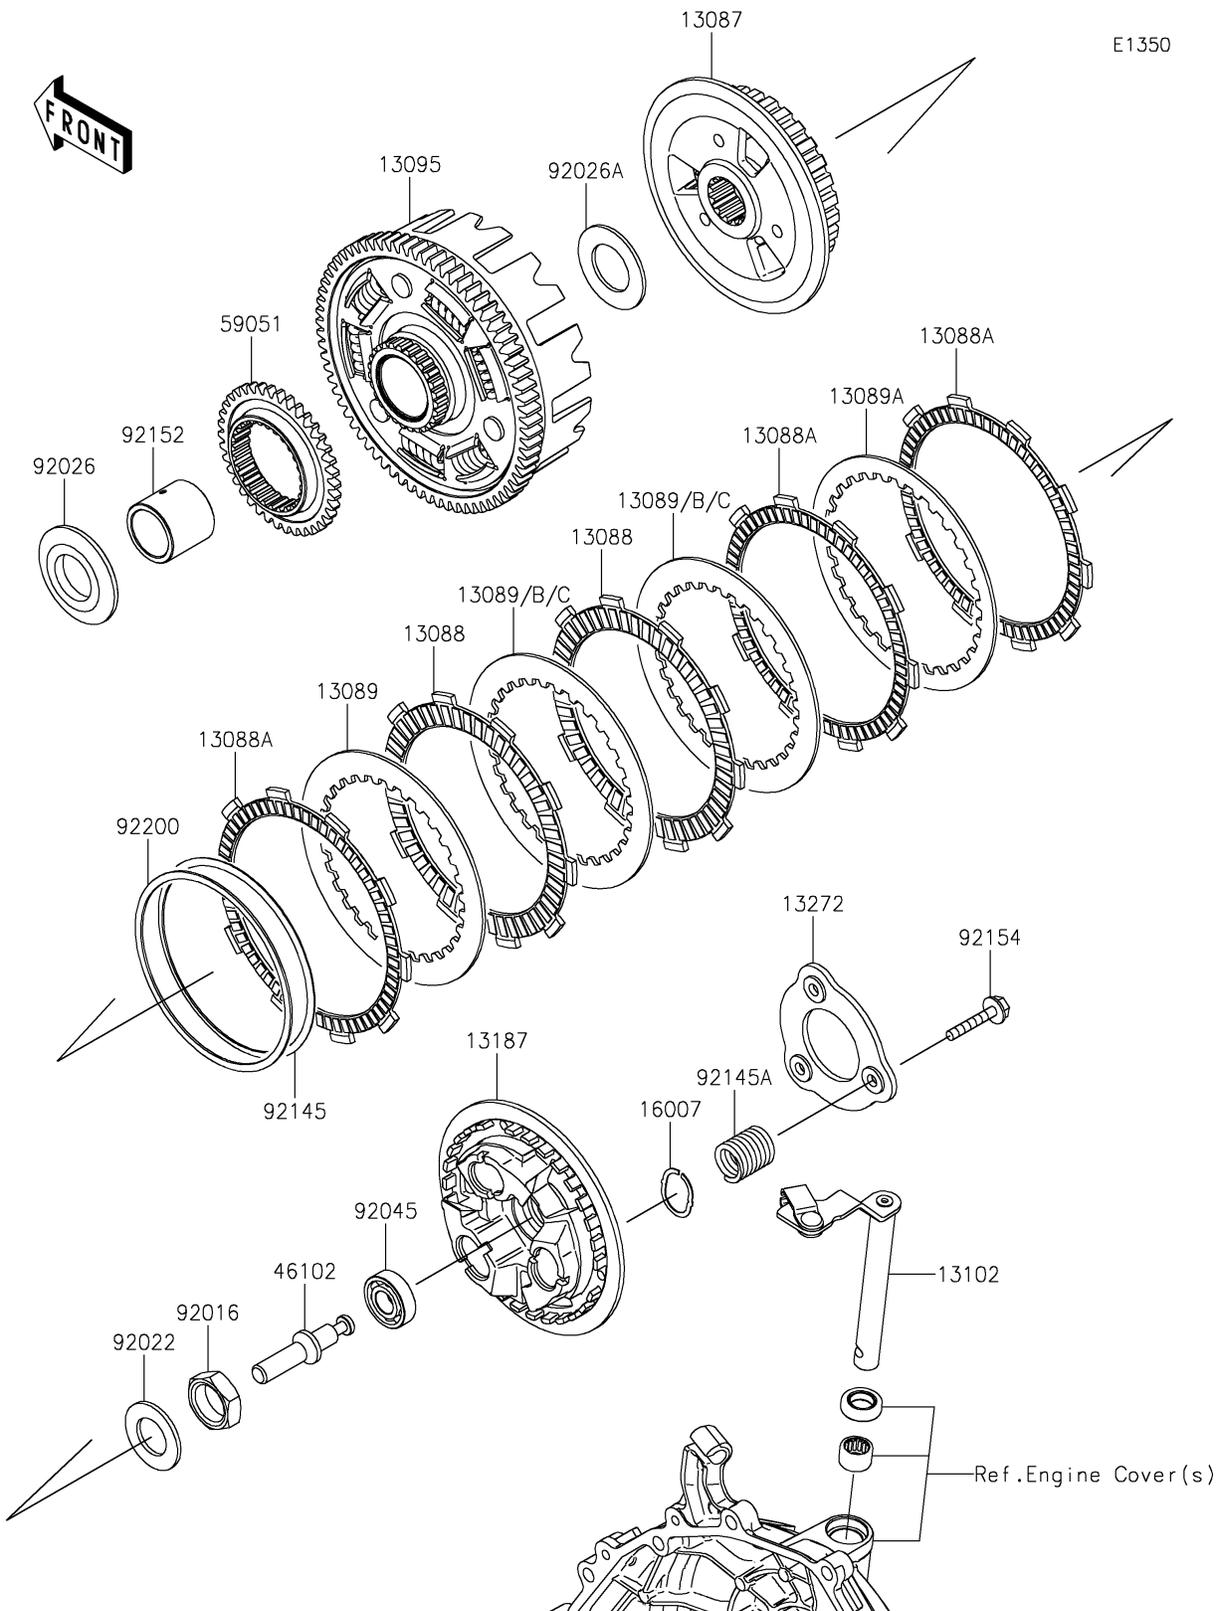

2026 ELIMINATOR® SE ABS

PARTS LIST

Clutch

ITEM NAME	PART NUMBER	QUANTITY
HUB-CLUTCH (Ref # 13087)	13087-0585	1
PLATE-FRICTION (Ref # 13088)	13088-0592	2
PLATE-FRICTION (Ref # 13088A)	13088-0630	3
PLATE-CLUTCH,T=2.0 (Ref # 13089)	13089-0041	3
PLATE-CLUTCH,T=2.0 (Ref # 13089A)	13089-0042	1
PLATE-CLUTCH,T=1.6 (Ref # 13089B)	13089-0043	AR
PLATE-CLUTCH,T=2.3 (Ref # 13089C)	13089-0044	AR
HOUSING-COMP-CLUTCH (Ref # 13095)	13095-0618	1
RELEASE-COMP-CLUTCH (Ref # 13102)	13102-0087	1
PLATE-CLUTCH OPERATING (Ref # 13187)	13187-0033	1
PLATE (Ref # 13272)	13272-2414	1
SEAT-SPRING (Ref # 16007)	16007-0711	3
ROD (Ref # 46102)	46102-0648	1
GEAR-SPUR,OIL PUMP,38T (Ref # 59051)	59051-0796	1
NUT,20MM (Ref # 92016)	92016-028	1
WASHER,20.3X36X2.3 (Ref # 92022)	92022-1116	1
SPACER,25X52X5.5 (Ref # 92026)	92026-0115	1
SPACER,25.5X44.5X2 (Ref # 92026A)	92026-0734	1
BEARING-BALL (Ref # 92045)	92045-0937	1
SPRING,JUDDER (Ref # 92145)	92145-1829	1
SPRING (Ref # 92145A)	92145-2273	3
COLLAR,25X32X29.1 (Ref # 92152)	92152-2524	1
BOLT,UPSET,6X30 (Ref # 92154)	92154-0997	3
WASHER,99.4X107X1.2 (Ref # 92200)	92200-1987	1