


2026 ELIMINATOR® SE ABS

PARTS DIAGRAM

Front Fork

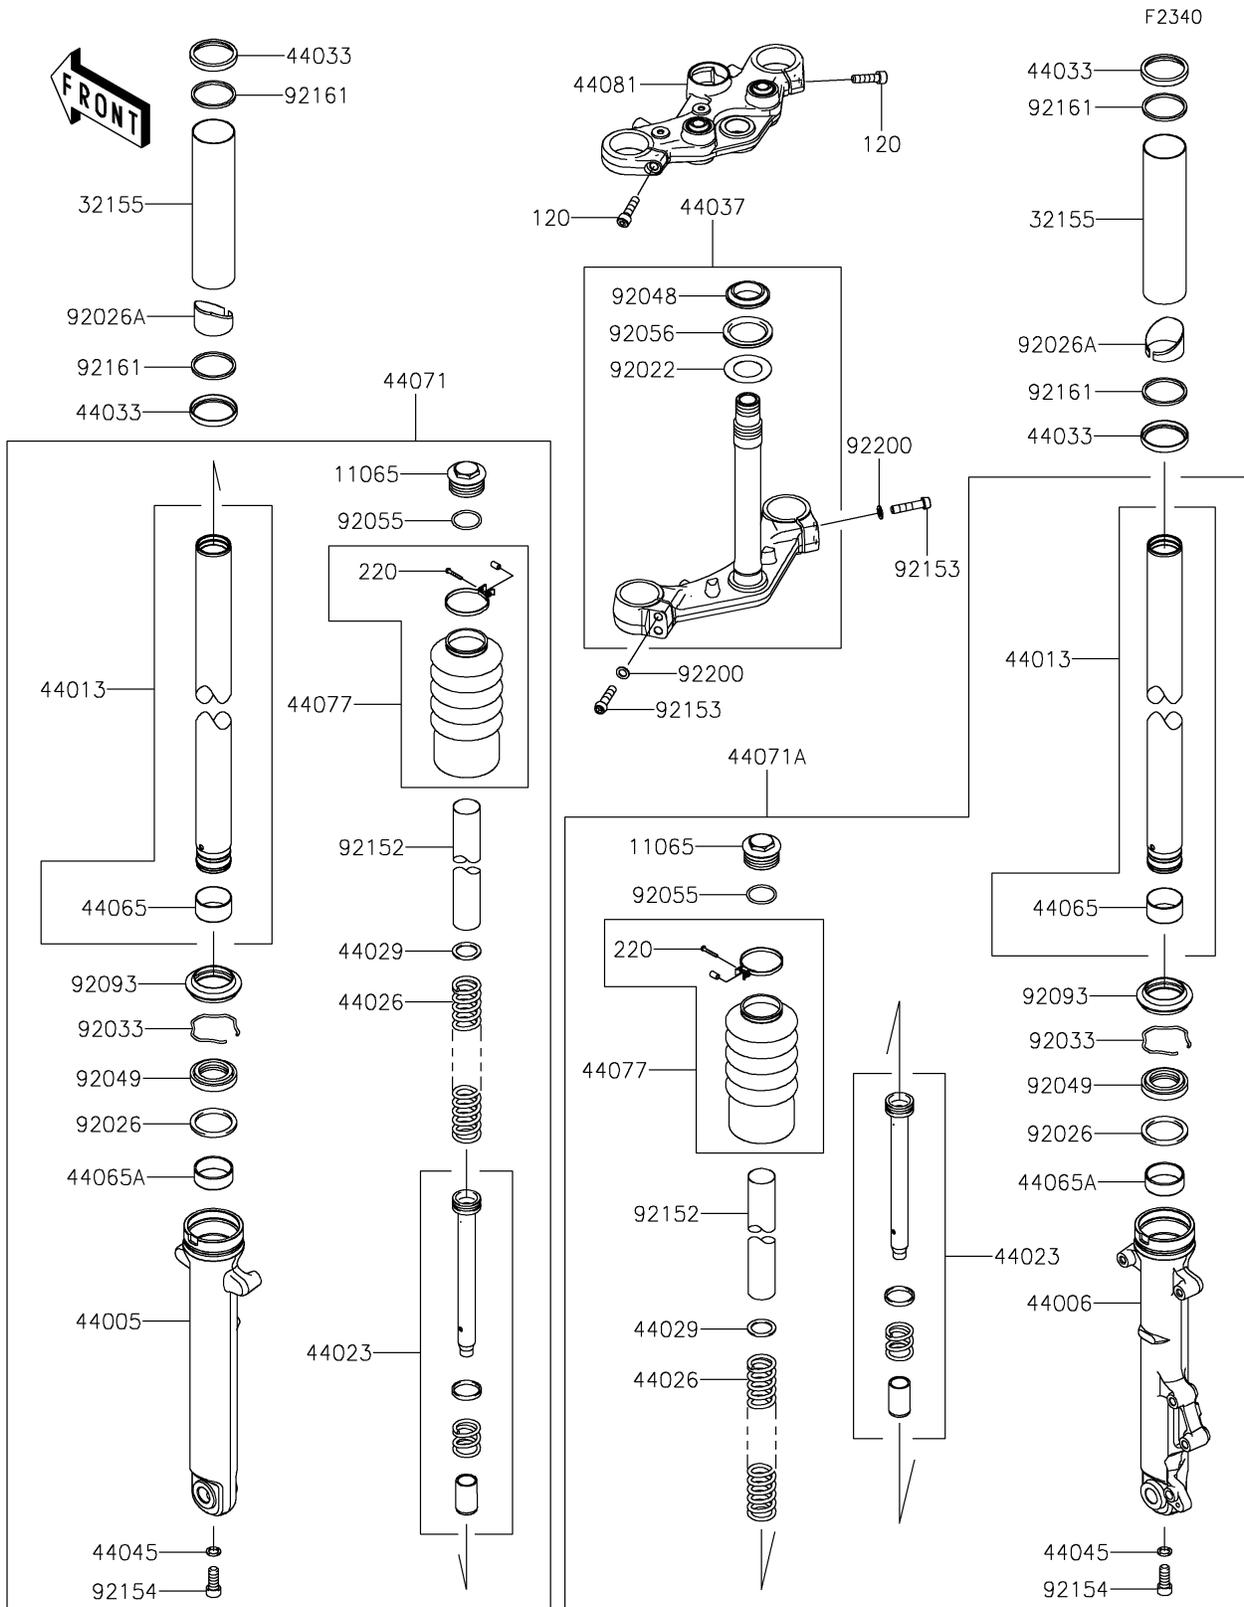

2026 ELIMINATOR® SE ABS

PARTS LIST

Front Fork

ITEM NAME	PART NUMBER	QUANTITY
CAP (Ref # 11065)	11065-1286	2
PIPE,FORK COVER (Ref # 32155)	32155-7470	2
PIPE-LEFT FORK OUTER (Ref # 44005)	44005-0129	1
PIPE-RIGHT FORK OUTER (Ref # 44006)	44006-0132	1
PIPE-FORK INNER (Ref # 44013)	44013-0404	2
CYLINDER-SET-FORK (Ref # 44023)	44023-0194	2
SPRING-FRONT FORK (Ref # 44026)	44026-0297	2
SEAT-FORK SPRING (Ref # 44029)	44029-1131	2
COVER-FORK (Ref # 44033)	44033-0084	4
HOLDER-FORK UNDER (Ref # 44037)	44037-0216	1
GASKET,FORK CYLINDER BOLT (Ref # 44045)	44045-051	2
BUSHING-FRONT FORK (Ref # 44065)	44065-0076	2
BUSHING-FRONT FORK (Ref # 44065A)	44065-0077	2
DAMPER-ASSY,FORK,LH,F.S.BLACK (Ref # 44071)	44071-1592-18R	1
DAMPER-ASSY,FORK,RH,F.S.BLACK (Ref # 44071A)	44071-1593-18R	1
BOOT-ASSY (Ref # 44077)	44077-0003	2
HOLDER-ASSY-FORK UPPER (Ref # 44081)	44081-0131	1
WASHER,30.5X50X0.6 (Ref # 92022)	92022-231	1
SPACER,FORK OUTER (Ref # 92026)	92026-1276	2
SPACER,FORK COVER (Ref # 92026A)	92026-1432	2
RING-SNAP (Ref # 92033)	92033-1222	2
RACE,STEERING STEM BEARING (Ref # 92048)	92048-0048	1
SEAL-OIL (Ref # 92049)	92049-0807	2
RING-O,FORK TOP (Ref # 92055)	92055-1420	2
SEAL-OIL,STEERING STEM (Ref # 92056)	92056-003	1
SEAL,DUST (Ref # 92093)	92093-0717	2
COLLAR (Ref # 92152)	92152-2987	2
BOLT,SOCKET,8X35 (Ref # 92153)	92153-0854	4
BOLT (Ref # 92154)	92154-2551	2

2026 ELIMINATOR[®] SE ABS

PARTS LIST

Front Fork

ITEM NAME	PART NUMBER	QUANTITY
DAMPER,41.4X46.7X3 (Ref # 92161)	92161-2493	4
WASHER,8.5X14X1.2 (Ref # 92200)	92200-2712	4
BOLT-SOCKET,8X30 (Ref # 120)	120CC0830	2
SCREW-PAN-CROSS,3X20 (Ref # 220)	220AB0320	2