

Oil Pump

Let the Good Times Roll®

Exploded view diagram of the crankcase assembly. The diagram shows the main crankcase body (Ref. Crankcase) and various components that attach to it. A "FRONT" arrow points towards the top left.

Components and their assembly order (indicated by numbers):

- 16082: Gear assembly
- 220: Bolt
- 220A: Bolt
- 220: Bolt
- 670: O-ring
- 92043: Pin
- 670: O-ring
- 16097: Bolt
- 11012: Gear assembly
- 92055: O-ring
- 92144: Spring
- 52010: Gear assembly
- 2154: Bolt

The diagram shows the crankcase with various mounting points and holes. Dashed lines indicate the assembly path for the components. The "FRONT" arrow indicates the orientation of the assembly.

2027 KLX110L

PARTS LIST

Oil Pump



ITEM NAME	PART NUMBER	QUANTITY
CAP (Ref # 11012)	11012-1980	1
PUMP-ASSY-OIL (Ref # 16082)	16082-0010	1
FILTER-ASSY-OIL (Ref # 16097)	16097-1071	1
ELEMENT-OIL FILTER (Ref # 52010)	52010-0552	1
PIN,6.2X8X14 (Ref # 92043)	92043-1741	1
RING-O,59.6X2.4 (Ref # 92055)	92055-3018	1
SPRING (Ref # 92144)	92144-1892	1
BOLT,FLANGED,6X20 (Ref # 92154)	92154-7209	2
SCREW-PAN-CROS,6X25 (Ref # 220)	220AA0625	2
SCREW-PAN-CROS,6X30 (Ref # 220A)	220AA0630	1
O RING,9.8X1.9 (Ref # 670)	670B1510	2