

Kawasaki
Let the Good Times Roll®

Transmission

Exploded view diagram of a mechanical assembly. The diagram shows various components labeled with part numbers, including gears, shafts, bearings, and seals. A "FRONT" arrow indicates the orientation. The components are arranged in a hierarchical manner, showing their relative positions and assembly sequence.

Key components and part numbers visible in the diagram include:

- 13107A (Shaft)
- 13107B (Shaft)
- 13107C (Shaft)
- 13107D (Shaft)
- 13107E (Shaft)
- 13139 (Gear)
- 13262 (Gear)
- 13262A (Gear)
- 13262B (Gear)
- 13262C (Gear)
- 13262D (Gear)
- 13262E (Gear)
- 59057A (Gear)
- 59057 (Gear)
- 92200 (Seal)
- 92046 (Seal)
- 92046A (Seal)
- 92046B (Seal)
- 92046C (Seal)
- 92026 (Seal)
- 92026A (Seal)
- 92026B (Seal)
- 92026C (Seal)
- 92026D (Seal)
- 92145 (Seal)
- 92152/A~E (Seal)
- 92116 (Seal)
- 480 (Seal)
- 480A (Seal)
- 480B (Seal)
- 480C (Seal)

2026 MULE PRO-FXT™ 1000 PLATINUM RANCH EDITION



PARTS LIST

Transmission

ITEM NAME	PART NUMBER	QUANTITY
-----------	-------------	----------