

Cylinder Head Cover

Let the Good Times Roll®

Exploded view diagram of a Honda engine cylinder head assembly. The diagram shows the following components and their assembly order:

- Front View:** Indicated by an arrow pointing to the left.
- Top Cover Assembly:**
 - 14091A: Top cover (left side).
 - 14091B: Top cover (right side).
 - 53044: Screws for top cover.
 - 92153: Washers for top cover.
 - 92143: Screws for top cover.
- Cylinder Head Assembly:**
 - 14091: Cylinder head (left side).
 - 14091A: Cylinder head (right side).
 - 14091B: Cylinder head (right side).
 - 130: Screws for cylinder head.
 - 11061: Washers for cylinder head.
 - 11061B: Washers for cylinder head.
 - 11061A: Washers for cylinder head.
 - 11061C: Washers for cylinder head.
 - 132: Screws for cylinder head.
 - 13272A: Screws for cylinder head.
 - 13272: Screws for cylinder head.
 - 13272B: Screws for cylinder head.
 - 13272C: Screws for cylinder head.
 - 13272D: Screws for cylinder head.
 - 13272E: Screws for cylinder head.
 - 13272F: Screws for cylinder head.
 - 13272G: Screws for cylinder head.
 - 13272H: Screws for cylinder head.
 - 13272I: Screws for cylinder head.
 - 13272J: Screws for cylinder head.
 - 13272K: Screws for cylinder head.
 - 13272L: Screws for cylinder head.
 - 13272M: Screws for cylinder head.
 - 13272N: Screws for cylinder head.
 - 13272O: Screws for cylinder head.
 - 13272P: Screws for cylinder head.
 - 13272Q: Screws for cylinder head.
 - 13272R: Screws for cylinder head.
 - 13272S: Screws for cylinder head.
 - 13272T: Screws for cylinder head.
 - 13272U: Screws for cylinder head.
 - 13272V: Screws for cylinder head.
 - 13272W: Screws for cylinder head.
 - 13272X: Screws for cylinder head.
 - 13272Y: Screws for cylinder head.
 - 13272Z: Screws for cylinder head.
- Bottom Cover Assembly:**
 - 14091C: Bottom cover (left side).
 - 14091D: Bottom cover (right side).
 - 53044: Screws for bottom cover.
 - 92153: Washers for bottom cover.
 - 92143: Screws for bottom cover.
- Assembly Order:**
 - 1. Remove the top cover (14091A/B).
 - 2. Remove the cylinder head (14091).
 - 3. Remove the bottom cover (14091C/D).
 - 4. Remove the cylinder head (14091).
 - 5. Remove the top cover (14091A/B).

2010 Vulcan® 1700 Classic LT

PARTS LIST

Cylinder Head Cover

ITEM NAME	PART NUMBER	QUANTITY
BOLT-FLANGED,6X20 (Ref # 130)	130BA0620	8
BOLT-FLANGED-SMALL,6X30 (Ref # 132)	132BC0630	3
PIN-DOWEL (Ref # 551)	551A0412	2
O RING (Ref # 670)	670D2018	1
GASKET (Ref # 11061)	11061-0107	8
GASKET,HEAD COVER (Ref # 11061A)	11061-0331	2
GASKET,ROCKER CASE COVER (Ref # 11061B)	11061-0332	2
GASKET,BREATHER COVER (Ref # 11061C)	11061-0334	1
PLATE (Ref # 13272)	13272-0307	1
PLATE (Ref # 13272A)	13272-0711	1
COVER,HEAD,INSIDE (Ref # 14091)	14091-0966	2
COVER,HEAD,OUTSIDE (Ref # 14091A)	14091-0967	2
COVER,HEAD,OUTSIDE (Ref # 14091B)	14091-0968	2
COVER,BREATHER (Ref # 14091C)	14091-0969	1
VALVE (Ref # 16126)	16126-2051	1
TRIM,L=75 (Ref # 53044)	53044-0009	4
COLLAR (Ref # 92143)	92143-1331	7
BOLT,6X16 (Ref # 92153)	92153-0825	7