

# Kawasaki

## Assembly Instructions

Part Number	Description	Model	Approx. Assembly Time
KAF080-033	Floor Mats, Front	MULE PRO	15 minutes


Before you begin installation, read through the installation instructions and check to be sure all parts are present.

If you are in doubt as to any part of the installation, please ask your authorized Kawasaki dealer to complete the installation. Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect installation.

### Parts List:

Ref. #	Description	Qty
A01	Floor Mat, Front Left	1
A02	Floor Mat, Front Right	1
A03	Bushing	2
A04	6 mm x 16 mm Button Head Bolt	2
A05	Plastic Rivet	4

### Parts Diagram:


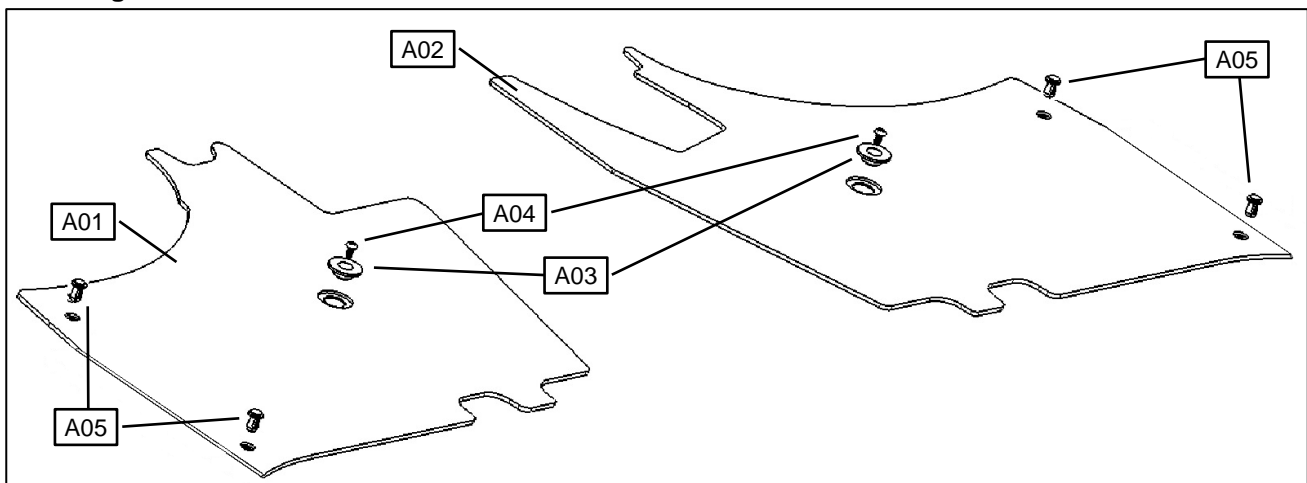


**Installation Instructions:**

1. Park the vehicle on level ground, set the parking brake, turn off the ignition switch.

2. Locate the stock floorboard screw at the location of the center mounting point of the left floor mat. Remove the stock screw and install the the left floor mat (A01) to the floorboard using one bushing (A03) and one 6 mm x 16 mm button head bolt (A04).

3. Use the left floor mat as a template and mark the location of the remaining two mounting points on to the floor board. Drill these two locations with an 8.5 mm (11/32") drill bit. Insert two plastic rivets (A05) through the floor mat and into the floorboard.

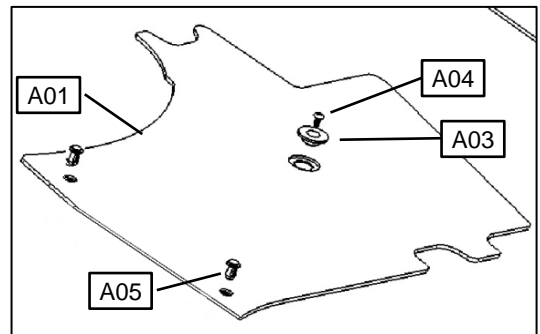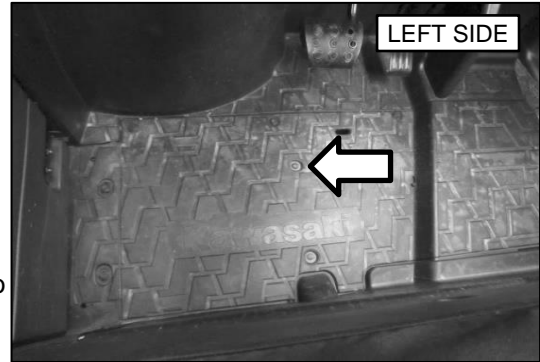

4. Repeat steps 2-3 on the right side.

