


## 2008 KAZE HIT PARTS DIAGRAM

Swingarm/Shock Absorber

F2140

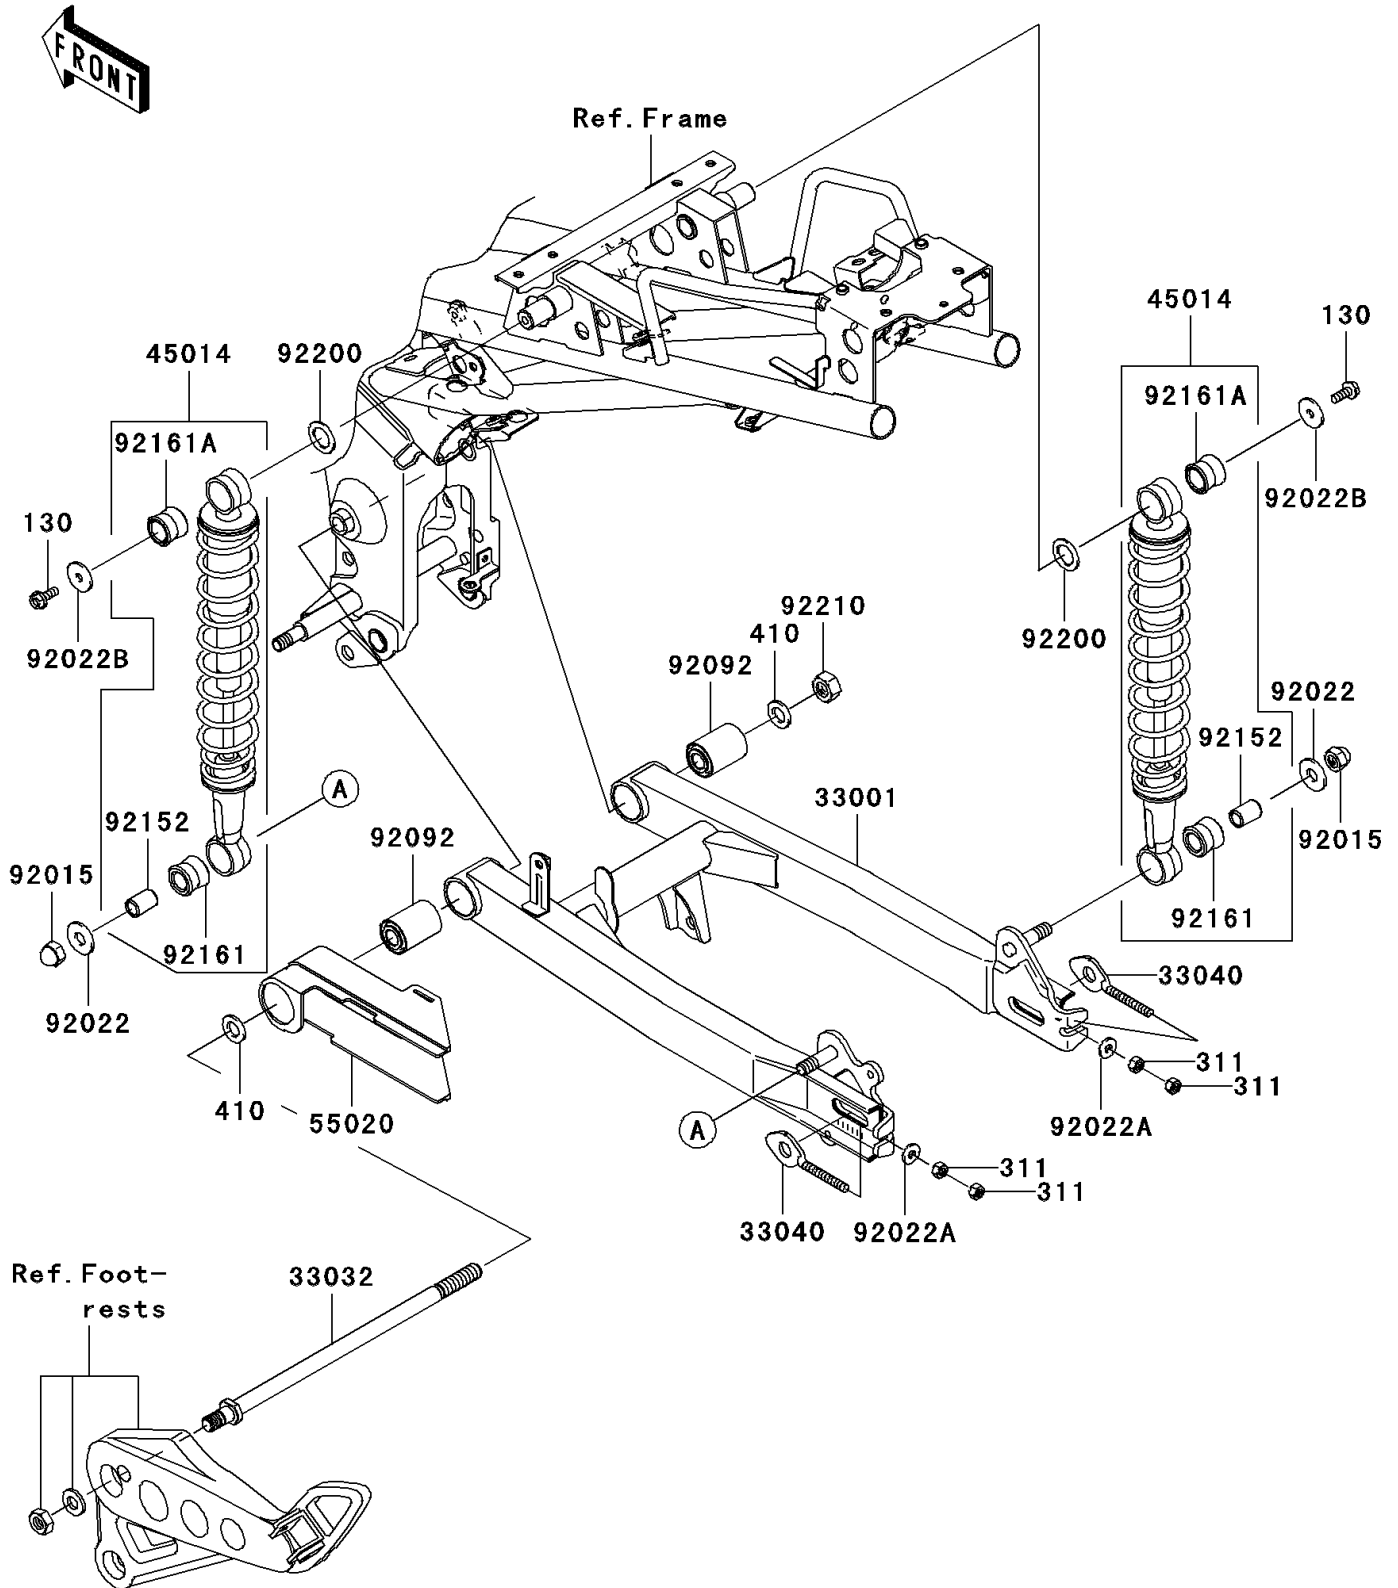

## 2008 KAZE HIT PARTS LIST

Swingarm/Shock Absorber

ITEM NAME	PART NUMBER	QUANTITY
BOLT-FLANGED,6X16 (Ref # 130)	130BA0616	1
NUT-HEX,6MM (Ref # 311)	311AA0600	1
WASHER-PLAIN-SMALL,12MM,BLACK (Ref # 410)	410AB1200	1
ARM-COMP-SWING,SILVER (Ref # 33001)	33001-0022-CE	1
SHAFT-SWING ARM (Ref # 33032)	33032-1184	1
ADJUSTER-CHAIN (Ref # 33040)	33040-1006	1
SHOCKABSORBER (Ref # 45014)	45014-0042	1
GUARD,CHAIN (Ref # 55020)	55020-1770	1
NUT,CAP,10MM (Ref # 92015)	92015-1685	1
WASHER,10.5X26X2.3 (Ref # 92022)	92022-044	1
WASHER,6.5X16X2 (Ref # 92022A)	92022-1565	1
WASHER,6.5X24X2 (Ref # 92022B)	92022-1690	1
BUSHING-RUBBER (Ref # 92092)	92092-1089	1
COLLAR (Ref # 92152)	92152-0086	1
DAMPER,SHOCKABSORBER (Ref # 92161)	92161-1262	1
DAMPER,SHOCKABSORBER (Ref # 92161A)	92161-1263	1
WASHER,17X26X1.6 (Ref # 92200)	92200-1607	1
NUT,SWING ARM SHAFT,M12 P1.25 (Ref # 92210)	92210-1085	1