
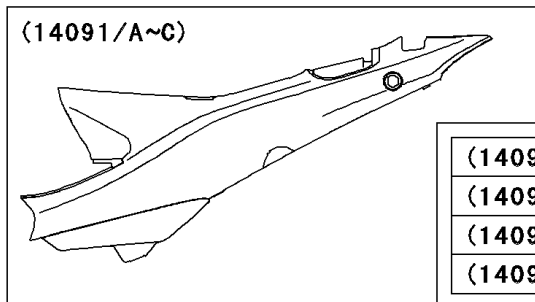



2008 KAZE HIT PARTS DIAGRAM

Seat

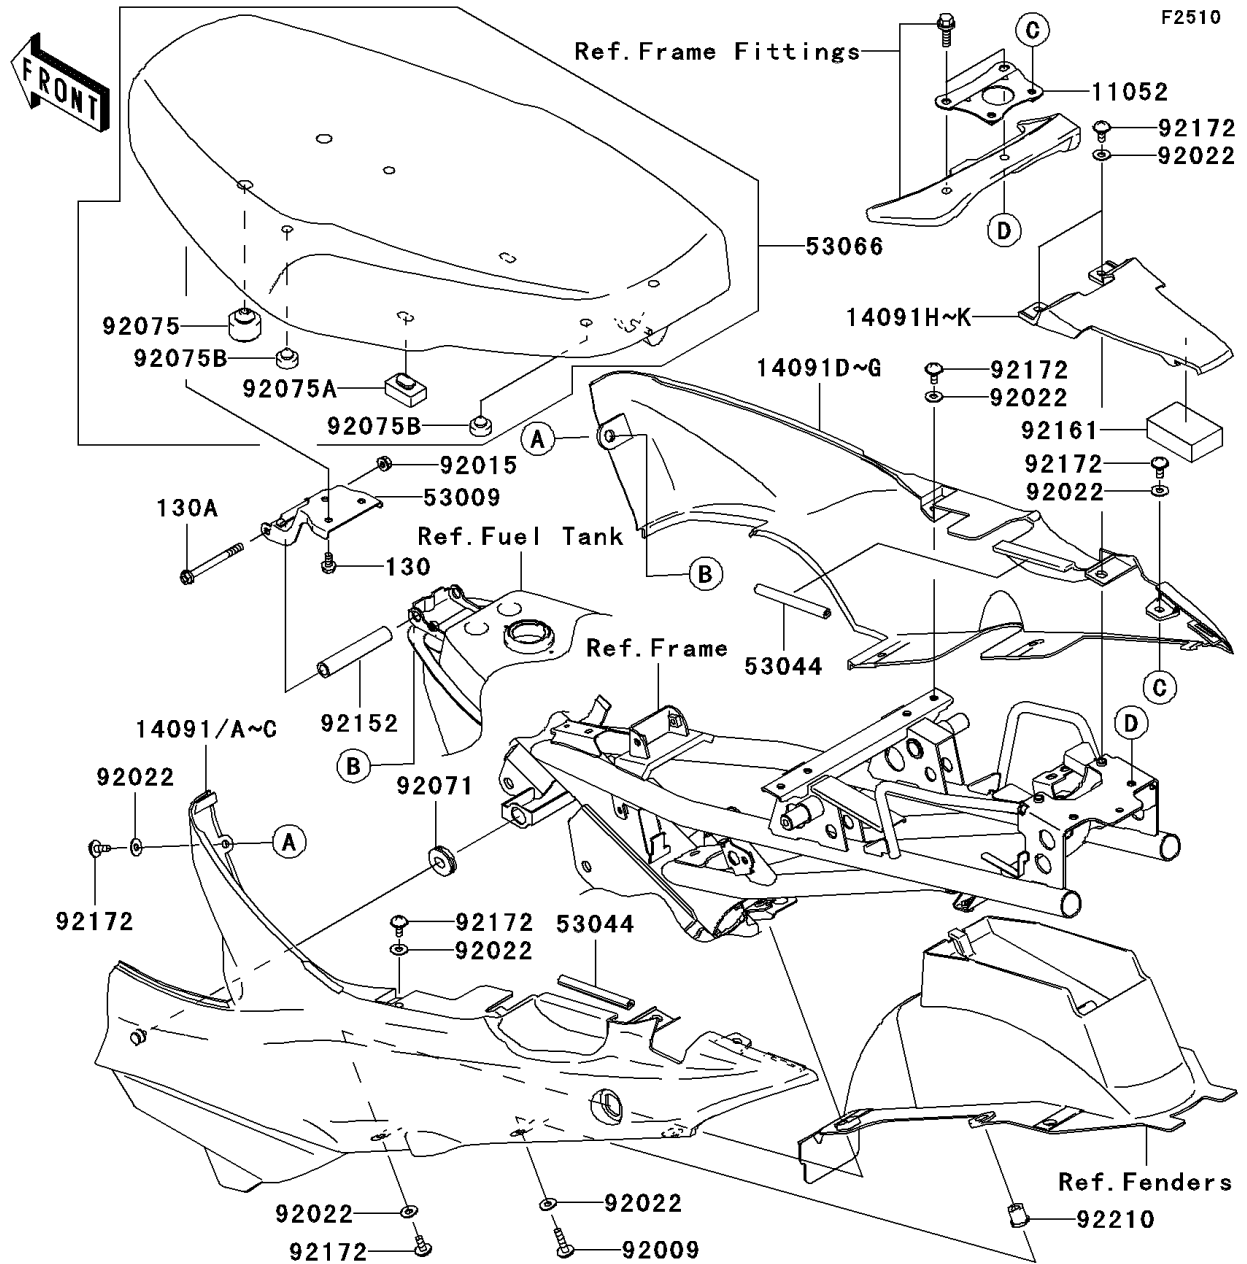

WOD

(14091/G)	Silver/Black
(14091A/F)	Ebony
(14091B/E)	Gray/Black
(14091C/D)	White/Black

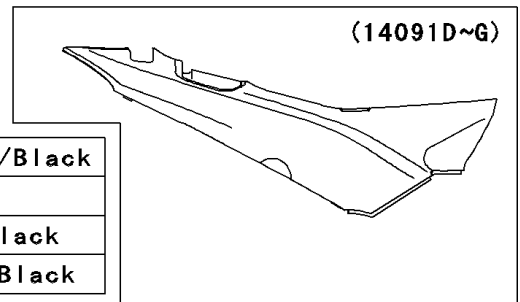

WOD

2008 KAZE HIT PARTS LIST

Seat

ITEM NAME	PART NUMBER	QUANTITY
BOLT-FLANGED,6X12 (Ref # 130)	130BA0612	1
BOLT-FLANGED,6X70 (Ref # 130A)	130BB0670	1
BRACKET,SEAT COVER,RR (Ref # 11052)	11052-1854	1
COVER,SEAT,LH,SILVER/BLACK (Ref # 14091)	14091-1411-14R	1
COVER,SEAT,LH,EBONY (Ref # 14091A)	14091-1411-20A	1
COVER,SEAT,LH,GRAY/BLACK (Ref # 14091B)	14091-1411-20G	1
COVER,SEAT,LH,WHITE/BLACK (Ref # 14091C)	14091-1411-20H	1
COVER,SEAT,RH,P.C.WHITE (Ref # 14091D)	14091-1412-14H	1
COVER,SEAT,RH,M.B.GRAY (Ref # 14091E)	14091-1412-14J	1
COVER,SEAT,RH,EBONY (Ref # 14091F)	14091-1412-20A	1
COVER,SEAT,RH,G.SILVER (Ref # 14091G)	14091-1412-4K	1
COVER,SEAT,CNT,P.C.WHITE (Ref # 14091H)	14091-1413-14H	1
COVER,SEAT,CNT,M.B.GRAY (Ref # 14091I)	14091-1413-14J	1
COVER,SEAT,CNT,EBONY (Ref # 14091J)	14091-1413-20A	1
COVER,SEAT,CNT,G.SILVER (Ref # 14091K)	14091-1413-4K	1
HINGE,SEAT (Ref # 53009)	53009-1113	1
TRIM,L=85 (Ref # 53044)	53044-0007	1
SEAT-ASSY,DUAL,BLACK (Ref # 53066)	53066-0015-MA	1
SCREW,6X25 (Ref # 92009)	92009-1465	1
NUT,FLANGED,6MM,BLACK (Ref # 92015)	92015-1233	1
WASHER,6.5X16X1 (Ref # 92022)	92022-1143	1
GROMMET (Ref # 92071)	92071-1043	1
DAMPER (Ref # 92075)	92075-015	1
DAMPER (Ref # 92075A)	92075-099	1
DAMPER (Ref # 92075B)	92075-1927	1
COLLAR,6.8X10X55.8 (Ref # 92152)	92152-1374	1
DAMPER (Ref # 92161)	92161-1288	1
SCREW,6X14 (Ref # 92172)	92172-0055	1
NUT,WELL,6MM (Ref # 92210)	92210-0184	1