


## 2000 W650 PARTS DIAGRAM

Suspension/Shock Absorber

F2151

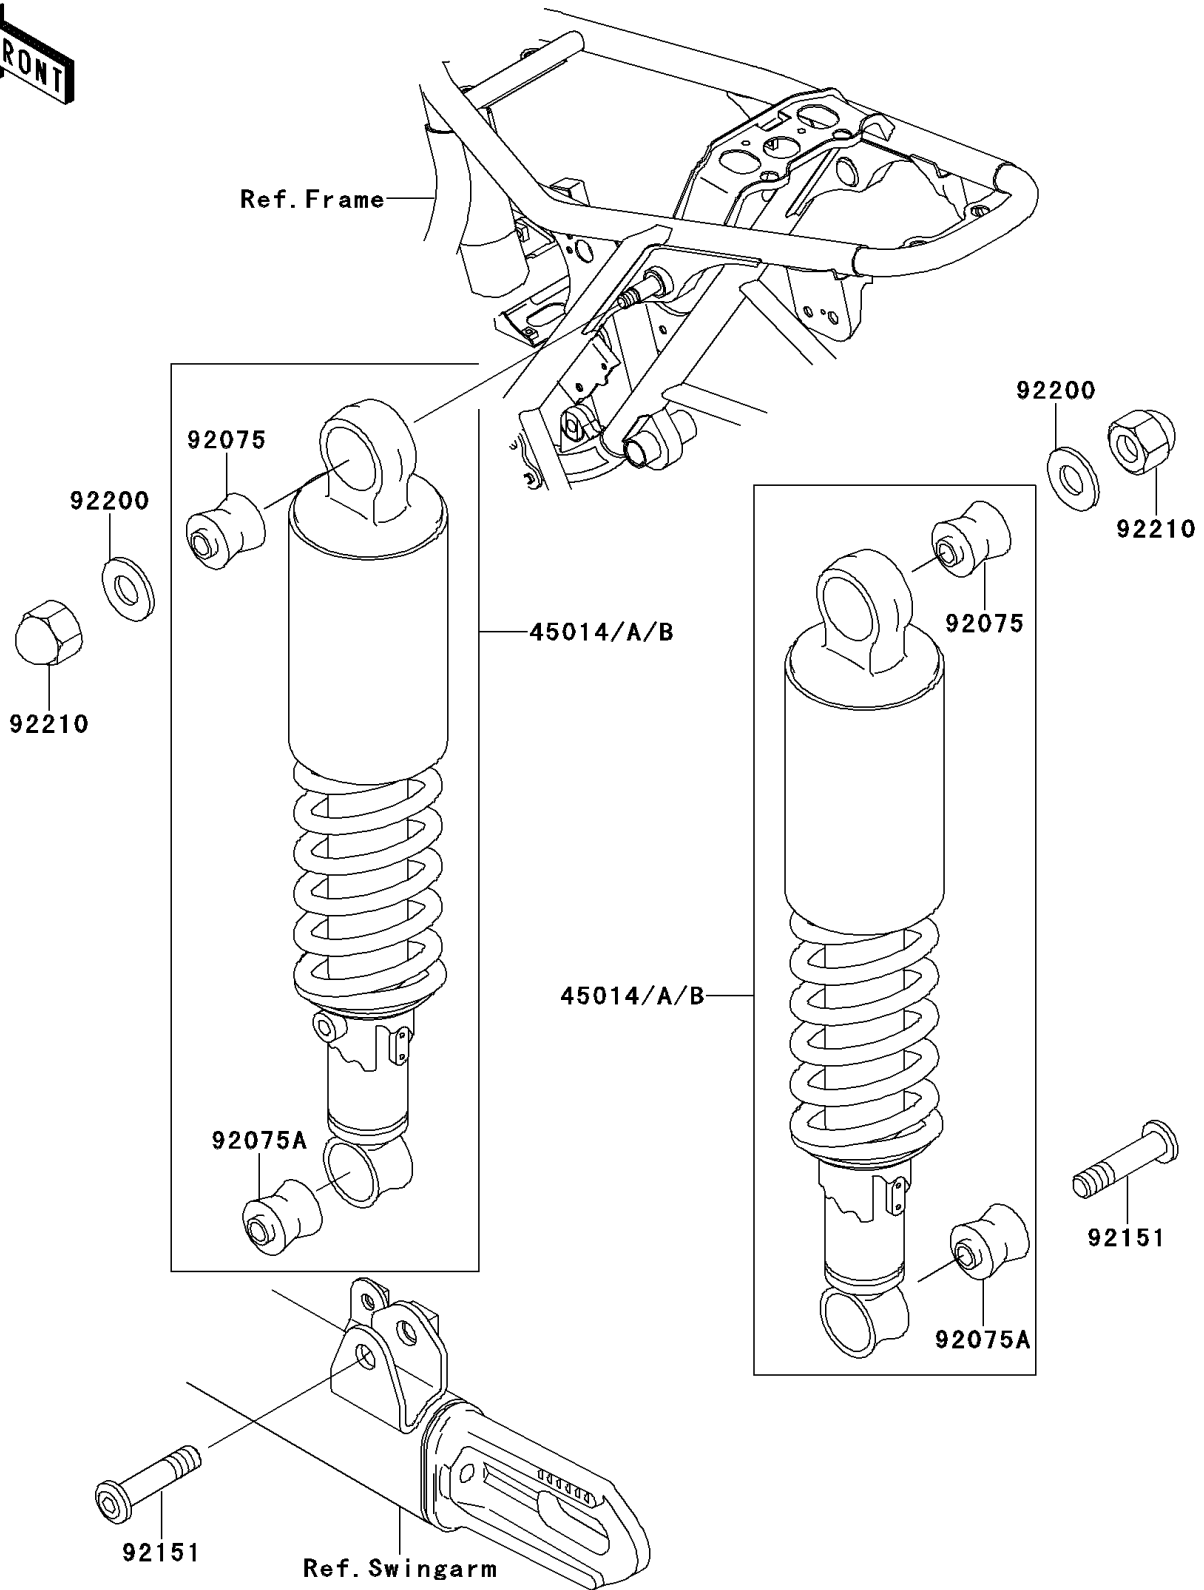

## 2000 W650 PARTS LIST

Suspension/Shock Absorber

ITEM NAME	PART NUMBER	QUANTITY
SHOCKABSORBER (Ref # 45014)	45014-1731	1
DAMPER,SHOCKABSORBER (Ref # 92075)	92075-1141	1
DAMPER,SHOCKABSORBER (Ref # 92075A)	92075-1586	1
BOLT,SOCKET,10X35 (Ref # 92151)	92151-1371	1
WASHER,12MM (Ref # 92200)	92200-1312	1
NUT,CAP,12MM (Ref # 92210)	92210-1174	1