


2006 Brute Force® 650 4x4i Realtree Hardwoods Green® HD™ PARTS DIAGRAM

Front Fender(s)

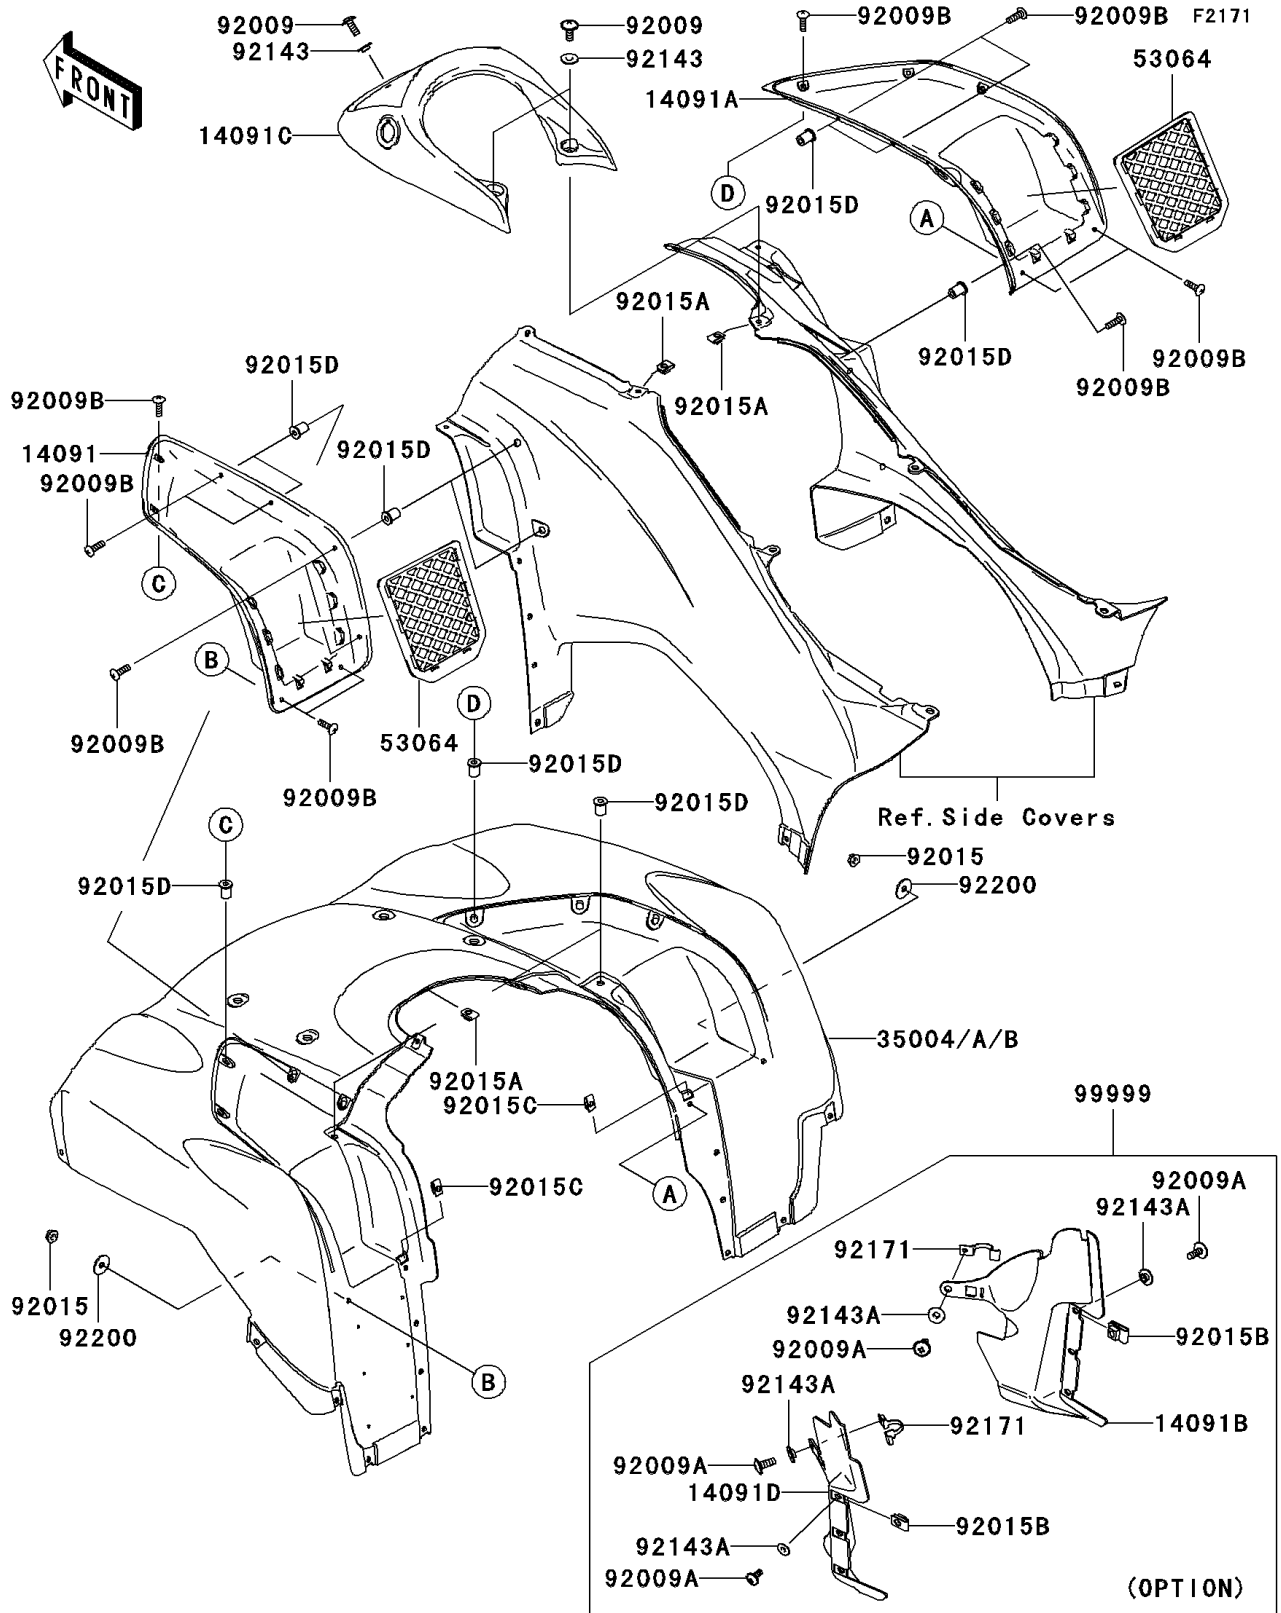

2006 Brute Force® 650 4x4i Realtree Hardwoods Green® HD™ PARTS LIST

Front Fender(s)

ITEM NAME	PART NUMBER	QUANTITY
COVER,POCKET,LH,F.BLACK (Ref # 14091)	14091-0135-6Z	1
COVER,POCKET,RH,F.BLACK (Ref # 14091A)	14091-0136-6Z	1
COVER,SIDE,INNER,RH (Ref # 14091B)	14091-0179	1
COVER,TOP,F.BLACK (Ref # 14091C)	14091-0270-6Z	1
COVER,SIDE,INNER,LH (Ref # 14091D)	14091-0337	1
FENDER-FRONT,C.H.GREEN (Ref # 35004)	35004-0038-826	1
NET-CARGO (Ref # 53064)	53064-0002	1
SCREW,6X16 (Ref # 92009)	92009-1621	2
SCREW,5X18 (Ref # 92009B)	92009-1655	1
NUT,FLANGED,5MM (Ref # 92015)	92015-1259	1
NUT,6MM (Ref # 92015A)	92015-1602	2
NUT,5MM (Ref # 92015C)	92015-1710	1
NUT,WELL,5MM (Ref # 92015D)	92015-1757	1
COLLAR (Ref # 92143)	92143-1087	2
CLAMP (Ref # 92171)	92171-0223	1
WASHER,5.5X20X1.2 (Ref # 92200)	92200-0284	1
INNER FENDER KIT (Ref # 99999)	99999-0055	1