


## 2013 KAZE HIT PARTS DIAGRAM

Footrests

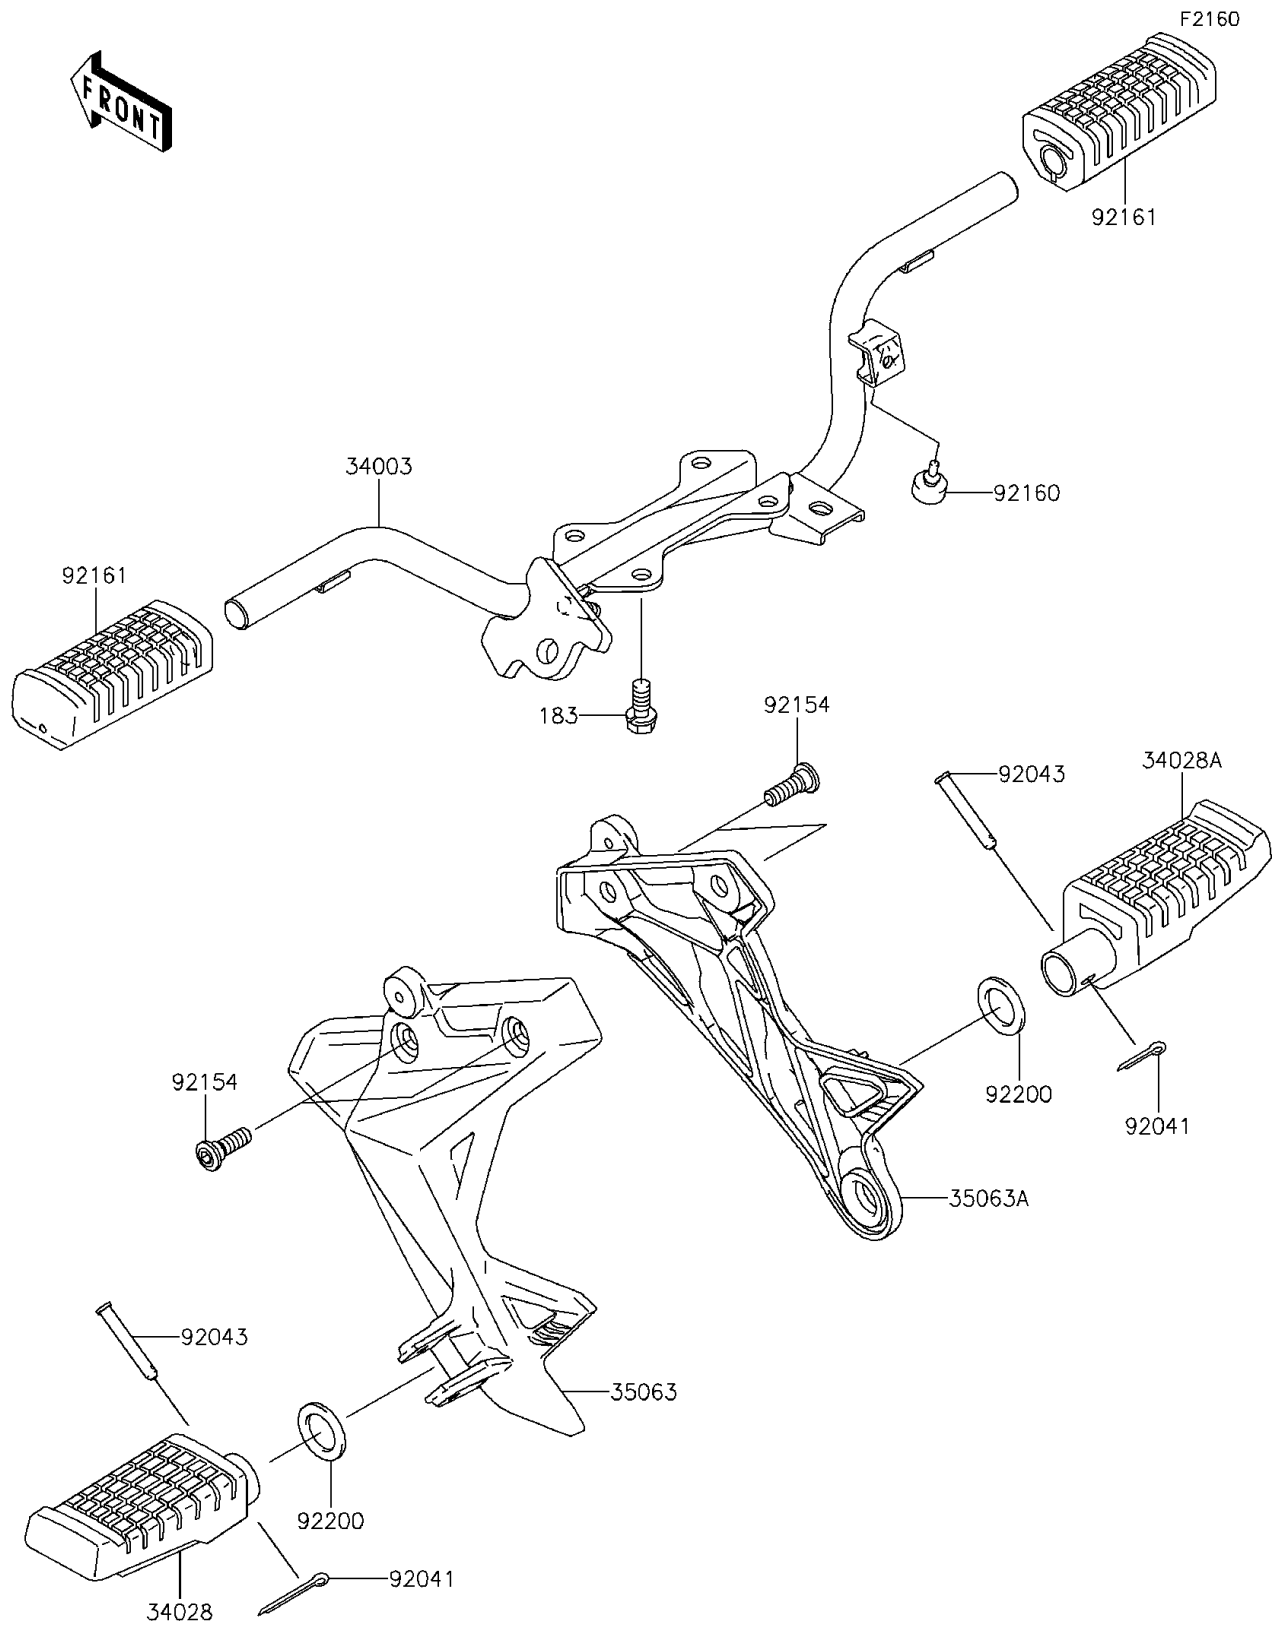

## 2013 KAZE HIT PARTS LIST

Footrests

ITEM NAME	PART NUMBER	QUANTITY
BOLT-UPSET-WS-SMALL,8X20 (Ref # 183)	183BA0820	1
HOLDER-STEP,FR (Ref # 34003)	34003-0123	1
STEP,RR,LH (Ref # 34028)	34028-0155	1
STEP,RR,RH (Ref # 34028A)	34028-0156	1
STAY,RR,LH,P.SILVER (Ref # 35063)	35063-0638-458	1
STAY,RR,RH,P.SILVER (Ref # 35063A)	35063-0639-458	1
COTTER,2.0X15 (Ref # 92041)	92041-0008	1
PIN,6X37 (Ref # 92043)	92043-0045	1
BOLT,SOCKET,8X25 (Ref # 92154)	92154-0194	1
DAMPER,BRAKE STOPPER (Ref # 92160)	92160-1821	1
DAMPER,STEP RUBBER (Ref # 92161)	92161-1251	1
WASHER,20X30X2.3 (Ref # 92200)	92200-0732	1