




## 2009 Vulcan® 1700 Nomad™ PARTS DIAGRAM

Fenders

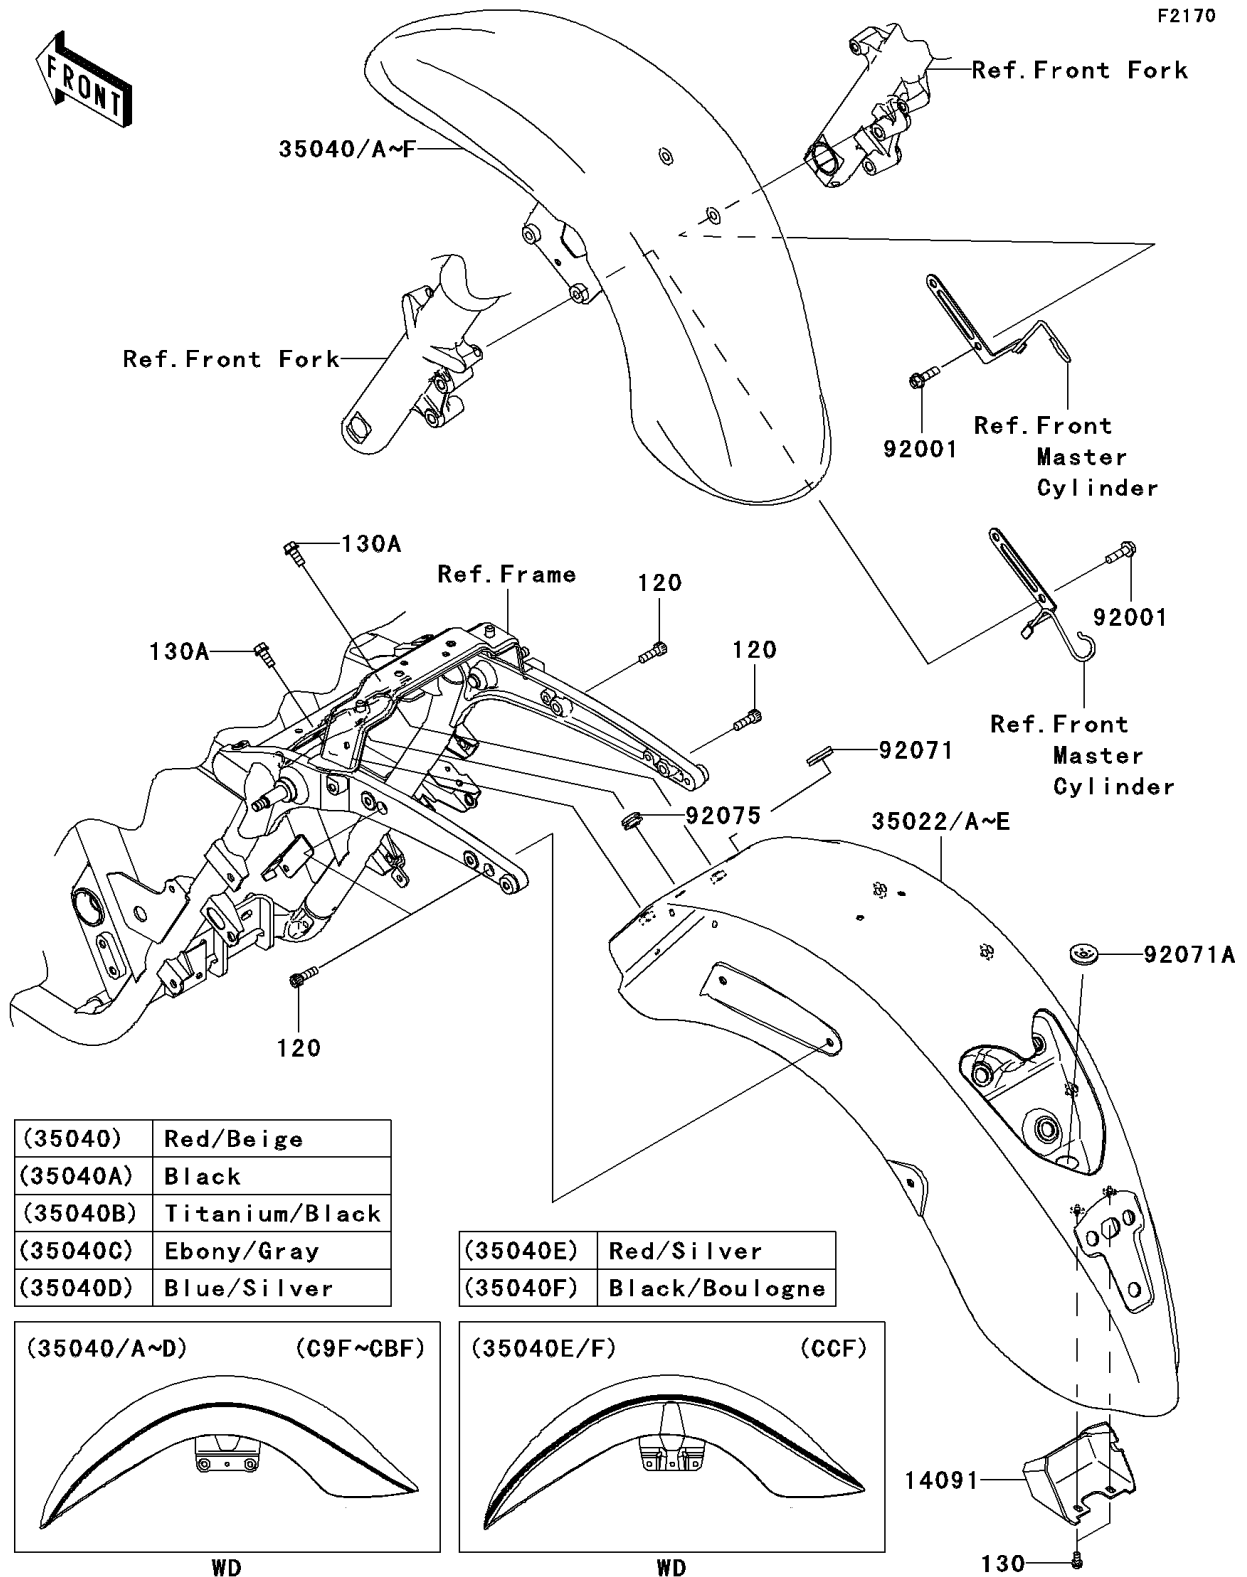

(35040)	Red/Beige
(35040A)	Black
(35040B)	Titanium/Black
(35040C)	Ebony/Gray
(35040D)	Blue/Silver

(35040E)	Red/Silver
(35040F)	Black/Boulogne

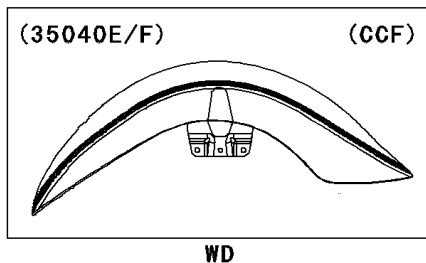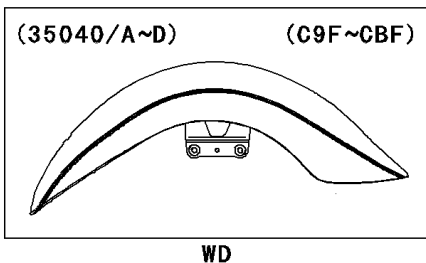

## 2009 Vulcan® 1700 Nomad™ PARTS LIST

### Fenders

ITEM NAME	PART NUMBER	QUANTITY
BOLT-SOCKET,8X25 (Ref # 120)	120CA0825	1
COVER,HARNESS CONNECTOR (Ref # 14091)	14091-1630	1
FENDER-COMP-REAR,M.D.BLACK (Ref # 35022B)	35022-0066-17K	1
FENDER-COMP-FRONT,M.D,BLACK (Ref # 35040A)	35040-5039-17K	1
BOLT,FLANGED,8X28 (Ref # 92001)	92001-1095	1
GROMMET (Ref # 92071)	92071-1228	1
GROMMET (Ref # 92071A)	92071-1265	1
DAMPER (Ref # 92075)	92075-1067	1
BOLT-FLANGED,6X12 (Ref # 130)	130BA0612	1
BOLT-FLANGED,8X16 (Ref # 130A)	130BA0816	1