


2000 W650 PARTS DIAGRAM

Suspension/Shock Absorber

F2151



Ref. Frame

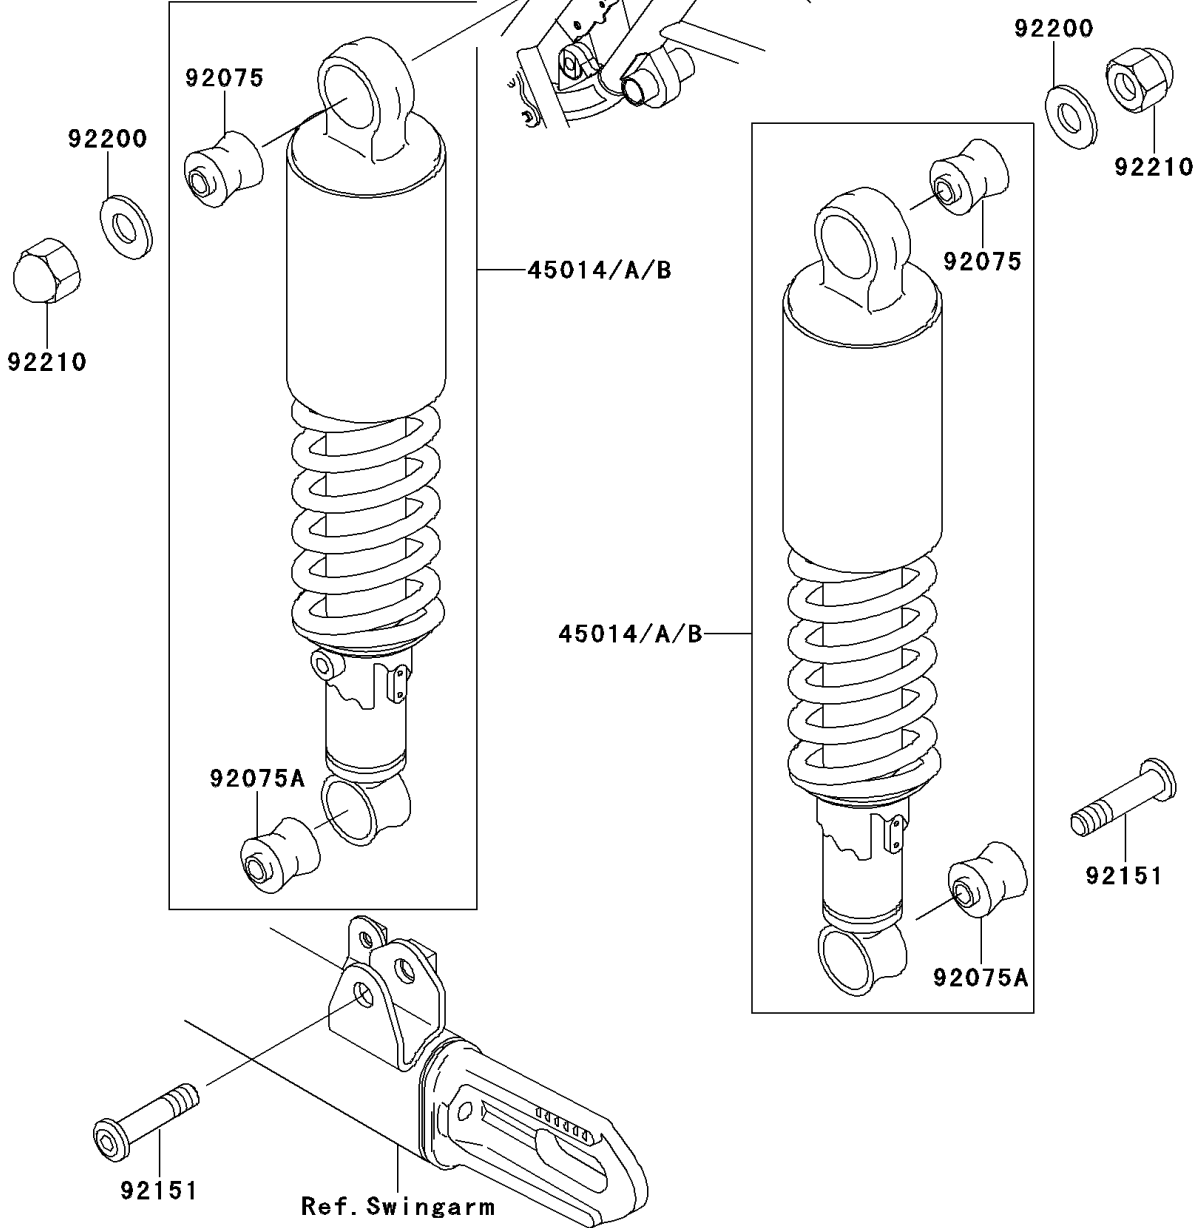

2000 W650 PARTS LIST

Suspension/Shock Absorber

ITEM NAME	PART NUMBER	QUANTITY
SHOCKABSORBER (Ref # 45014)	45014-1731	2
DAMPER,SHOCKABSORBER (Ref # 92075)	92075-1141	2
DAMPER,SHOCKABSORBER (Ref # 92075A)	92075-1586	2
BOLT,SOCKET,10X35 (Ref # 92151)	92151-1371	2
WASHER,12MM (Ref # 92200)	92200-1312	2
NUT,CAP,12MM (Ref # 92210)	92210-1174	2