


1968 Roadrunner PARTS DIAGRAM

SWING ARM/SHOCK ABSORBERS

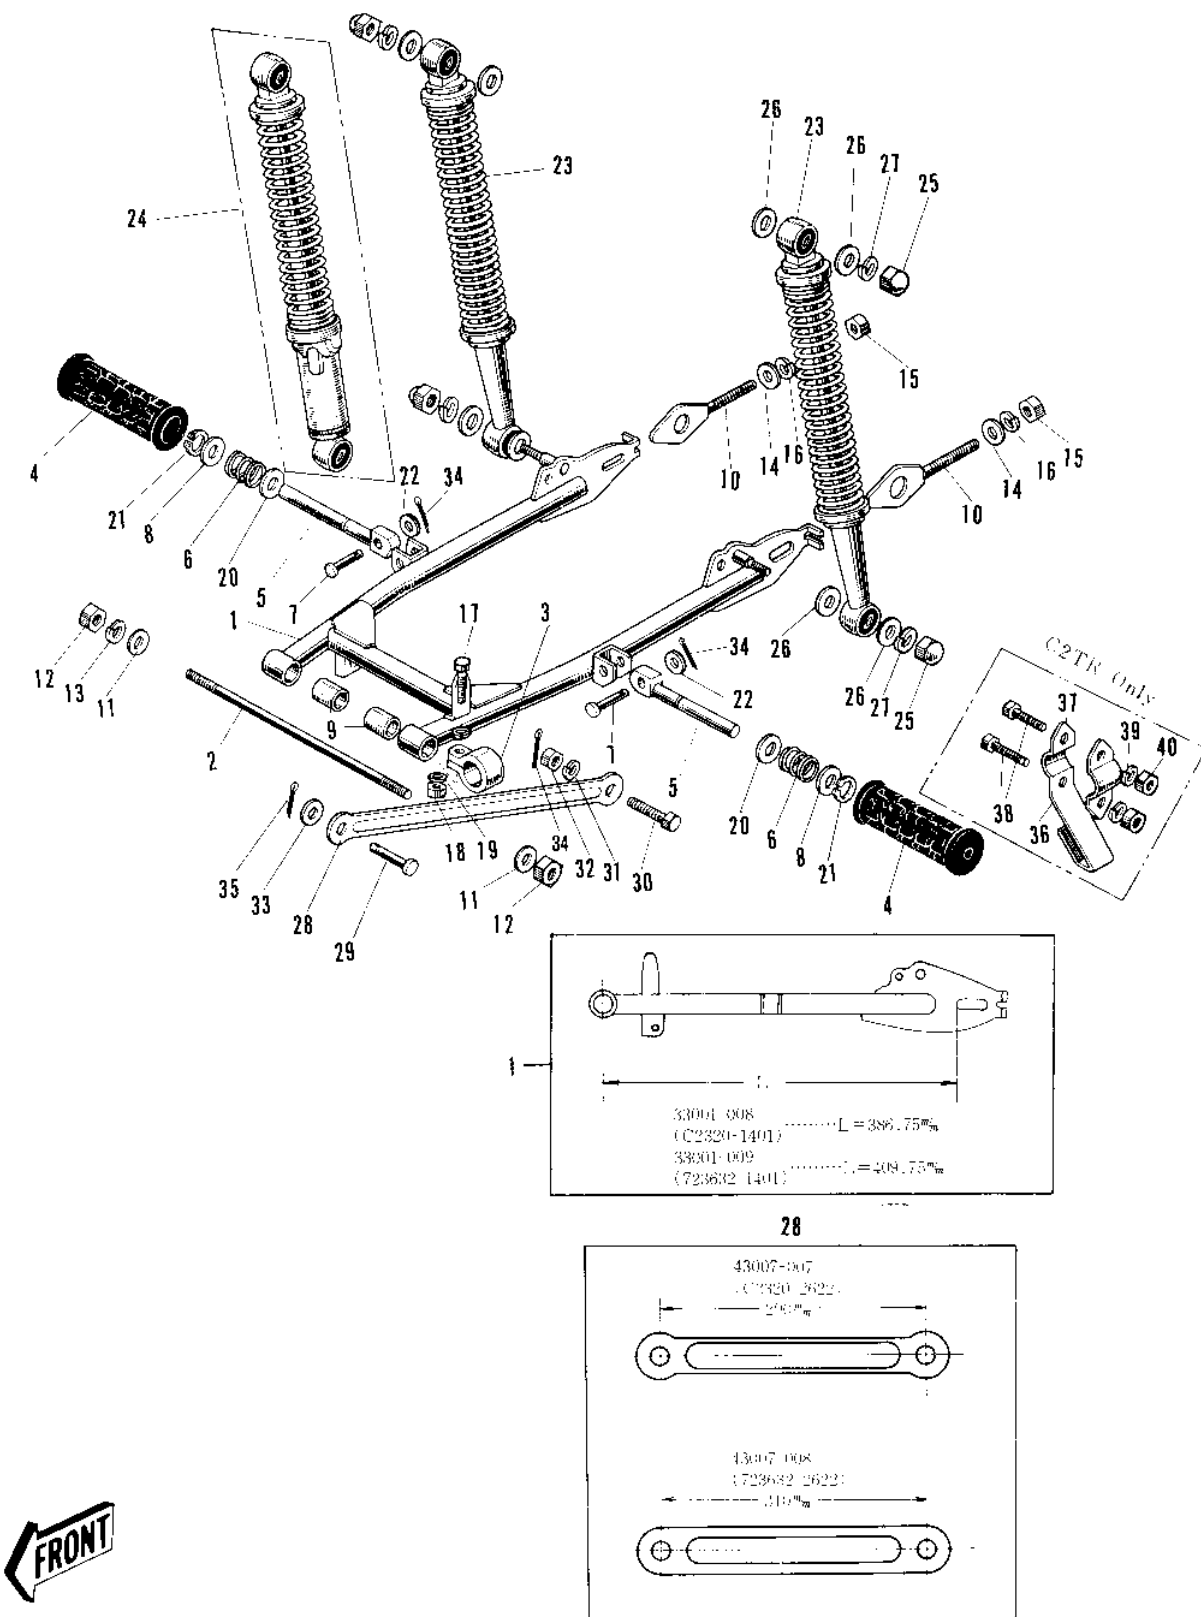

1968 Roadrunner PARTS LIST

SWING ARM/SHOCK ABSORBERS

ITEM NAME	PART NUMBER	QUANTITY
UNAVAILABLE IN PRICE BOOK (Ref # 1)	33001-008	1
ARM SWING (Ref # 1)	33001-009	1
SHAFT SWING ARM PIVOT (Ref # 2)	33032-008	1
UNAVAILABLE IN PRICE BOOK (Ref # 3)	33042-008	1
RUBBER REAR FOOTREST (Ref # 4)	92076-007	2
FOOTREST ASSY REAR (Ref # 5,6,8,)	34027-004	2
SPRING FOOTREST FOLD (Ref # 6)	34031-001	2
PIN FOOTREST FIT (Ref # 7)	92043-047	2
WASHER FOLDING PEG (Ref # 8)	92022-050	2
BUSH SWING ARM SHAFT (Ref # 9)	92092-006	2
ADJUSTER CHAIN (Ref # 10)	33040-008	2
WASHER PLAIN 10MM (Ref # 11)	411B1000	2
NUT,10MM (Ref # 12)	314B1000	2
WASHER SPRING 10MM (Ref # 13)	461F1000	1
WASHER PLAIN 6MM (Ref # 14)	410B0600	2
NUT 6MM (Ref # 15)	311B0600	2
WASHER SPRING 6MM (Ref # 16)	461F0600	2
SCREW PAN HEAD 5X16 (Ref # 17)	220B0516	1
SCREW PAN HEAD 5X16 (Ref # 17)	220B0516A	1
NUT,5MM (Ref # 18)	311B0500	1
NUT,5MM (Ref # 18)	311B0500	1
WASHER PLAIN 5MM (Ref # 19)	410B0500	1
WASHER PLAIN 14MM (Ref # 20)	410B1400	2
CIRCLIP 14MM (Ref # 21)	480J1400	2
WASHER PLAIN 8MM (Ref # 22)	410B0800	2
UNAVAILABLE IN PRICE BOOK (Ref # 23)	45014-018	2
SHOCK ABSBR RR (Ref # 24)	45014-036	2
NUT SHOCK ABSBR FIT (Ref # 25)	92020-005	4
NUT 12MM (Ref # 25)	92020-014	4

1968 Roadrunner PARTS LIST

SWING ARM/SHOCK ABSORBERS

ITEM NAME	PART NUMBER	QUANTITY
WASHER PLAIN 12MM (Ref # 26)	411B1200	8
WASHER SPRING 12MM (Ref # 27)	461F1200	4
TORQUE LINK REAR BRK (Ref # 28)	43007-007	1
TORQUE LINK REAR BRK (Ref # 28)	43007-008	1
PIN REAR TORQUE LINK (Ref # 29)	43009-001	1
BOLT HEX HEAD 10X25 (Ref # 30)	92003-003	1
WASHER SPRING 10MM (Ref # 31)	461F1000	1
NUT,10MM (Ref # 32)	314B1000	1
WASHER PLAIN 10MM (Ref # 33)	410B1000	1
PIN COTTER 2.5X20 (Ref # 34)	550D2520	3
PIN COTTER 2.0X15 (Ref # 35)	550D2015	1
GUARD CHAIN (Ref # 36)	55020-001	
STAY CHAIN GUARD (Ref # 37)	55021-001	
BOLT,8X20 (Ref # 38)	115G0820	
WASHER SPRING 8MM (Ref # 39)	461F0800	
NUT,8MM (Ref # 40)	311B0800	