


2010 Vulcan® 1700 Voyager® ABS PARTS DIAGRAM

Saddlebags(Trunk)

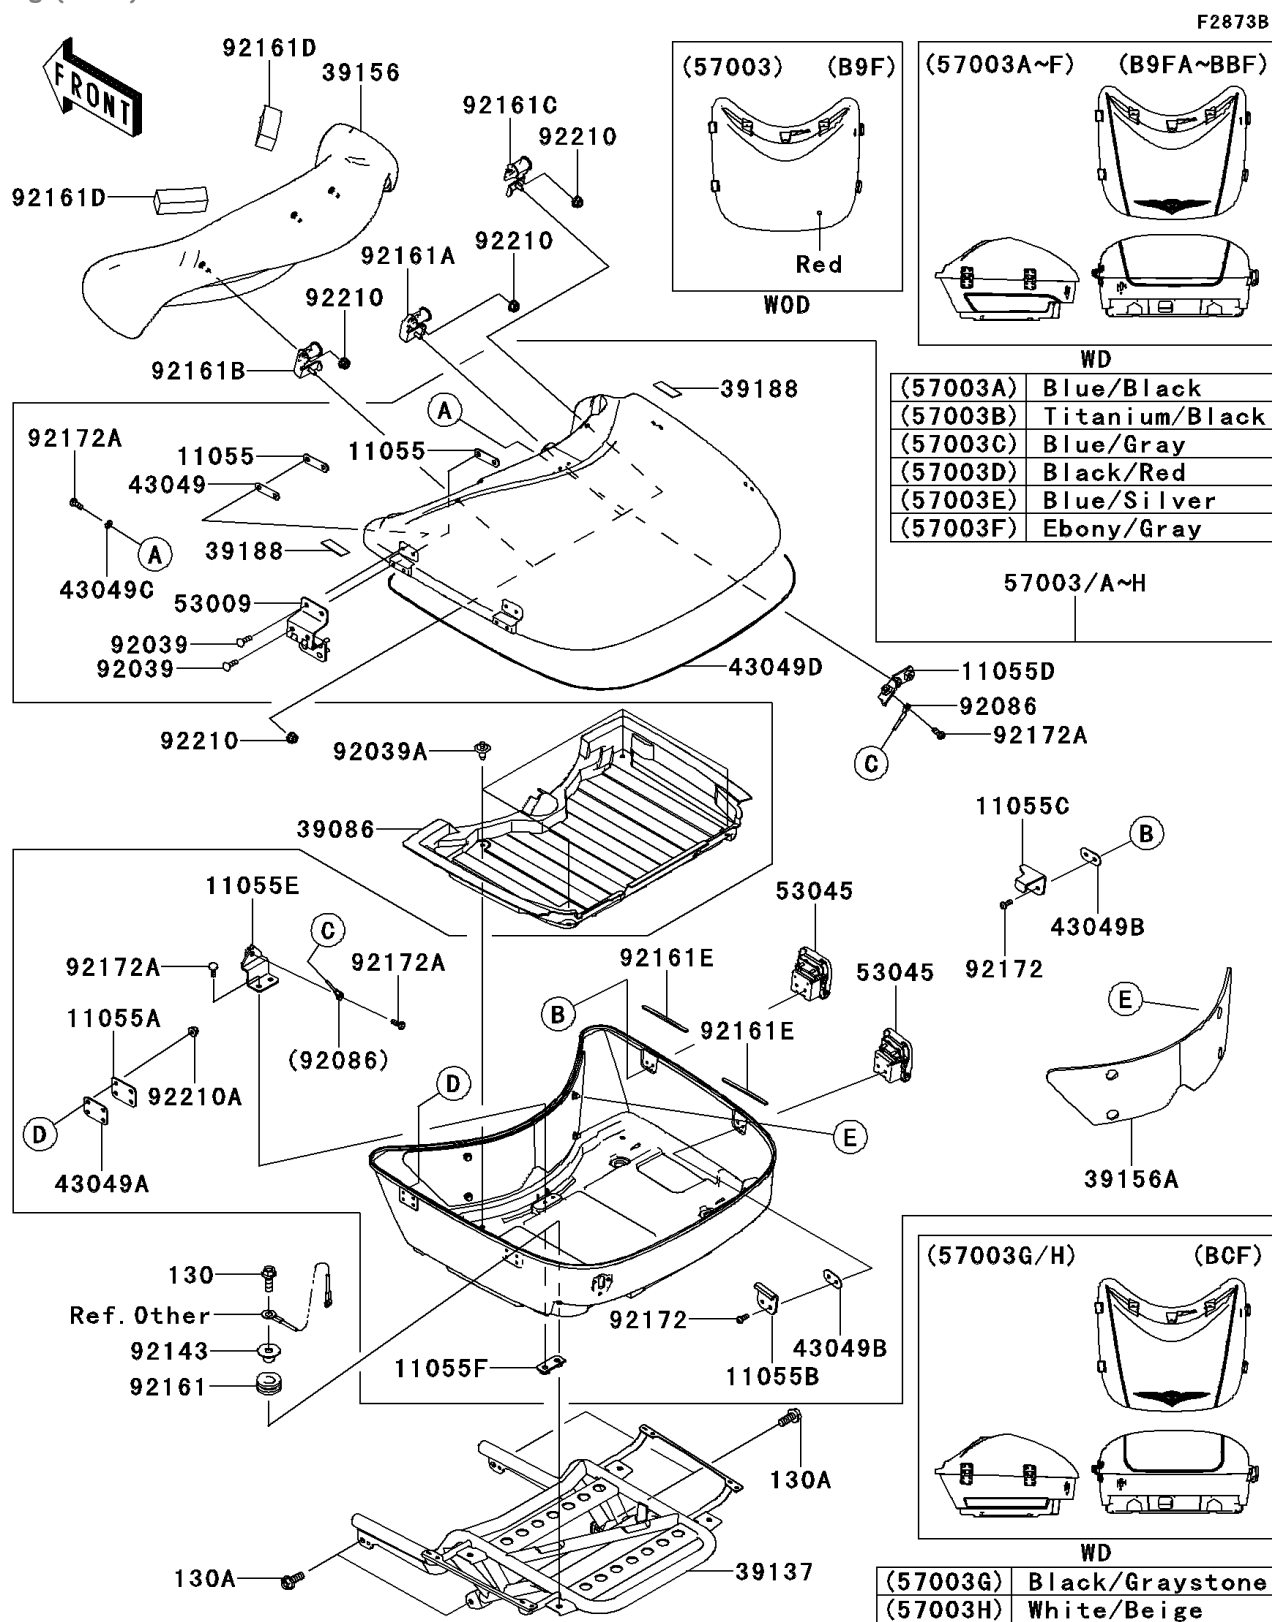

2010 Vulcan® 1700 Voyager® ABS PARTS LIST

Saddlebags(Trunk)

ITEM NAME	PART NUMBER	QUANTITY
BRACKET (Ref # 11055)	11055-1899	4
BRACKET (Ref # 11055A)	11055-1900	2
BRACKET (Ref # 11055B)	11055-1902	1
BRACKET (Ref # 11055C)	11055-1904	1
BRACKET (Ref # 11055D)	11055-1905	1
BRACKET (Ref # 11055E)	11055-1906	1
BRACKET (Ref # 11055F)	11055-1907	1
PAD-STORAGE (Ref # 39086)	39086-0001	1
STAY-COMP (Ref # 39137)	39137-0059	1
PAD,UPP,BLACK (Ref # 39156)	39156-0523-MA	1
PAD (Ref # 39156A)	39156-0560	1
TAPE (Ref # 39188)	39188-0016	2
PACKING (Ref # 43049)	43049-0016	2
PACKING (Ref # 43049A)	43049-0017	2
PACKING (Ref # 43049B)	43049-0018	2
PACKING (Ref # 43049C)	43049-0019	2
PACKING (Ref # 43049D)	43049-0020	1
HINGE (Ref # 53009)	53009-0028	2
HOOK-ASSY (Ref # 53045)	53045-0015	2
BAG,CNT,BODY GRY+COVER BLU/GRY (Ref # 57003C)	57003-5212-28Q	1
BAG,CNT,BODY RED+COVER BLK/RED (Ref # 57003D)	57003-5213-28T	1
BOLT-FLANGED,8X22 (Ref # 130)	130BA0822	4
BOLT-FLANGED,8X20 (Ref # 130A)	130CA0820	4
RIVET (Ref # 92039)	92039-0091	8
RIVET (Ref # 92039A)	92039-1289	4
WIRE (Ref # 92086)	92086-0014	1
COLLAR (Ref # 92143)	92143-1450	4
DAMPER (Ref # 92161)	92161-0290	4
DAMPER (Ref # 92161A)	92161-0754	1

2010 Vulcan® 1700 Voyager® ABS PARTS LIST

Saddlebags(Trunk)

ITEM NAME	PART NUMBER	QUANTITY
DAMPER (Ref # 92161B)	92161-0755	1
DAMPER (Ref # 92161C)	92161-0756	1
DAMPER (Ref # 92161D)	92161-0802	2
DAMPER (Ref # 92161E)	92161-0819	2
SCREW (Ref # 92172)	92172-0049	4
SCREW (Ref # 92172A)	92172-0450	6
NUT (Ref # 92210)	92210-0401	6
NUT,CAP,4MM (Ref # 92210A)	92210-0434	8