


2013 NINJA® 650 ABS PARTS DIAGRAM

Suspension/Shock Absorber

F2151

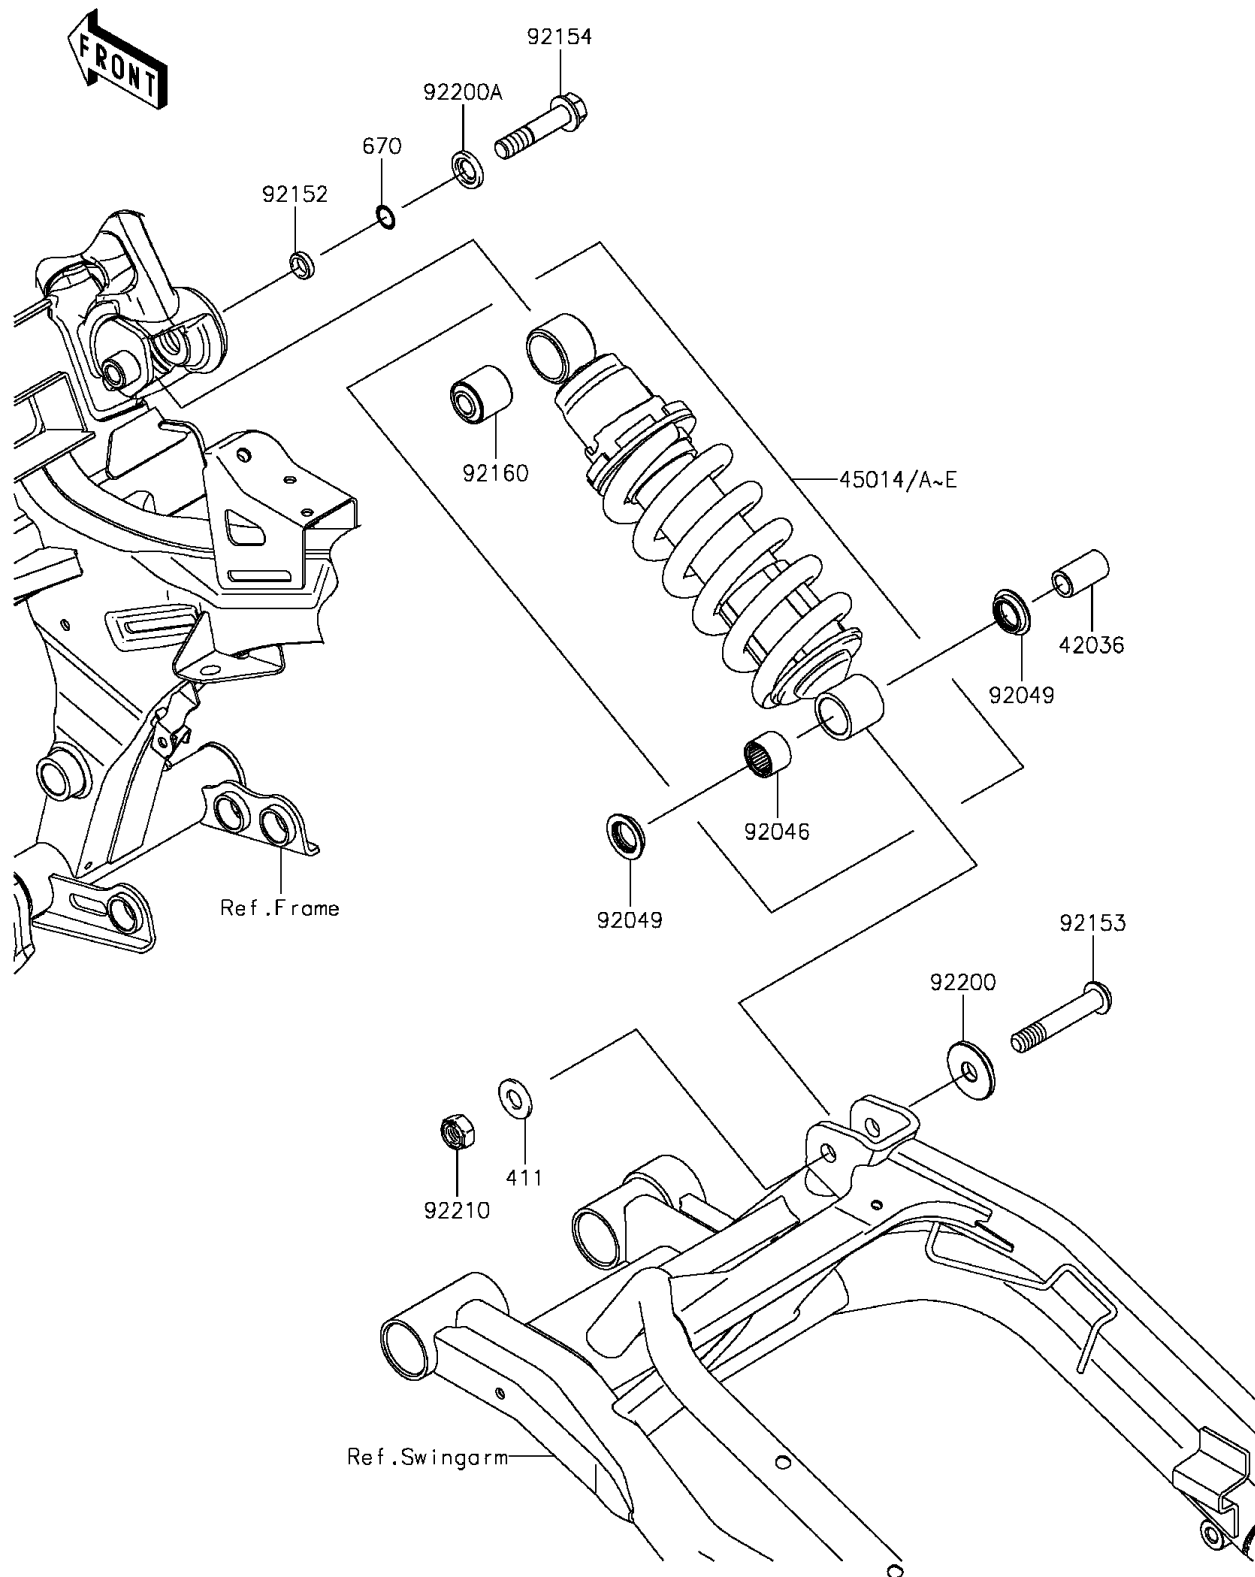

2013 NINJA® 650 ABS PARTS LIST

Suspension/Shock Absorber

ITEM NAME	PART NUMBER	QUANTITY
WASHER-PLAIN,12MM (Ref # 411)	411AA1200	1
O RING,12MM (Ref # 670)	670B2012	1
SLEEVE,12.1X18X32 (Ref # 42036)	42036-0024	1
SHOCKABSORBER,S.RED (Ref # 45014)	45014-0364-VM	1
SHOCKABSORBER,L.YELLOW (Ref # 45014A)	45014-0364-40J	1
SHOCKABSORBER,P.SILVER (Ref # 45014B)	45014-0364-458	1
BEARING-NEEDLE,SFYZM182417 (Ref # 92046)	92046-1272	1
SEAL-OIL (Ref # 92049)	92049-0133	1
COLLAR,12.1X16.8X4.4 (Ref # 92152)	92152-0811	1
BOLT,SOCKET,12X70 (Ref # 92153)	92153-1985	1
BOLT,FLANGED,12X55 (Ref # 92154)	92154-0836	1
DAMPER,SHOCKABSORBER (Ref # 92160)	92160-1161	1
WASHER (Ref # 92200)	92200-0484	1
WASHER,12.5X24X3.2 (Ref # 92200A)	92200-0519	1
NUT,LOCK,12MM (Ref # 92210)	92210-0300	1