


# 2013 W800 (European) PARTS DIAGRAM

Footrests

F2160

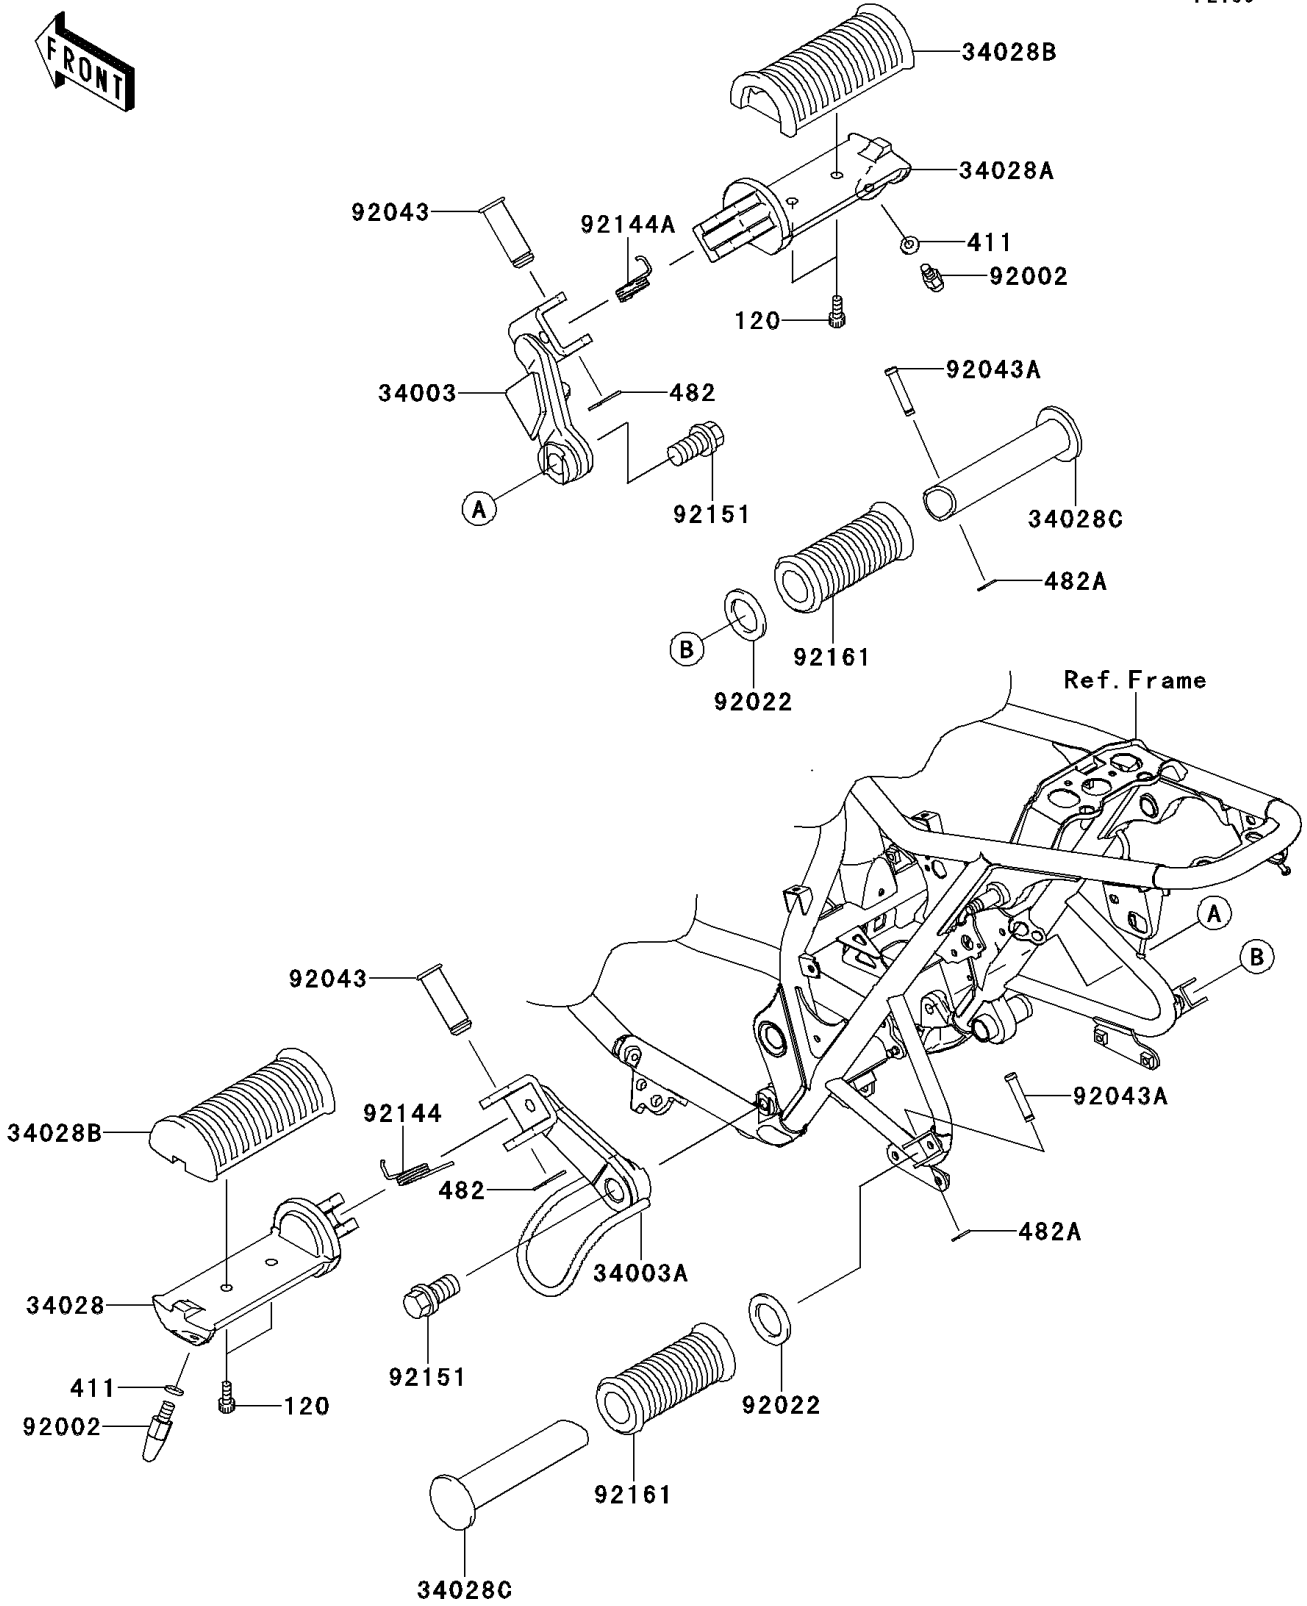

## 2013 W800 (European) PARTS LIST

### Footrests

ITEM NAME	PART NUMBER	QUANTITY
BOLT-SOCKET,5X12 (Ref # 120)	120CB0512	4
WASHER-PLAIN,6.5X13X1 (Ref # 411)	411AB0600	2
CIRCLIP-TYPE-E,10MM (Ref # 482)	482EA0100	2
CIRCLIP-TYPE-E (Ref # 482A)	482EA5000	2
HOLDER-STEP,FR,RH (Ref # 34003)	34003-0125	1
HOLDER-STEP,FR,LH (Ref # 34003A)	34003-0126	1
STEP,FR,LH (Ref # 34028)	34028-0316	1
STEP,FR,RH (Ref # 34028A)	34028-0317	1
STEP,RUBBER (Ref # 34028B)	34028-1372	2
STEP,RR (Ref # 34028C)	34028-1373	2
BOLT,BANK SENSOR (Ref # 92002)	92002-1742	2
WASHER,20X30X2.3 (Ref # 92022)	92022-1568	2
PIN,12X37 (Ref # 92043)	92043-0150	2
PIN,6X30 (Ref # 92043A)	92043-1607	2
SPRING,STEP RETURN (Ref # 92144)	92144-1567	1
SPRING,STEP RETURN (Ref # 92144A)	92144-1568	1
BOLT,FLANGED,12X30 (Ref # 92151)	92151-1942	2
DAMPER,RR STEP (Ref # 92161)	92161-0902	2