


2009 Prairie 360 4X4 Hardwoods Green HD

Kawasaki
Let the Good Times Roll®

PARTS DIAGRAM

Footrests

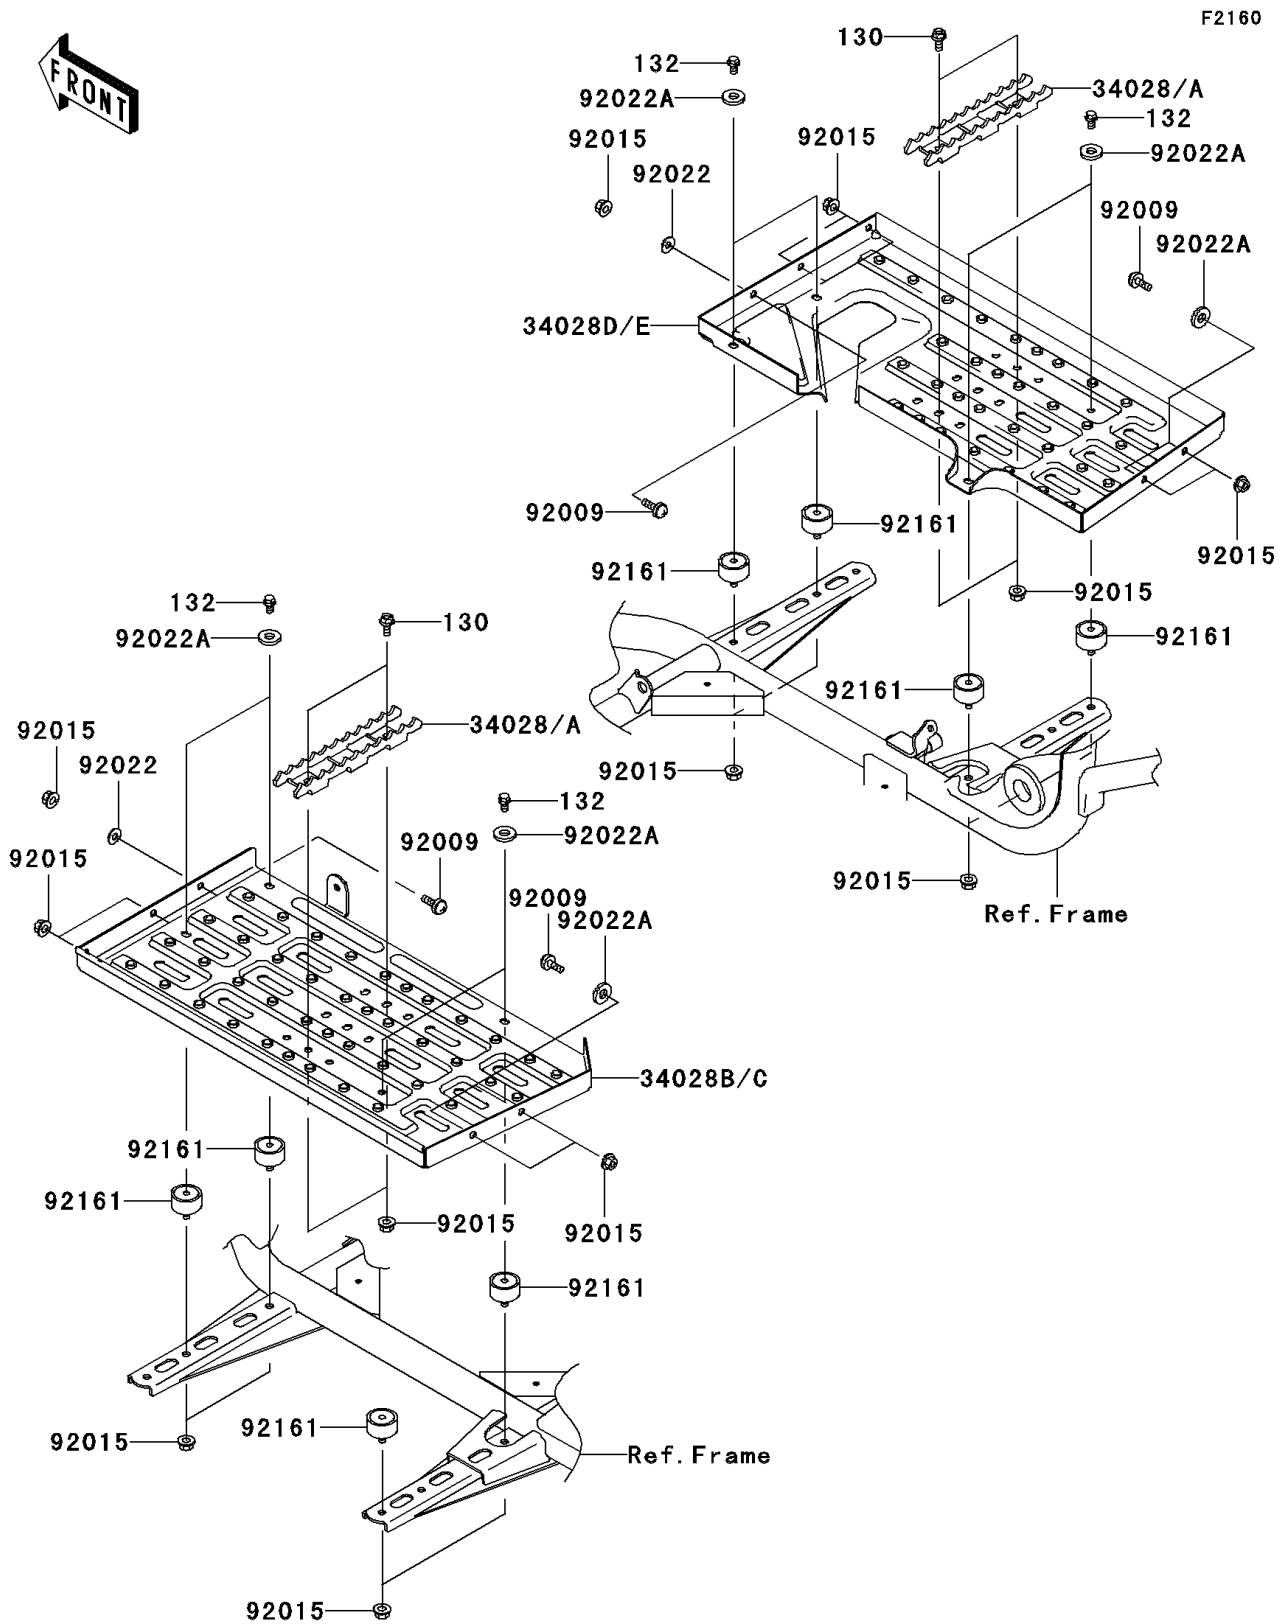

2009 Prairie 360 4X4 Hardwoods Green HD



PARTS LIST

Footrests

ITEM NAME	PART NUMBER	QUANTITY
BOLT-FLANGED,6X14 (Ref # 130)	130BB0614	4
BOLT-FLANGED-SMALL,6X10 (Ref # 132)	132BB0610	8
STEP,FOOT PEG,T.BLACK (Ref # 34028)	34028-0063-388	2
STEP,LH,T.BLACK (Ref # 34028C)	34028-7511-388	1
STEP,RH,T.BLACK (Ref # 34028E)	34028-7512-388	1
SCREW,6X16 (Ref # 92009)	92009-1621	10
NUT,FLANGED,6MM (Ref # 92015)	92015-1367	22
WASHER,6.5X16X1.0 (Ref # 92022)	92022-1093	2
WASHER,6.5X20X1.6,BLACK (Ref # 92022A)	92022-1346	12
DAMPER,FLOOR BOARD (Ref # 92161)	92161-7505	8