


2018 Z650 ABS PARTS DIAGRAM

Cowling

F2871

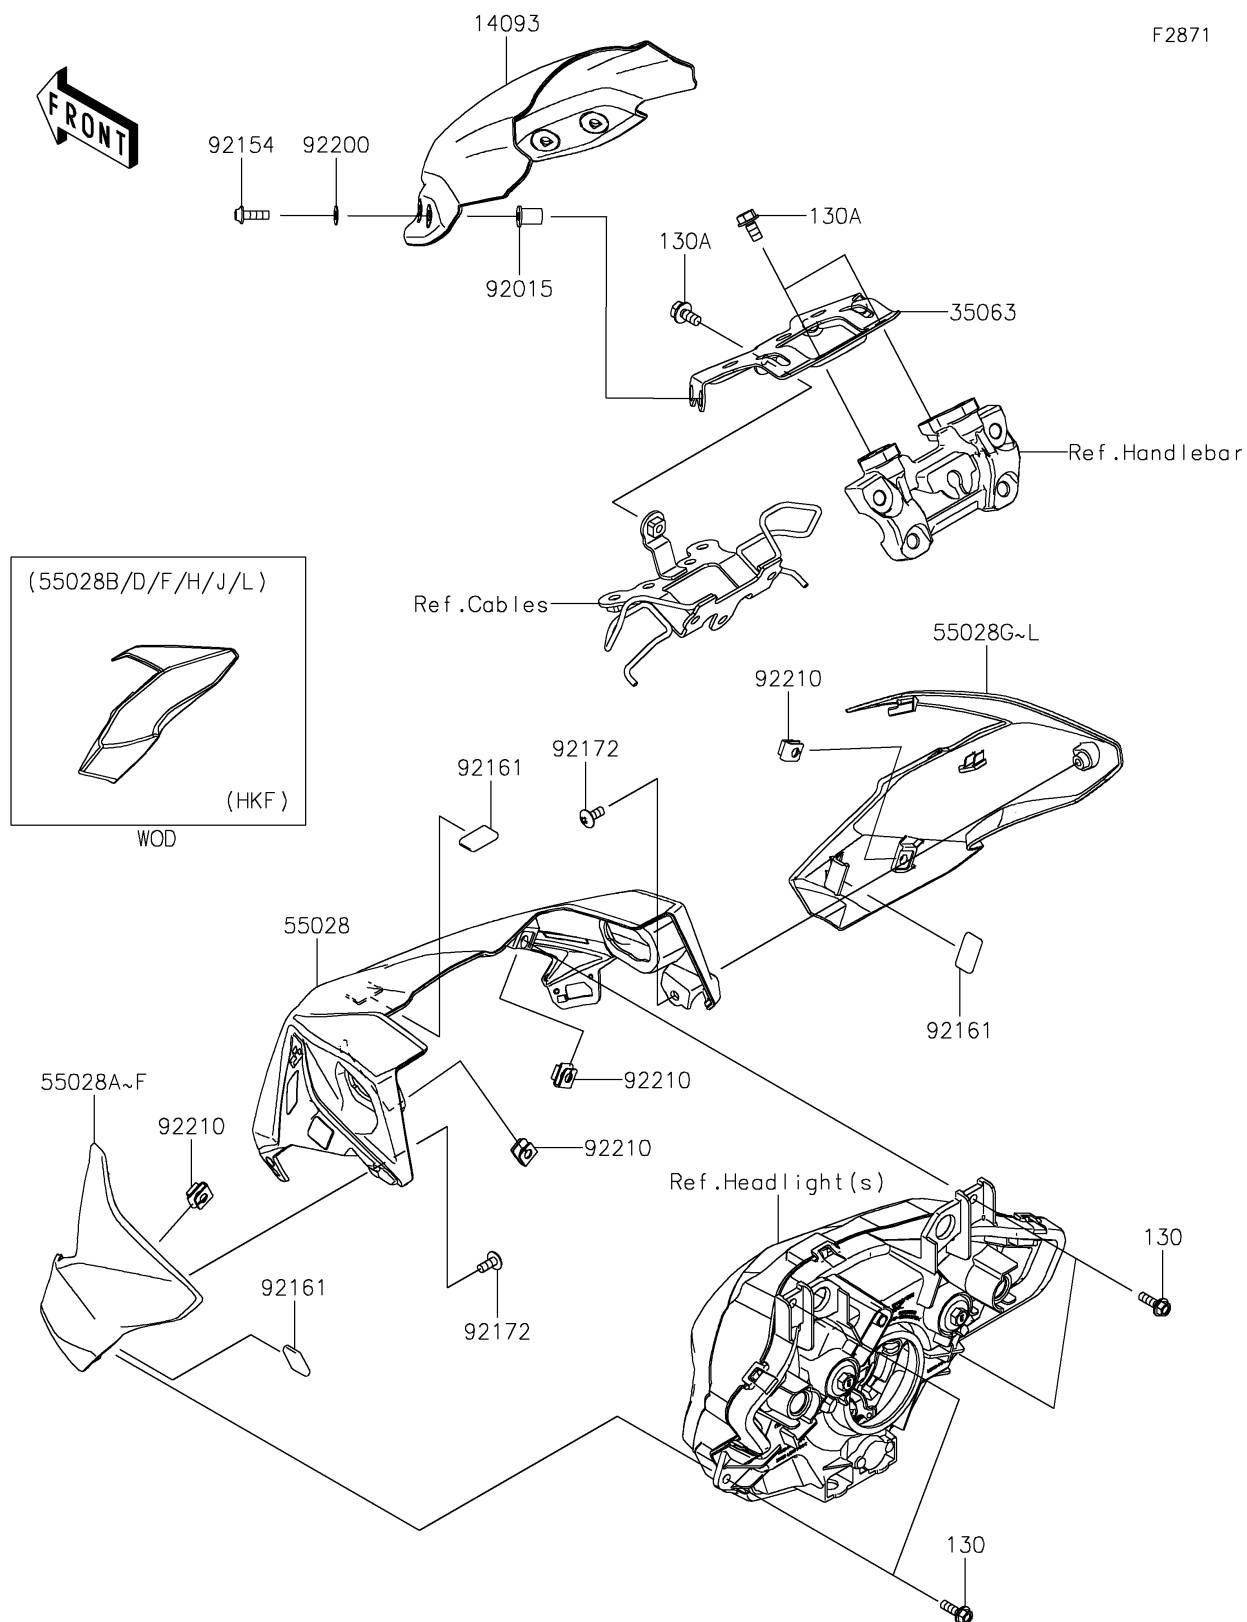

2018 Z650 ABS PARTS LIST

Cowling

ITEM NAME	PART NUMBER	QUANTITY
BOLT-FLANGED,5X16 (Ref # 130)	130BA0516	4
BOLT-FLANGED,6X12 (Ref # 130A)	130BB0612	3
COVER,METER (Ref # 14093)	14093-0487	1
STAY,METER (Ref # 35063)	35063-1352	1
COWLING,UPP (Ref # 55028)	55028-0587	1
COWLING,UPP,LH,M.M.C.GREEN (Ref # 55028A)	55028-0588-36T	1
COWLING,UPP,LH,C.L.GREEN (Ref # 55028C)	55028-0588-51P	1
COWLING,UPP,LH,M.S.BLACK (Ref # 55028E)	55028-0588-660	1
COWLING,UPP,RH,M.M.C.GREEN (Ref # 55028G)	55028-0589-36T	1
COWLING,UPP,RH,C.L.GREEN (Ref # 55028I)	55028-0589-51P	1
COWLING,UPP,RH,M.S.BLACK (Ref # 55028K)	55028-0589-660	1
NUT,WELL,5MM (Ref # 92015)	92015-1757	4
BOLT,SOCKET,5X16 (Ref # 92154)	92154-1701	4
DAMPER,12X23 (Ref # 92161)	92161-1367	3
SCREW,5X12 (Ref # 92172)	92172-0821	2
WASHER,NYLON,5.3X11.5X0.5 (Ref # 92200)	92200-1480	4
NUT,5MM (Ref # 92210)	92210-0351	4