


# 2008 Brute Force 650 4x4 Hardwoods Green HD

## PARTS DIAGRAM Shock Absorber(s)

F2280

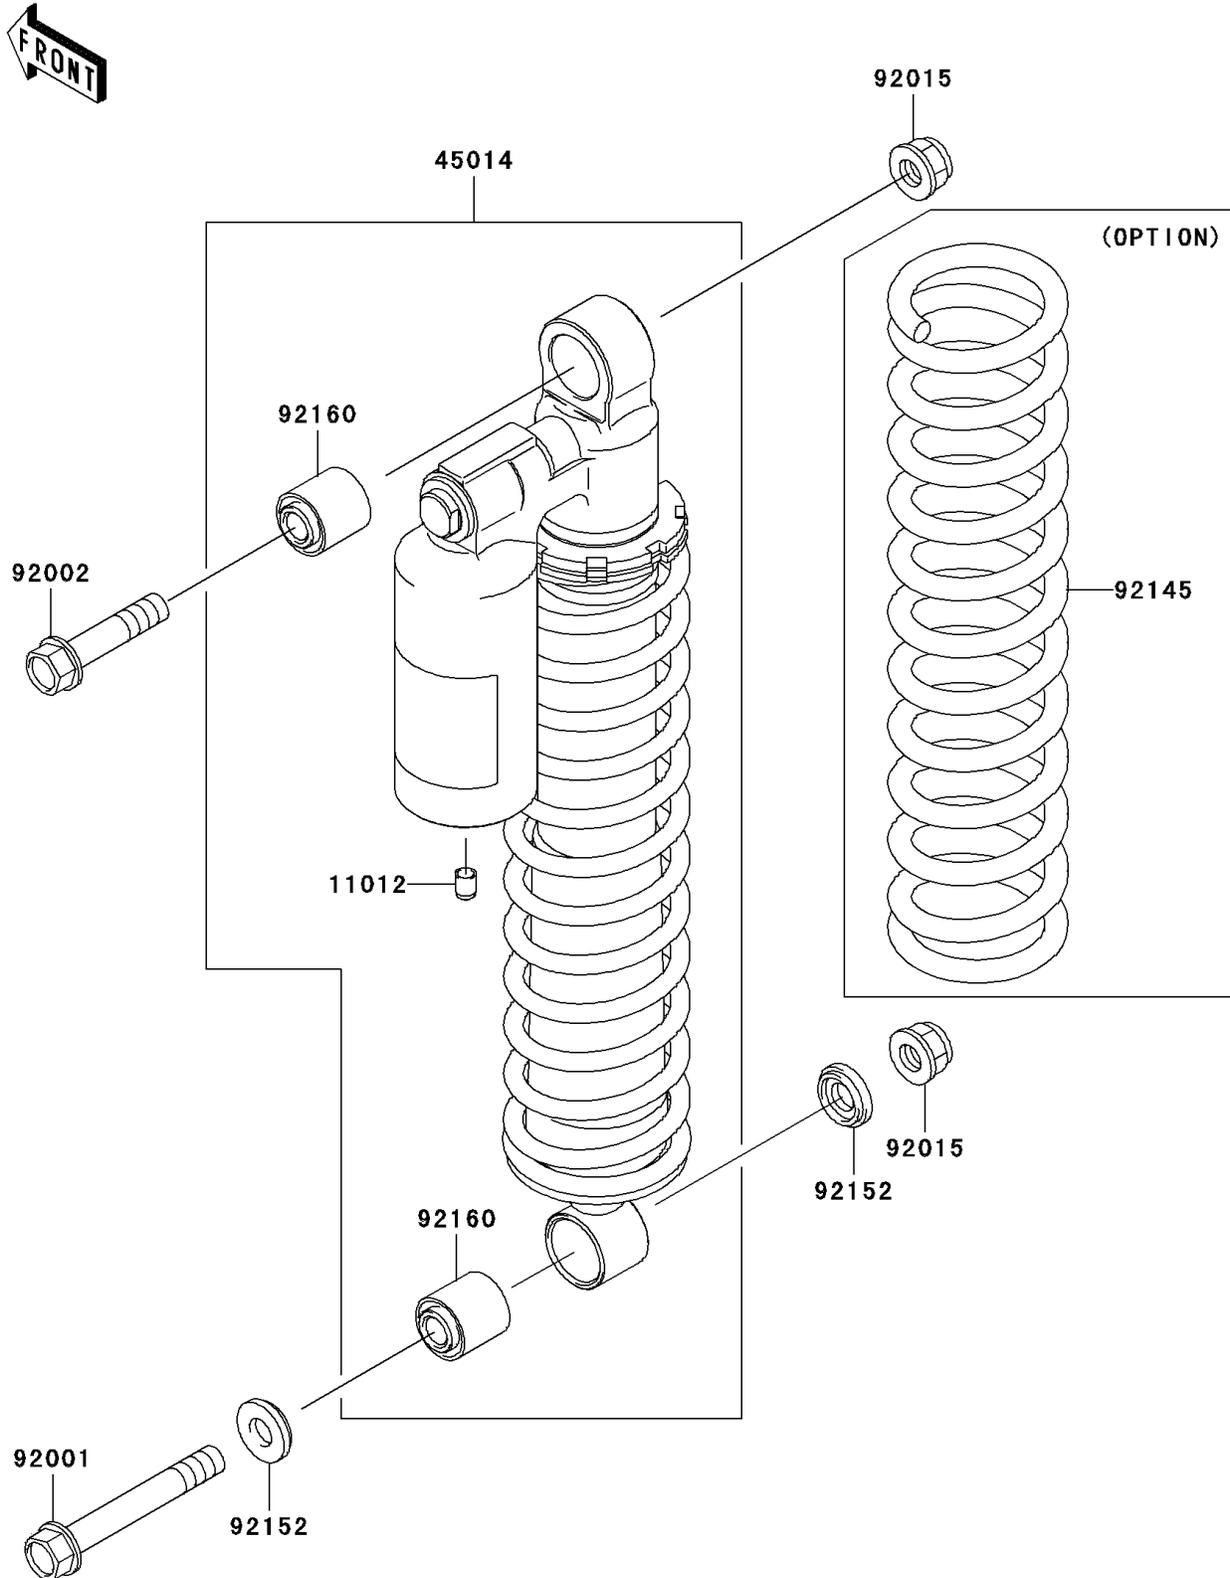

# 2008 Brute Force 650 4x4 Hardwoods Green HD

**Kawasaki**  
Let the Good Times Roll®

## PARTS LIST

### Shock Absorber(s)

ITEM NAME	PART NUMBER	QUANTITY
CAP (Ref # 11012)	11012-1283	1
SHOCKABSORBER (Ref # 45014)	45014-0028	1
BOLT,FLANGED,12X88 (Ref # 92001)	92001-1693	1
BOLT,FLANGED,12X55 (Ref # 92002)	92002-1840	1
NUT,FLANGED,LOCK,12MM (Ref # 92015)	92015-1617	2
SPRING,REAR SHOCK,K=24.5N/MM (Ref # 92145)	92145-0231	1
COLLAR (Ref # 92152)	92152-1293	2
DAMPER,SHOCKABSORBER (Ref # 92160)	92160-1777	2