


## 2007 Brute Force 650 4x4i Hardwoods Green HD PARTS DIAGRAM

Footrests

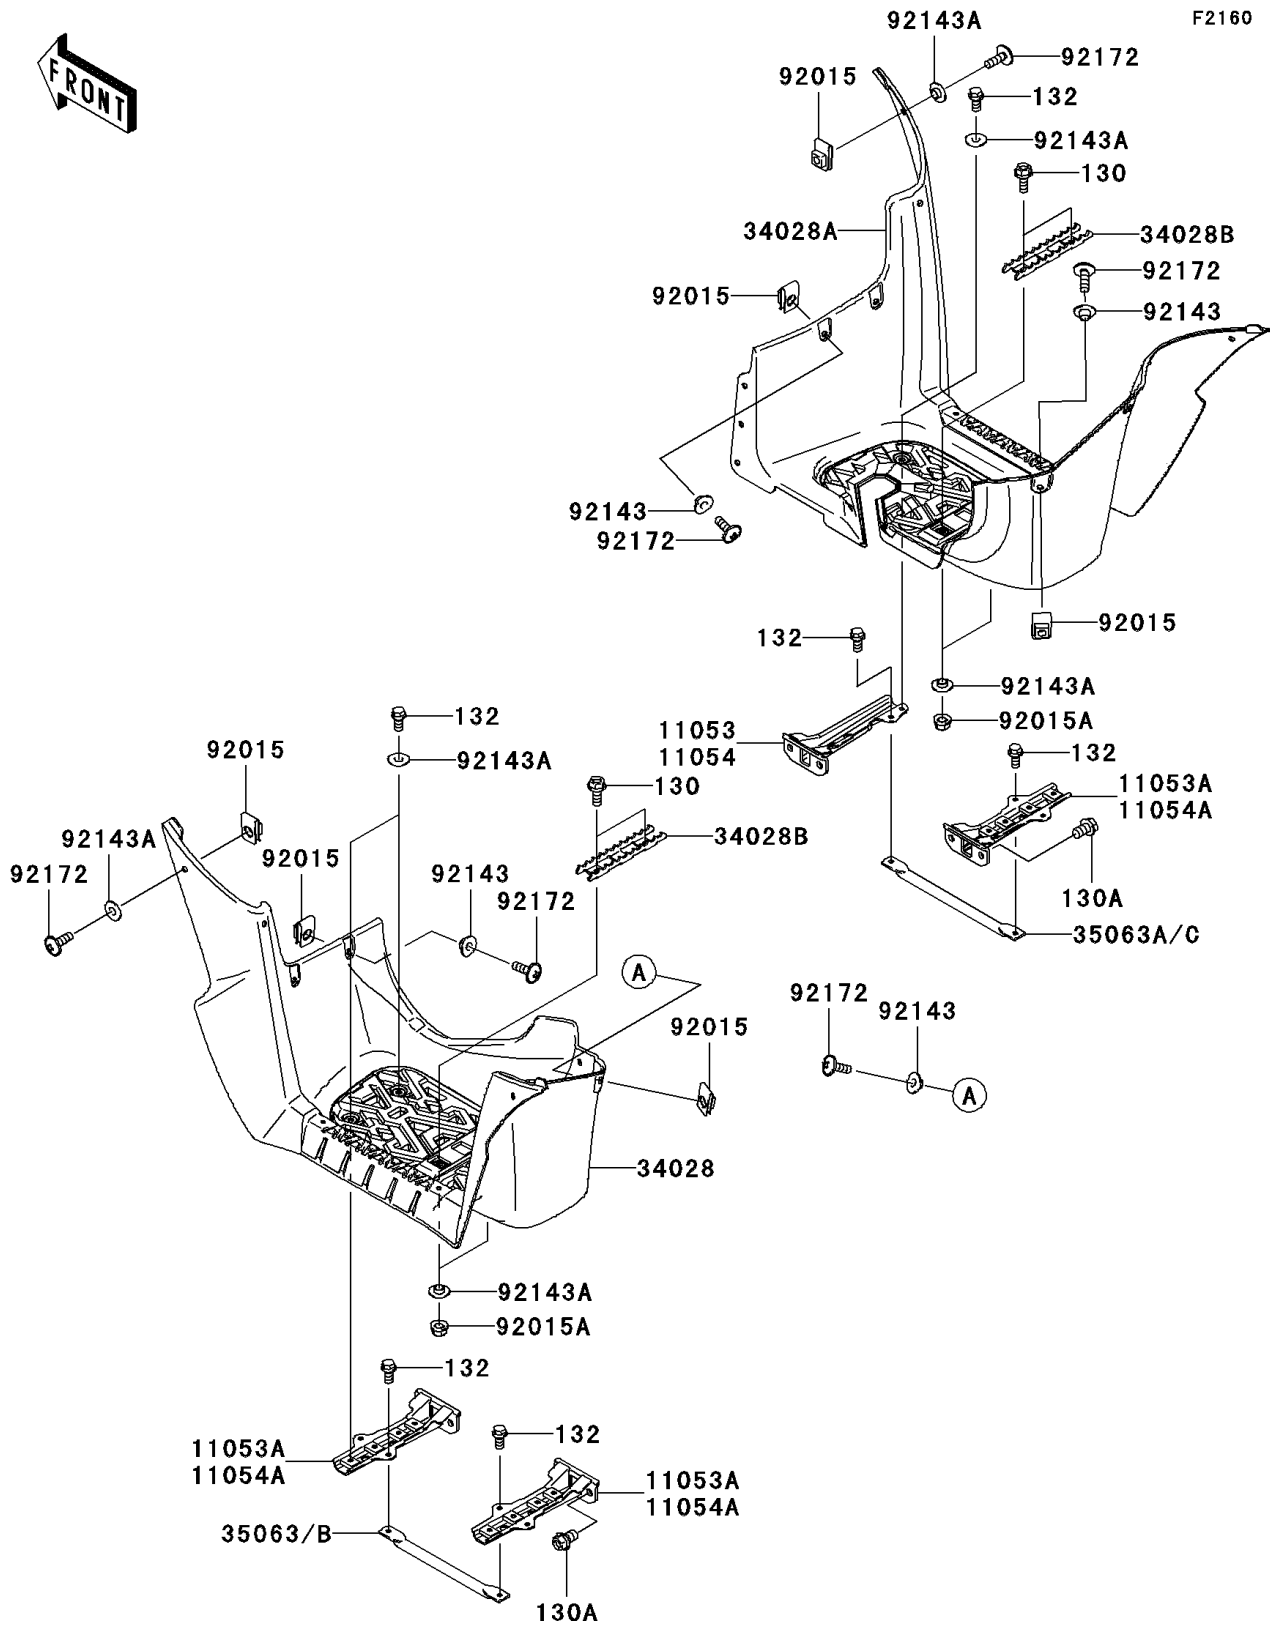

## 2007 Brute Force 650 4x4i Hardwoods Green HD PARTS LIST

Footrests

ITEM NAME	PART NUMBER	QUANTITY
BOLT-FLANGED,6X16 (Ref # 130)	130BB0616	1
BOLT-FLANGED,10X16 (Ref # 130A)	130CB1016	1
BOLT-FLANGED-SMALL,6X12 (Ref # 132)	132BB0612	1
BRACKET,FOOT BOARD,RH (Ref # 11053)	11053-0994	1
BRACKET,FOOT BOARD (Ref # 11053A)	11053-0996	1
STEP,FOOT BOARD,LH,F.BLACK (Ref # 34028)	34028-0054-6Z	1
STEP,FOOT BOARD,RH,F.BLACK (Ref # 34028A)	34028-0055-6Z	1
STEP,FOOT PEG,F.BLACK (Ref # 34028B)	34028-1487-21	1
STAY,STEP,LH (Ref # 35063)	35063-0098	1
STAY,STEP,RH (Ref # 35063A)	35063-0099	1
NUT,6MM (Ref # 92015)	92015-1602	1
NUT,LOCK,FLANGED,6MM (Ref # 92015A)	92015-1603	1
COLLAR (Ref # 92143)	92143-1057	1
COLLAR (Ref # 92143A)	92143-1087	1
SCREW,6X18 (Ref # 92172)	92172-0002	1