


Let the good times roll®

2010 Brute Force 650 4x4i Hardwoods Green HD (Canada Only)

FRONT ENDER(S) PARTS DIAGRAM

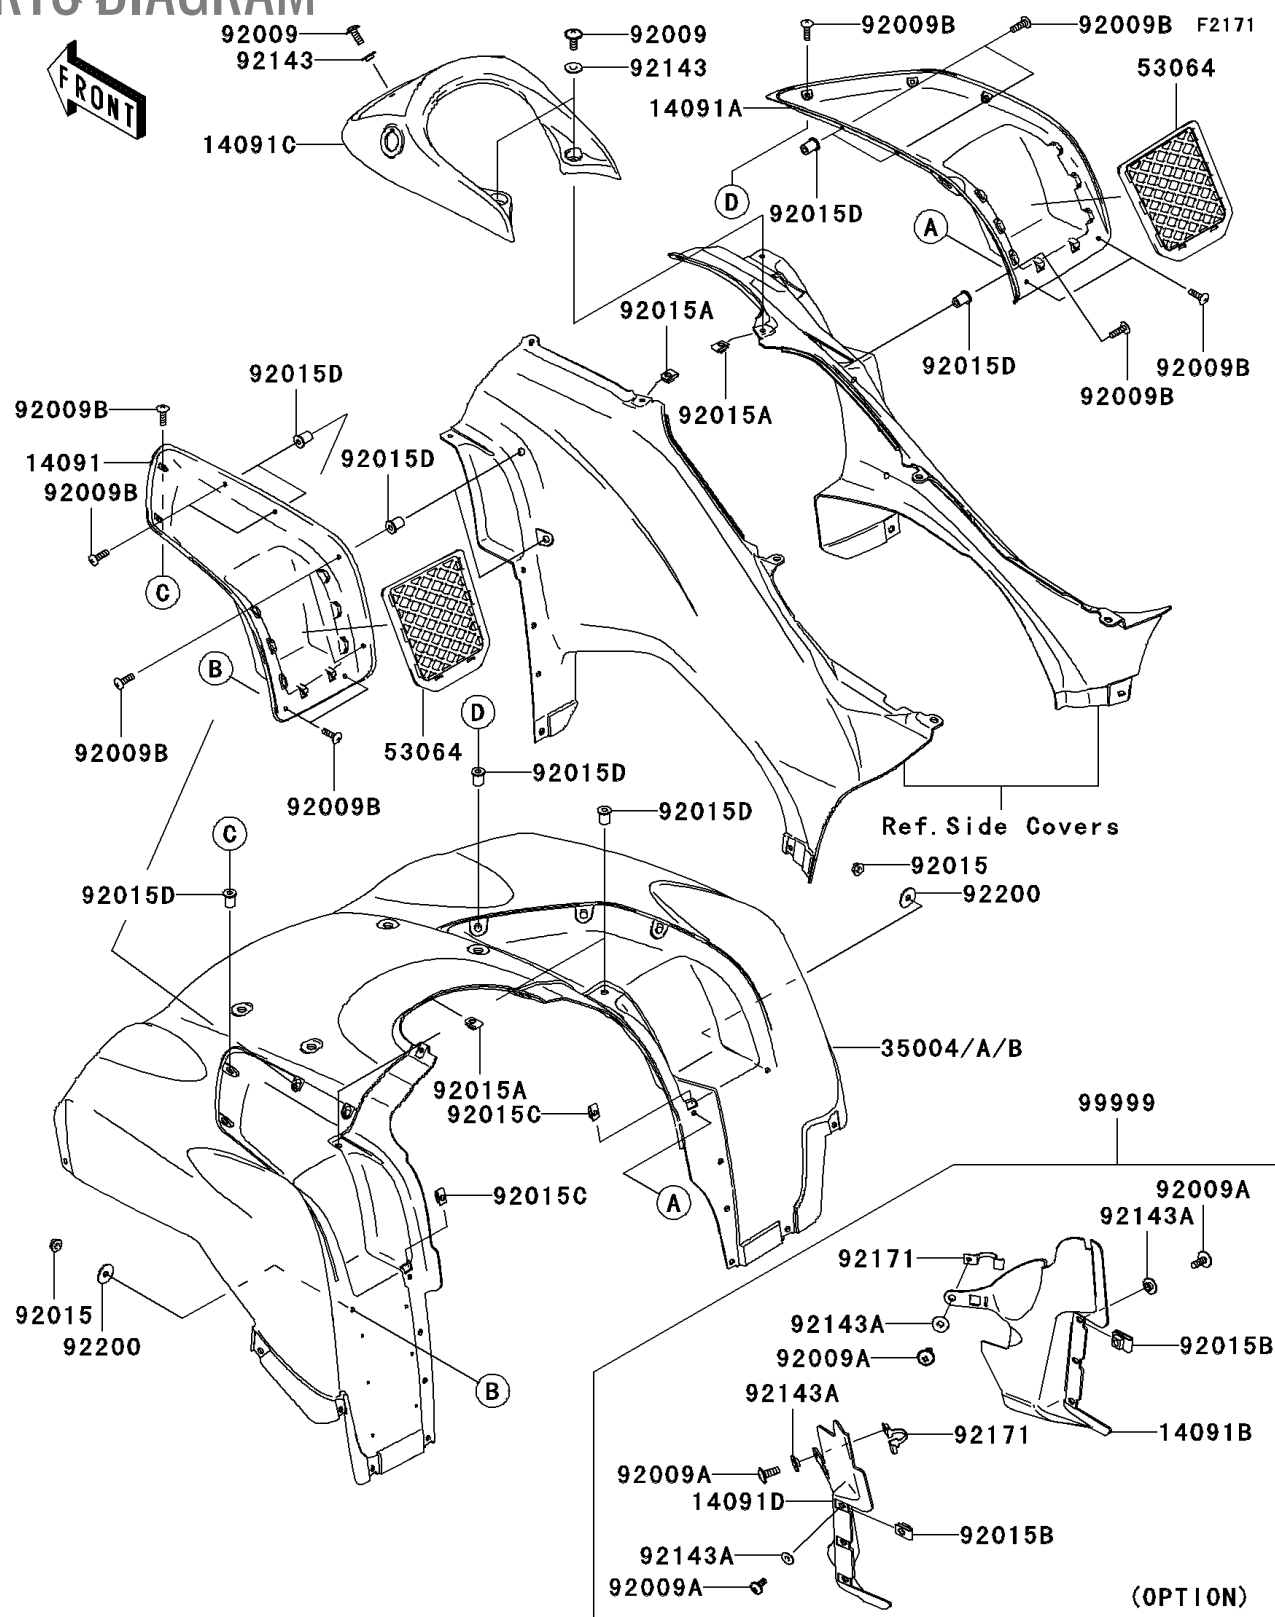

2010 Brute Force 650 4x4i Hardwoods Green HD (Canada Only)

PARTS LIST

ITEM NAME	PART NUMBER	QUANTITY
COVER,POCKET,LH,F.BLACK (Ref # 14091)	14091-0135-6Z	1
COVER,POCKET,RH,F.BLACK (Ref # 14091A)	14091-0136-6Z	1
COVER,SIDE,INNER,RH (Ref # 14091B)	14091-0179	1
COVER,TOP,F.BLACK (Ref # 14091C)	14091-0270-6Z	1
COVER,SIDE,INNER,LH (Ref # 14091D)	14091-0337	1
FENDER-FRONT,CAMOUFLAGE (Ref # 35004A)	35004-0107-16P	1
NET-CARGO (Ref # 53064)	53064-0002	2
SCREW,6X16 (Ref # 92009)	92009-1621	3
SCREW,6X16 (Ref # 92009A)	92009-1621	8
SCREW,5X18 (Ref # 92009B)	92009-1655	17
NUT,FLANGED,5MM (Ref # 92015)	92015-1259	2
NUT,6MM (Ref # 92015A)	92015-1602	3
NUT,6MM (Ref # 92015B)	92015-1602	6
NUT,5MM (Ref # 92015C)	92015-1710	2
NUT,WELL,5MM (Ref # 92015D)	92015-1757	15
COLLAR (Ref # 92143)	92143-1087	3
COLLAR (Ref # 92143A)	92143-1087	8
CLAMP (Ref # 92171)	92171-0223	2
WASHER,5.5X20X1.2 (Ref # 92200)	92200-0284	2
INNER FENDER KIT (Ref # 99999)	99999-0055	1