


2009 Brute Force 650 4x4i Hardwoods Green HD PARTS DIAGRAM

Shock Absorber(s)

F2280

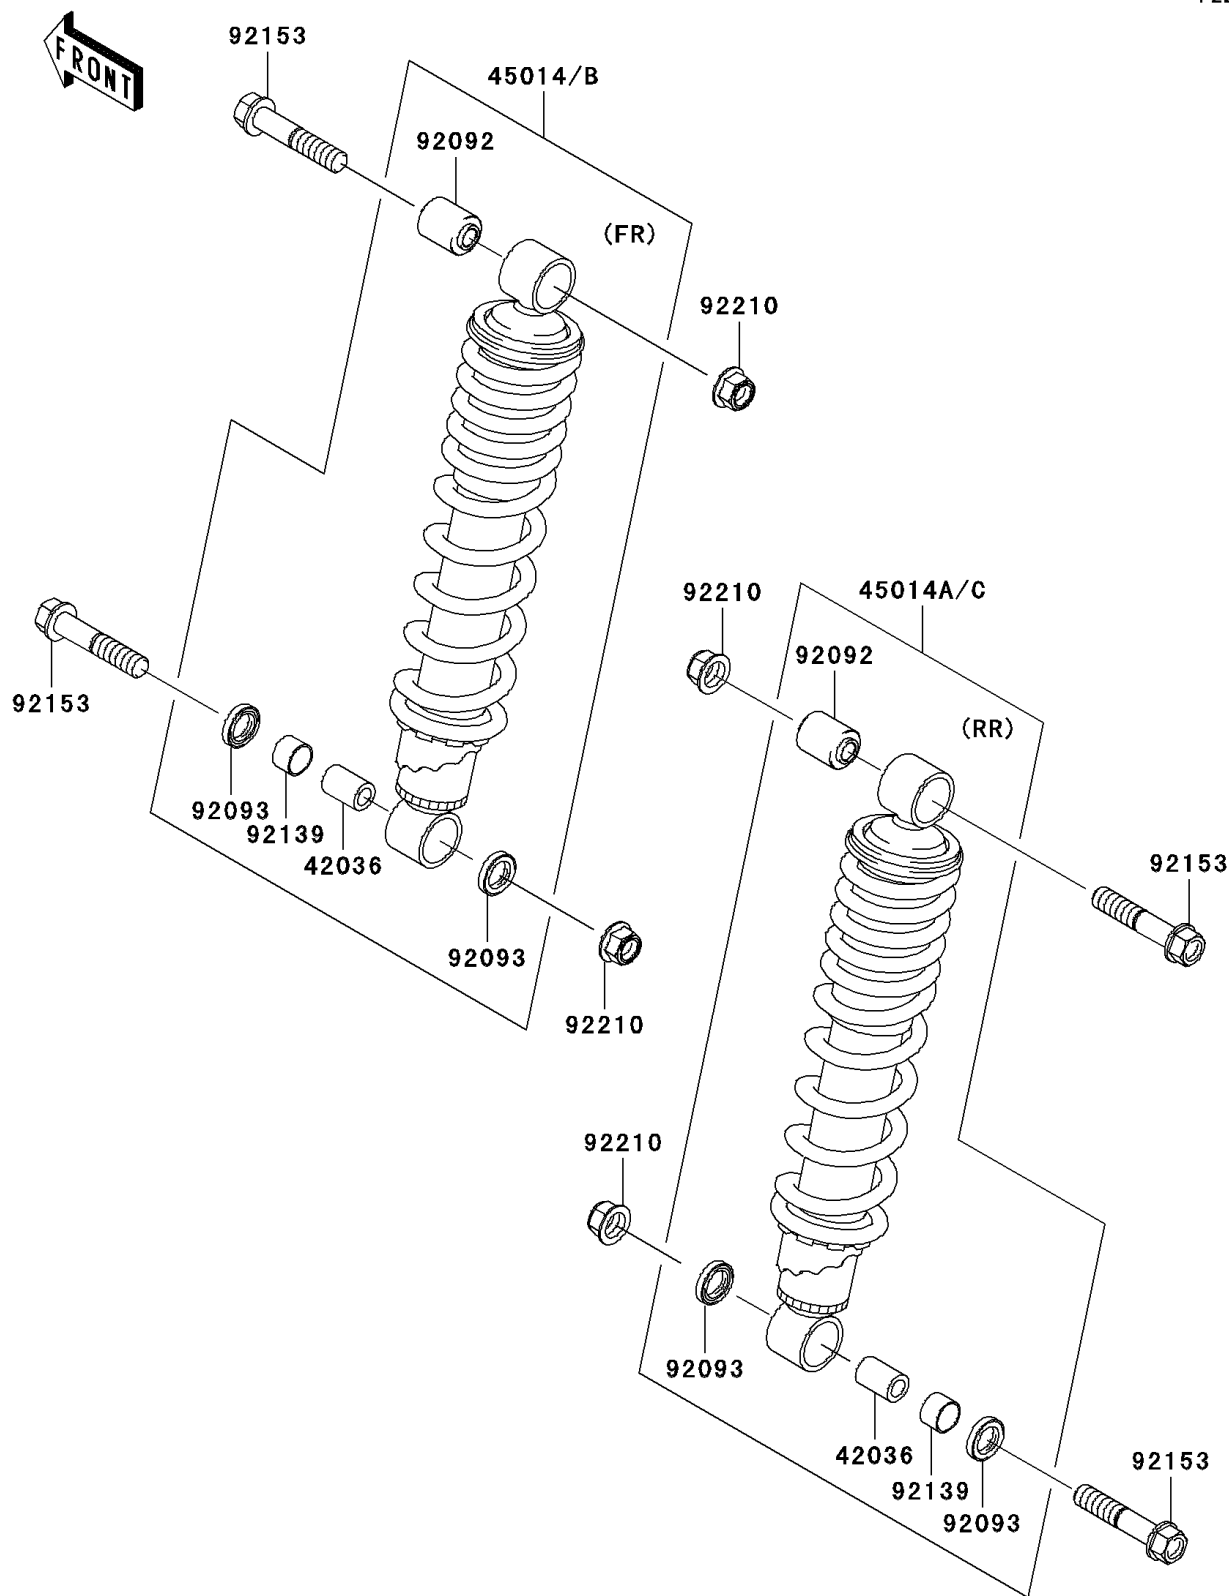

2009 Brute Force 650 4x4i Hardwoods Green HD PARTS LIST

Shock Absorber(s)

ITEM NAME	PART NUMBER	QUANTITY
SLEEVE (Ref # 42036)	42036-0018	4
SHOCKABSORBER,FR,E COAT BLACK (Ref # 45014B)	45014-0203-17D	2
SHOCKABSORBER,RR,E COAT BLACK (Ref # 45014C)	45014-0204-17D	2
BUSHING-RUBBER (Ref # 92092)	92092-0007	4
SEAL (Ref # 92093)	92093-0033	8
BUSHING (Ref # 92139)	92139-0084	4
BOLT,FLANGED,10X50 (Ref # 92153)	92153-1139	8
NUT,LOCK,FLANGED,10MM (Ref # 92210)	92210-0276	8