


2004 Prairie 700 4x4 Hardwoods Green HD PARTS DIAGRAM

Footrests

F2160

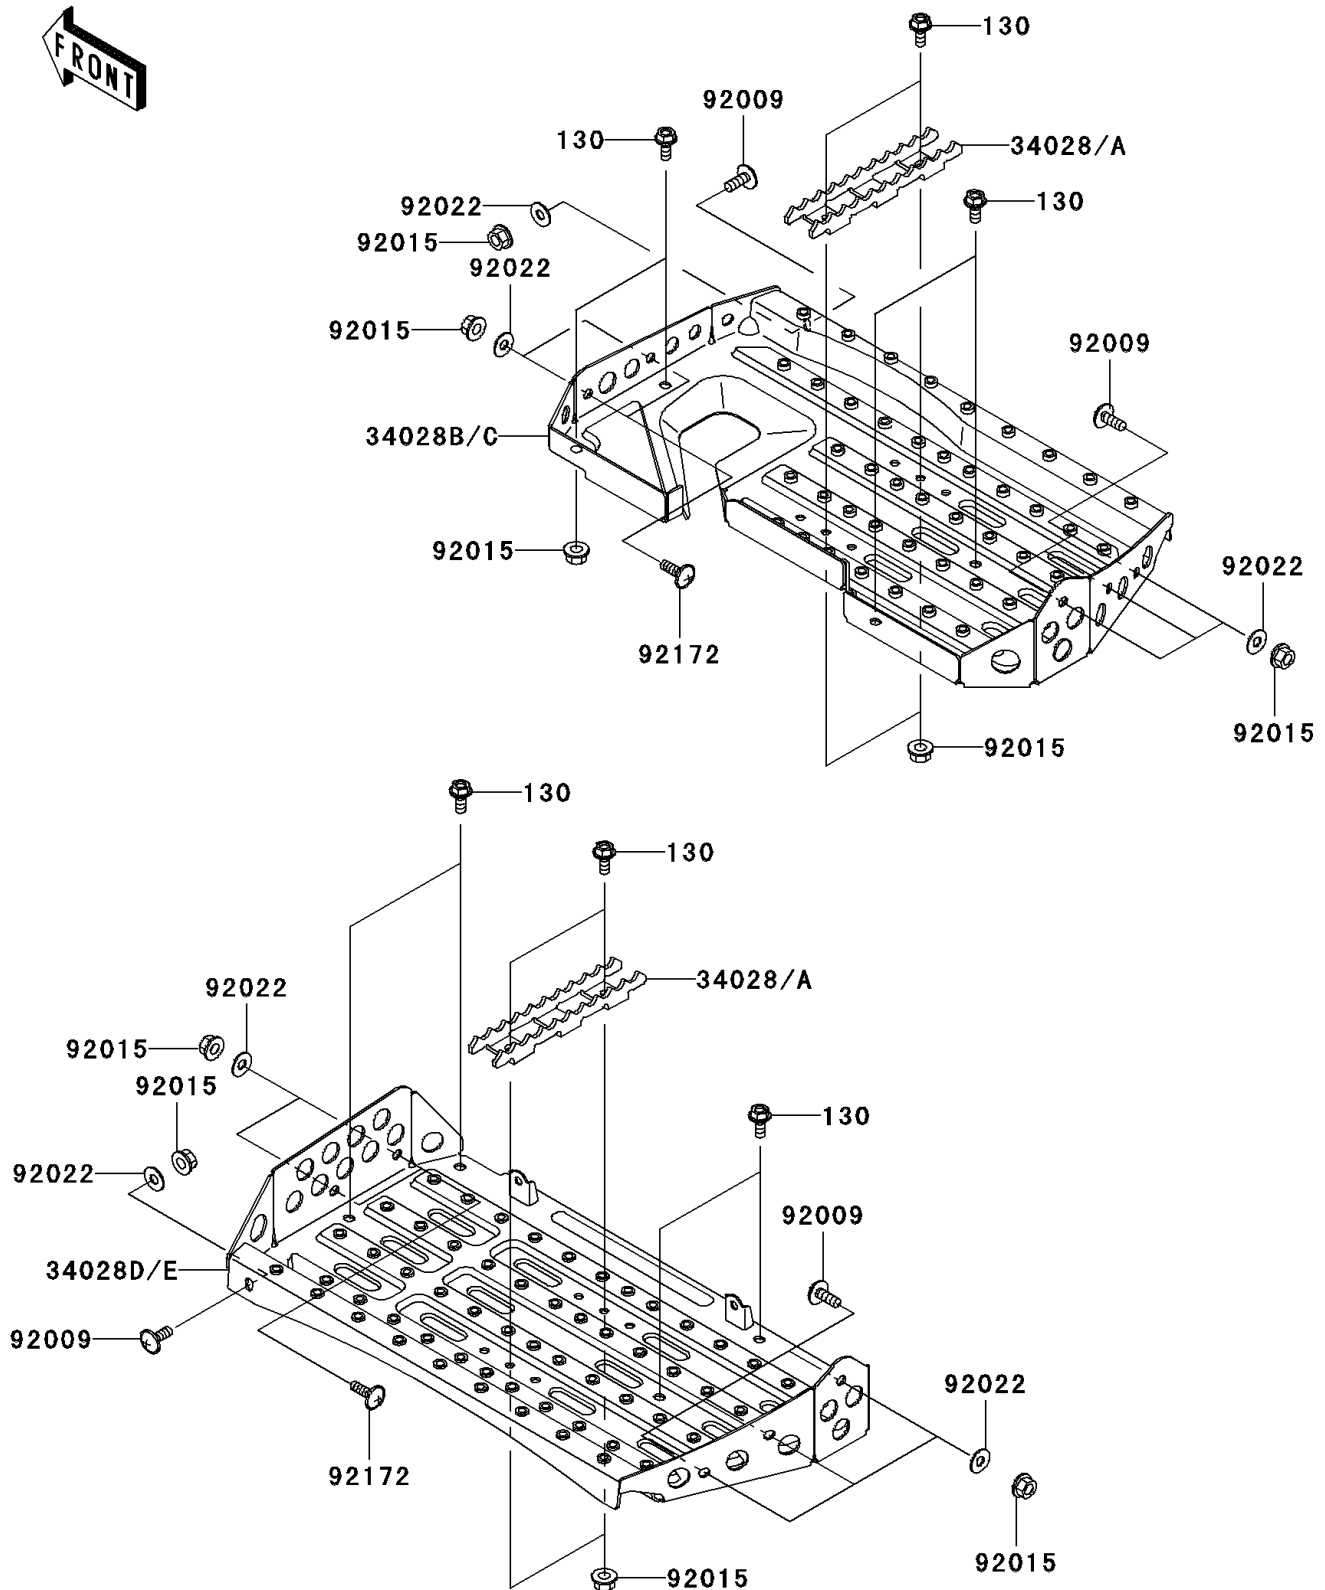

2004 Prairie 700 4x4 Hardwoods Green HD PARTS LIST

Footrests

ITEM NAME	PART NUMBER	QUANTITY
BOLT-FLANGED,6X14 (Ref # 130)	130J0614	12
STEP,FOOT PEG,S.GOLD (Ref # 34028)	34028-1487-UF	2
STEP,RH,S.GOLD (Ref # 34028B)	34028-1513-UF	1
STEP,LH,S.GOLD (Ref # 34028D)	34028-1521-UF	1
SCREW,6X16 (Ref # 92009)	92009-1621	8
NUT,FLANGED,6MM (Ref # 92015)	92015-1367	17
WASHER,6.5X16X1.0 (Ref # 92022)	92022-1093	12
SCREW,6X18 (Ref # 92172)	92172-0002	4