


2018 NINJA® 1000 ABS

PARTS DIAGRAM

Cowling

Kawasaki

Let the Good Times Roll®

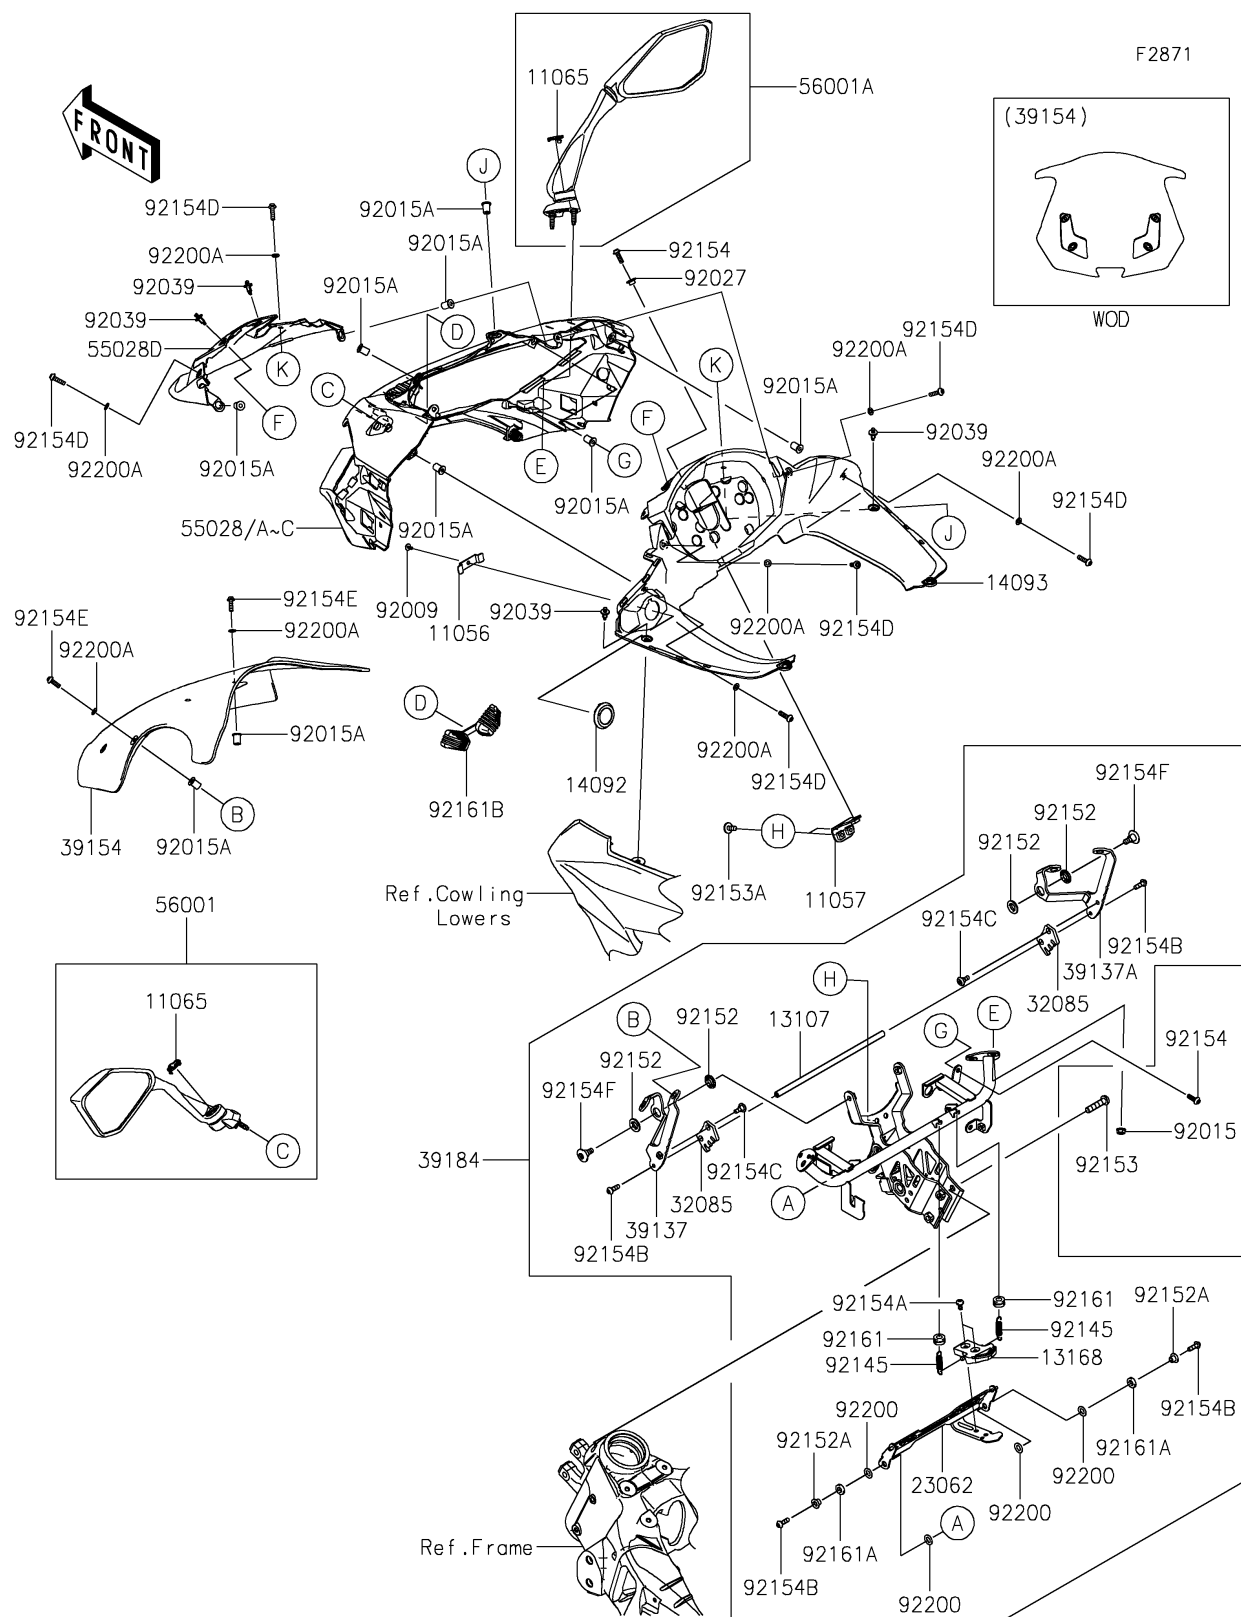

2018 NINJA® 1000 ABS

PARTS LIST

Cowling

ITEM NAME	PART NUMBER	QUANTITY
BRACKET (Ref # 11056)	11056-0373	1
BRACKET,METER COVER (Ref # 11057)	11057-0403	1
CAP,MIRROR (Ref # 11065)	11065-0945	2
SHAFT (Ref # 13107)	13107-0241	1
LEVER,ADJUST (Ref # 13168)	13168-0211	1
COVER,DC SOCKET (Ref # 14092)	14092-0214	1
COVER,METER (Ref # 14093)	14093-0528	1
BRACKET-COMP (Ref # 23062)	23062-0136	1
STOPPER (Ref # 32085)	32085-0201	2
STAY-COMP,LH (Ref # 39137)	39137-0670	1
STAY-COMP,RH (Ref # 39137A)	39137-0671	1
WINDSHIELD (Ref # 39154)	39154-0357	1
BRACKET-ASSY,WINDSHIELD (Ref # 39184)	39184-0724	1
COWLING,UPP,M.M.F.SILVER (Ref # 55028B)	55028-0611-60S	1
COWLING,UPP,M.S.BLACK (Ref # 55028C)	55028-0611-660	1
COWLING,FR (Ref # 55028D)	55028-0621	1
MIRROR-ASSY,LH (Ref # 56001)	56001-0259	1
MIRROR-ASSY,RH (Ref # 56001A)	56001-0260	1
SCREW,TAPPING,4X8 (Ref # 92009)	92009-1155	1
NUT,FLANGED,6MM,BLACK (Ref # 92015)	92015-1233	4
NUT,WELL,5MM (Ref # 92015A)	92015-1757	12
COLLAR (Ref # 92027)	92027-1880	1
RIVET (Ref # 92039)	92039-0068	4
SPRING (Ref # 92145)	92145-0805	2
COLLAR,10X20X3.75 (Ref # 92152)	92152-0913	4
COLLAR,5.6X8X7.8 (Ref # 92152A)	92152-1506	2
BOLT,SOCKET,8X35 (Ref # 92153)	92153-0419	2
BOLT,SOCKET,6X14 (Ref # 92153A)	92153-1021	2
BOLT,SOCKET,5X16 (Ref # 92154)	92154-0209	3

2018 NINJA® 1000 ABS

PARTS LIST

Cowling

ITEM NAME	PART NUMBER	QUANTITY
BOLT,SOCKET,5X10 (Ref # 92154A)	92154-0211	2
BOLT,SOCKET,5X16 (Ref # 92154B)	92154-0287	4
BOLT,SOCKET,5X14 (Ref # 92154C)	92154-0427	2
BOLT,SOCKET,5X20 (Ref # 92154D)	92154-0919	6
BOLT,SOCKET,5X18 (Ref # 92154E)	92154-1945	4
BOLT,SOCKET,6X18 (Ref # 92154F)	92154-2316	2
DAMPER (Ref # 92161)	92161-0056	2
DAMPER,8.2X15X3 (Ref # 92161A)	92161-0998	2
DAMPER (Ref # 92161B)	92161-1886	1
WASHER,8.2X15X1 (Ref # 92200)	92200-0742	4
WASHER,5.2X10X1.0 (Ref # 92200A)	92200-1820	10