


## 2007 Vulcan 1600 Nomad PARTS DIAGRAM

Suspension/Shock Absorber

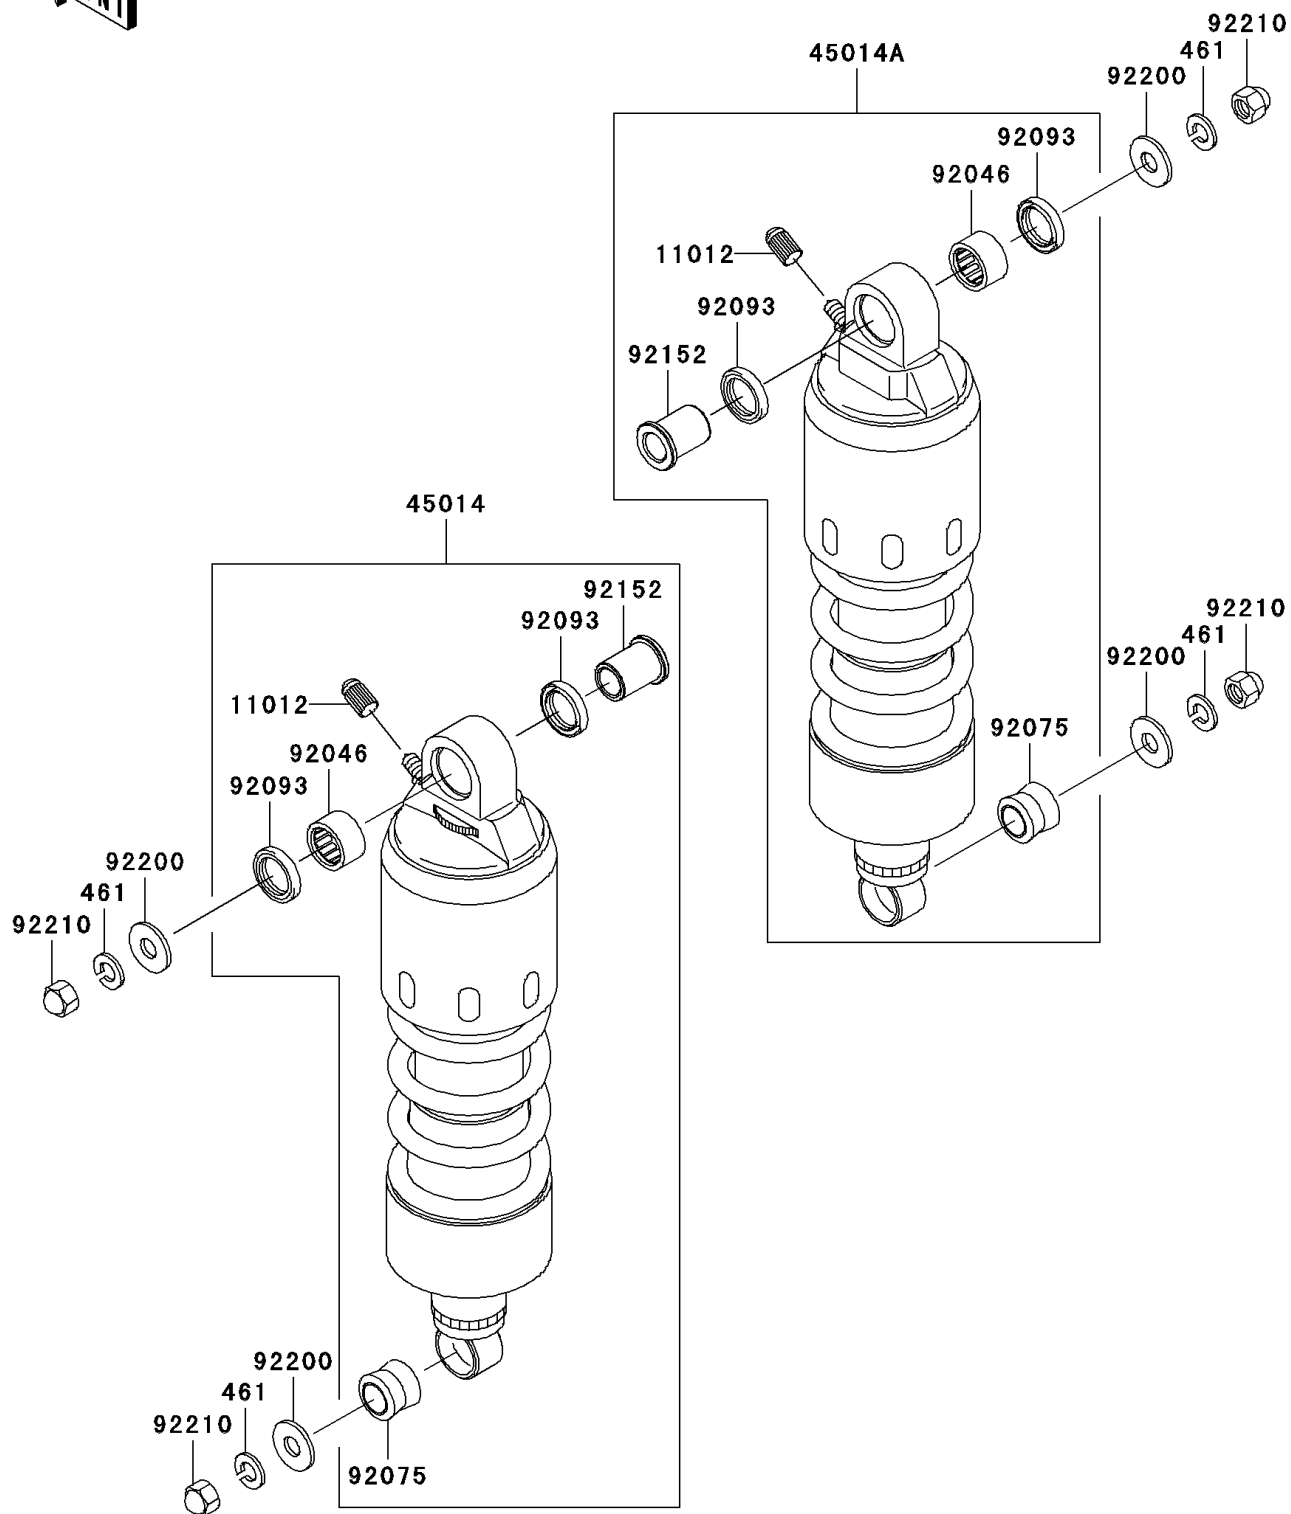

F2151



## 2007 Vulcan 1600 Nomad PARTS LIST

### Suspension/Shock Absorber

| ITEM NAME                          | PART NUMBER | QUANTITY |
|------------------------------------|-------------|----------|
| WASHER-SPRING,10MM (Ref # 461)     | 461S1000    | 4        |
| CAP (Ref # 11012)                  | 11012-1283  | 2        |
| SHOCKABSORBER,LH (Ref # 45014)     | 45014-0108  | 1        |
| SHOCKABSORBER,RH (Ref # 45014A)    | 45014-0109  | 1        |
| BEARING-NEEDLE (Ref # 92046)       | 92046-1296  | 2        |
| DAMPER,SHOCKABSORBER (Ref # 92075) | 92075-1387  | 2        |
| SEAL (Ref # 92093)                 | 92093-1552  | 4        |
| COLLAR (Ref # 92152)               | 92152-1336  | 2        |
| WASHER,10.5X26X2.5 (Ref # 92200)   | 92200-1565  | 4        |
| NUT,CAP,10MM (Ref # 92210)         | 92210-1288  | 4        |