


2009 Ninja® 650R

PARTS DIAGRAM

Footrests

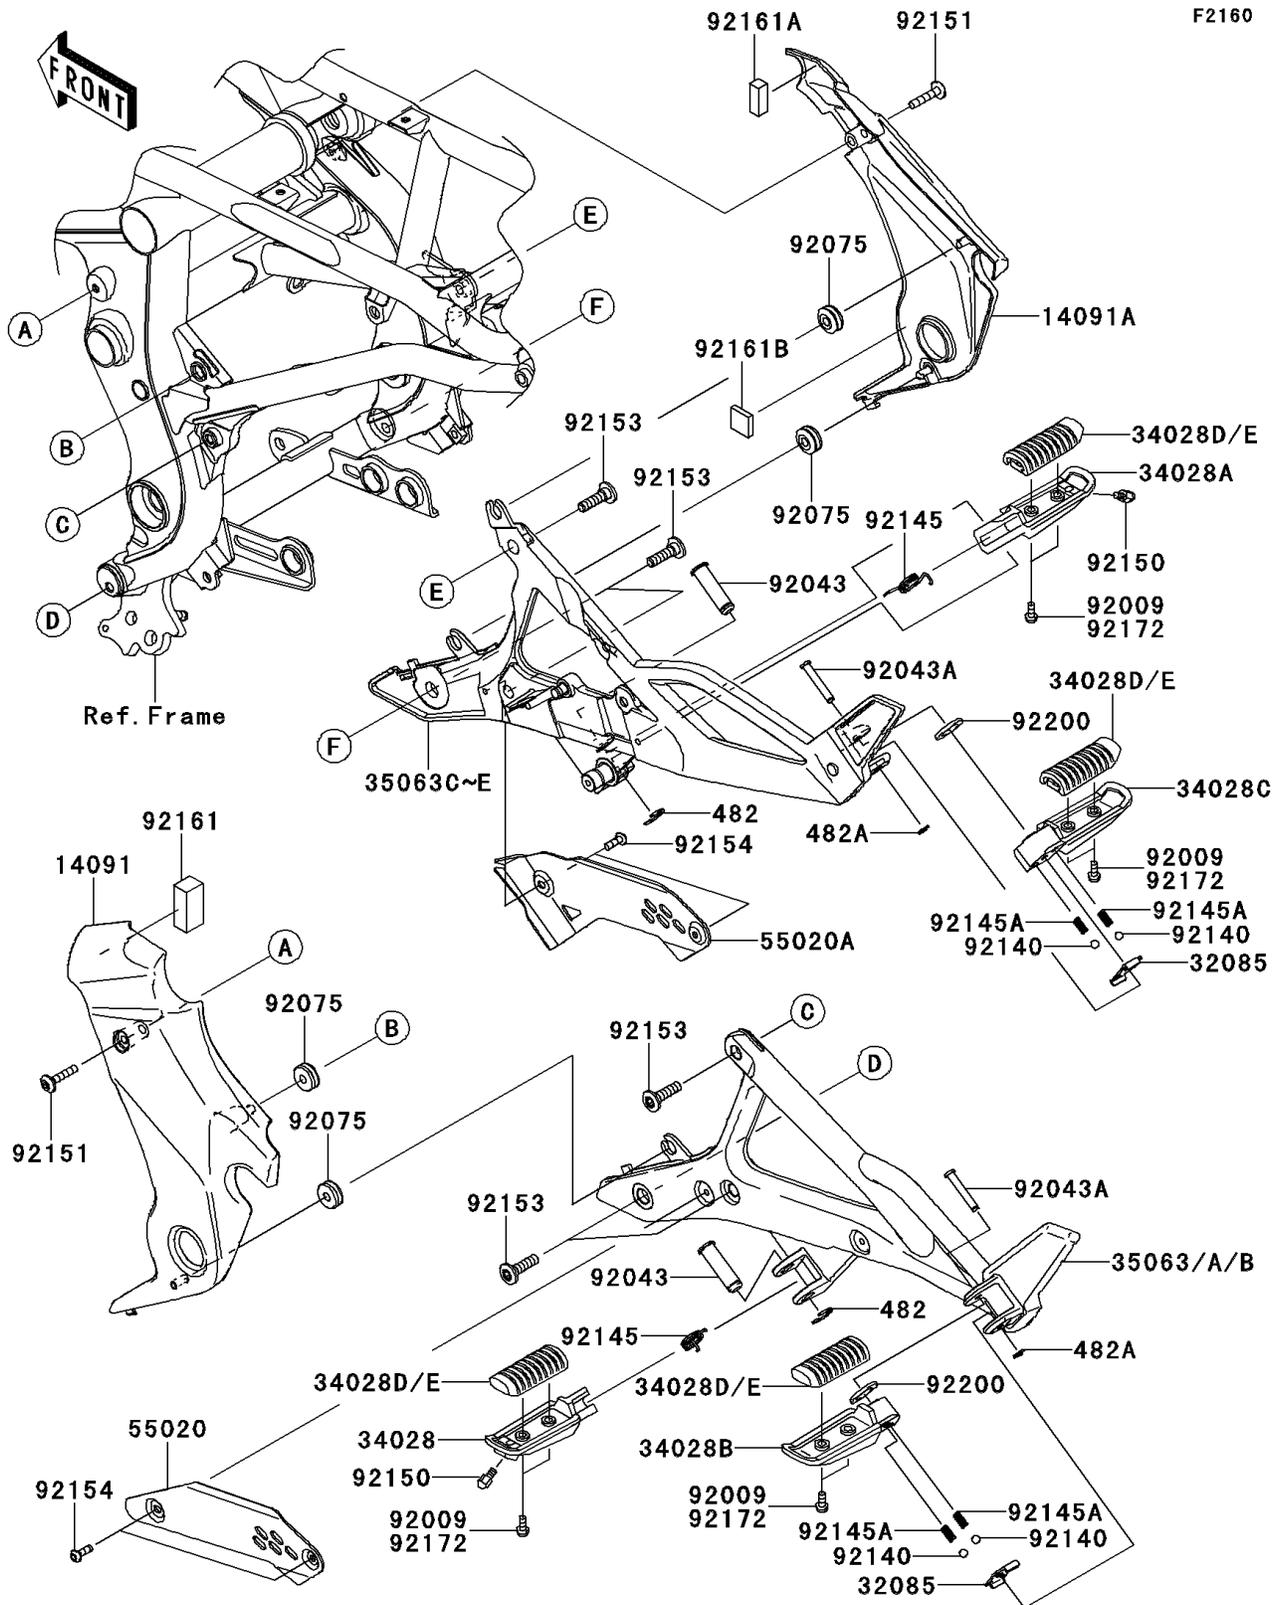

2009 Ninja® 650R

PARTS LIST

Footrests

ITEM NAME	PART NUMBER	QUANTITY
COVER,PIVOT,LH (Ref # 14091)	14091-1584	1
COVER,PIVOT,RH (Ref # 14091A)	14091-1585	1
STOPPER,REAR STEP (Ref # 32085)	32085-0047	2
STEP,FR,LH (Ref # 34028)	34028-0127	1
STEP,FR,RH (Ref # 34028A)	34028-0128	1
STEP,RR,LH (Ref # 34028B)	34028-0129	1
STEP,RR,RH (Ref # 34028C)	34028-0130	1
STEP,RUBBER (Ref # 34028E)	34028-1430	4
STAY,STEP,LH,F.M.GRAY (Ref # 35063A)	35063-0522-26M	1
STAY,STEP,LH,P.SILVER (Ref # 35063B)	35063-0522-458	1
STAY,STEP,RH,F.M.GRAY (Ref # 35063D)	35063-0523-26M	1
STAY,STEP,RH,P.SILVER (Ref # 35063E)	35063-0523-458	1
GUARD,STEP,LH (Ref # 55020)	55020-0461	1
GUARD,STEP,RH (Ref # 55020A)	55020-0597	1
SCREW,5X14 (Ref # 92009)	92009-1404	8
PIN,12X37.5 (Ref # 92043)	92043-0026	2
PIN,6X40 (Ref # 92043A)	92043-1595	2
DAMPER (Ref # 92075)	92075-1067	4
BALL,6.35MM (Ref # 92140)	92140-0008	4
SPRING,STEP RETURN (Ref # 92145)	92145-0723	2
SPRING (Ref # 92145A)	92145-1319	4
BOLT,BANK SENSOR (Ref # 92150)	92150-1114	2
BOLT,SOCKET,6X30 (Ref # 92151)	92151-1605	2
BOLT,SOCKET,8X30 (Ref # 92153)	92153-1630	6
BOLT,SOCKET,5X16 (Ref # 92154)	92154-0182	4
DAMPER,19X15X40 (Ref # 92161)	92161-0670	1
DAMPER,10X10X28 (Ref # 92161A)	92161-0671	1
DAMPER,UPP CNT COWLING (Ref # 92161B)	92161-0731	1
WASHER,16X26X2.3 (Ref # 92200)	92200-0043	2

2009 Ninja® 650R

PARTS LIST

Footrests

ITEM NAME	PART NUMBER	QUANTITY
CIRCLIP-TYPE-E,10MM (Ref # 482)	482EA0100	2
CIRCLIP-TYPE-E (Ref # 482A)	482EA5000	2