


2009 Ninja® 650R PARTS DIAGRAM

Cowling(Upper)

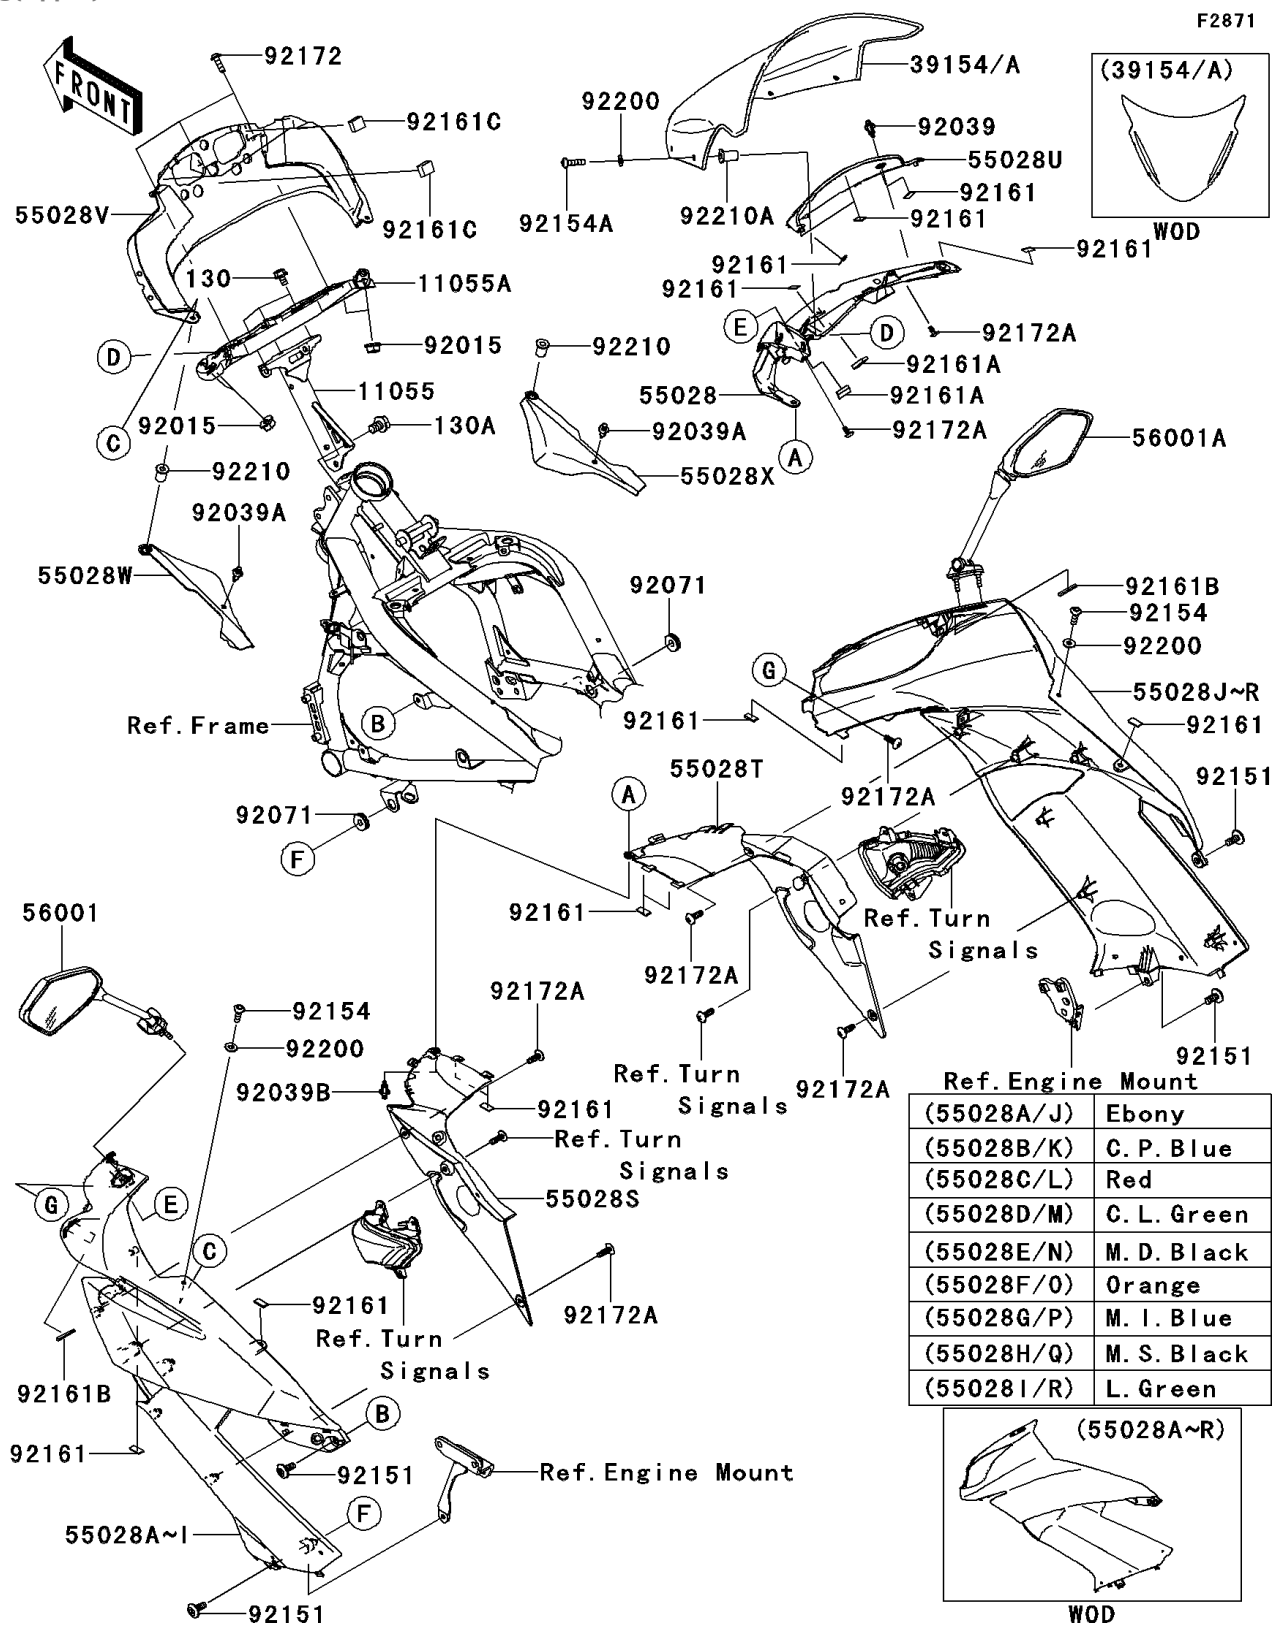

2009 Ninja® 650R PARTS LIST

Cowling(Upper)

ITEM NAME	PART NUMBER	QUANTITY
BRACKET,MAIN COWLING (Ref # 11055)	11055-0948	1
BRACKET,METER&MIRROR STAY (Ref # 11055A)	11055-0949	1
WINDSHIELD (Ref # 39154)	39154-0040	1
COWLING,UPP,CNT (Ref # 55028)	55028-0233	1
COWLING,UPP,LH,C.P.BLUE (Ref # 55028B)	55028-0234-15D	1
COWLING,UPP,LH,P.RED (Ref # 55028C)	55028-0234-15I	1
COWLING,UPP,LH,M.D.BLACK (Ref # 55028E)	55028-0234-15Q	1
COWLING,UPP,LH,L.GREEN (Ref # 55028I)	55028-0234-777	1
COWLING,UPP,RH,C.P.BLUE (Ref # 55028K)	55028-0235-15D	1
COWLING,UPP,RH,P.RED (Ref # 55028L)	55028-0235-15I	1
COWLING,UPP,RH,M.D.BLACK (Ref # 55028N)	55028-0235-15Q	1
COWLING,UPP,RH,L.GREEN (Ref # 55028R)	55028-0235-777	1
COWLING,INNER,FR,LH (Ref # 55028S)	55028-0241	1
COWLING,INNER,FR,RH (Ref # 55028T)	55028-0242	1
COWLING,METER (Ref # 55028U)	55028-0243	1
COWLING,INNER,CNT (Ref # 55028V)	55028-0246	1
COWLING,INNER,LH (Ref # 55028W)	55028-0247	1
COWLING,INNER,RH (Ref # 55028X)	55028-0248	1
MIRROR-ASSY,LH (Ref # 56001)	56001-0142	1
MIRROR-ASSY,RH (Ref # 56001A)	56001-0143	1
NUT,FLANGED,6MM,BLACK (Ref # 92015)	92015-1233	4
RIVET (Ref # 92039)	92039-0023	2
RIVET (Ref # 92039A)	92039-0051	2
RIVET (Ref # 92039B)	92039-1283	1
GROMMET (Ref # 92071)	92071-056	2
BOLT,SOCKET,6X14 (Ref # 92151)	92151-1654	4
BOLT,SOCKET,5X16 (Ref # 92154)	92154-0182	2
BOLT,SOCKET,5X20 (Ref # 92154A)	92154-0216	4
DAMPER (Ref # 92161)	92161-0726	14

2009 Ninja® 650R PARTS LIST

Cowling(Upper)

ITEM NAME	PART NUMBER	QUANTITY
DAMPER,UPP CNT COWLING (Ref # 92161A)	92161-0731	2
DAMPER,UPP SIDE COWLING (Ref # 92161B)	92161-0740	3
DAMPER,20X20X10 (Ref # 92161C)	92161-0835	3
SCREW,6X14 (Ref # 92172)	92172-0004	3
SCREW,TAPPING,5X16 (Ref # 92172A)	92172-0427	7
WASHER,NYLON,5.3X11.5X0.5 (Ref # 92200)	92200-0006	6
NUT,WELL,5MM (Ref # 92210)	92210-0498	2
NUT,POP,5MM (Ref # 92210A)	92210-1227	4
BOLT-FLANGED,6X12 (Ref # 130)	130BB0612	3
BOLT-FLANGED,8X12 (Ref # 130A)	130BB0812	2