


# 2013 Z1000

## PARTS DIAGRAM

### Cowling Lower

F2872

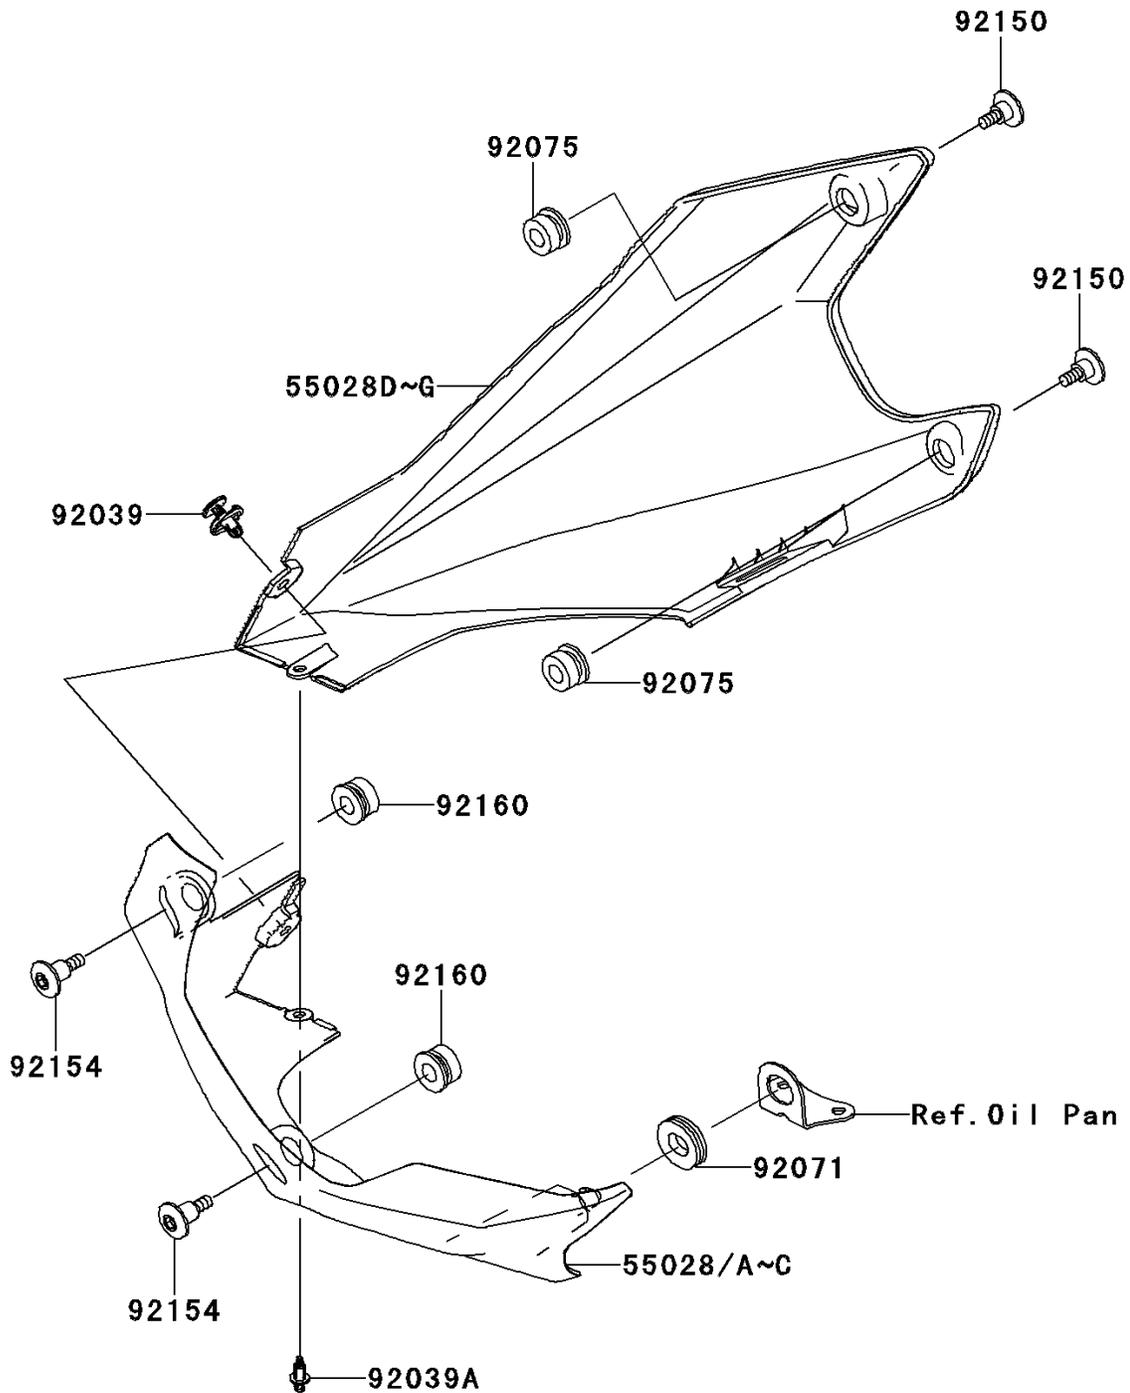

# 2013 Z1000

## PARTS LIST

### Cowling Lowers

ITEM NAME	PART NUMBER	QUANTITY
COWLING,LWR,LH,G.B.GREEN (Ref # 55028B)	55028-0288-40R	1
COWLING,LWR,RH,G.B.GREEN (Ref # 55028F)	55028-0289-40R	1
RIVET,HOLE 8MM (Ref # 92039)	92039-0014	1
RIVET (Ref # 92039A)	92039-0068	1
GROMMET (Ref # 92071)	92071-1043	1
DAMPER (Ref # 92075)	92075-1634	2
BOLT,SOCKET,6MM (Ref # 92150)	92150-1154	2
BOLT,6X24 (Ref # 92154)	92154-0348	2
DAMPER (Ref # 92160)	92160-1141	2