


2012 MULE™ 4010 TRANS4x4® CAMO PARTS DIAGRAM

Shock Absorber(s)

F2280

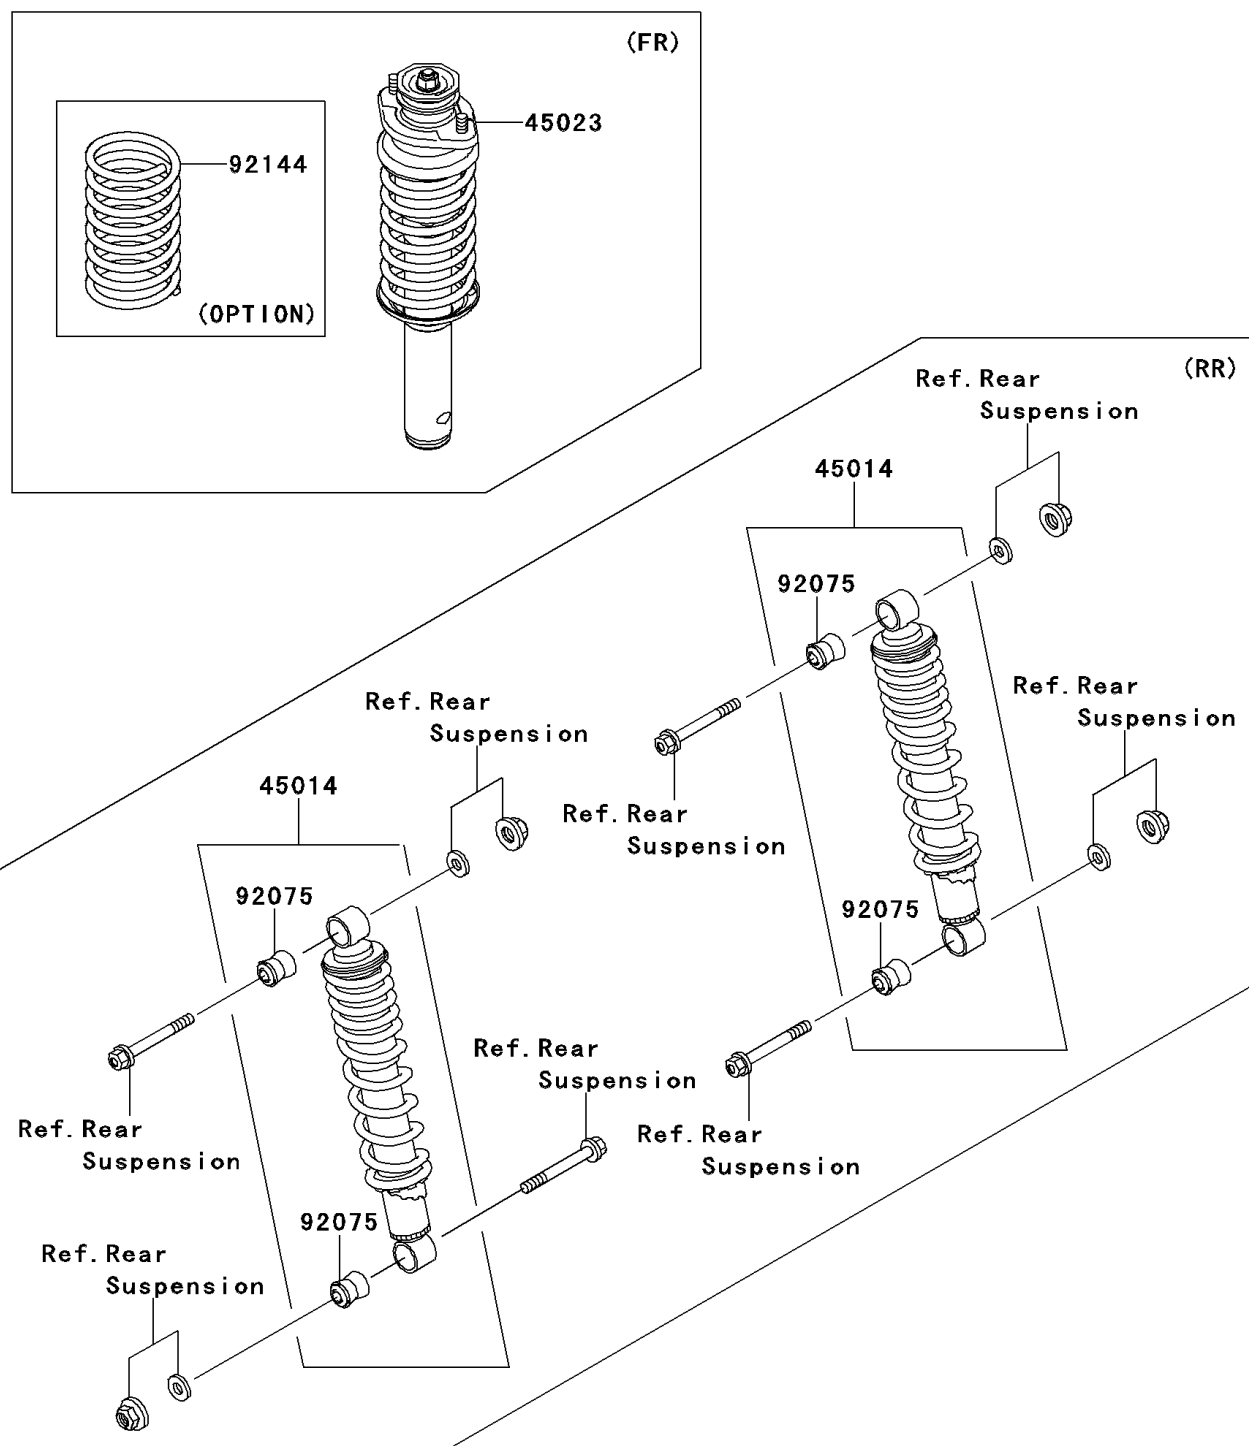

2012 MULE™ 4010 TRANS4x4® CAMO PARTS LIST

Shock Absorber(s)

ITEM NAME	PART NUMBER	QUANTITY
SHOCKABSORBER,RR (Ref # 45014)	45014-0259	2
STRUT (Ref # 45023)	45023-0005	2
DAMPER,SHOCKABSORBER (Ref # 92075)	92075-1784	4
SPRING,STRUT,K=30.7N/MM (Ref # 92144)	92144-1919	2