


2009 Brute Force® 750 4x4i

PARTS DIAGRAM

Shock Absorber(s)

F2280

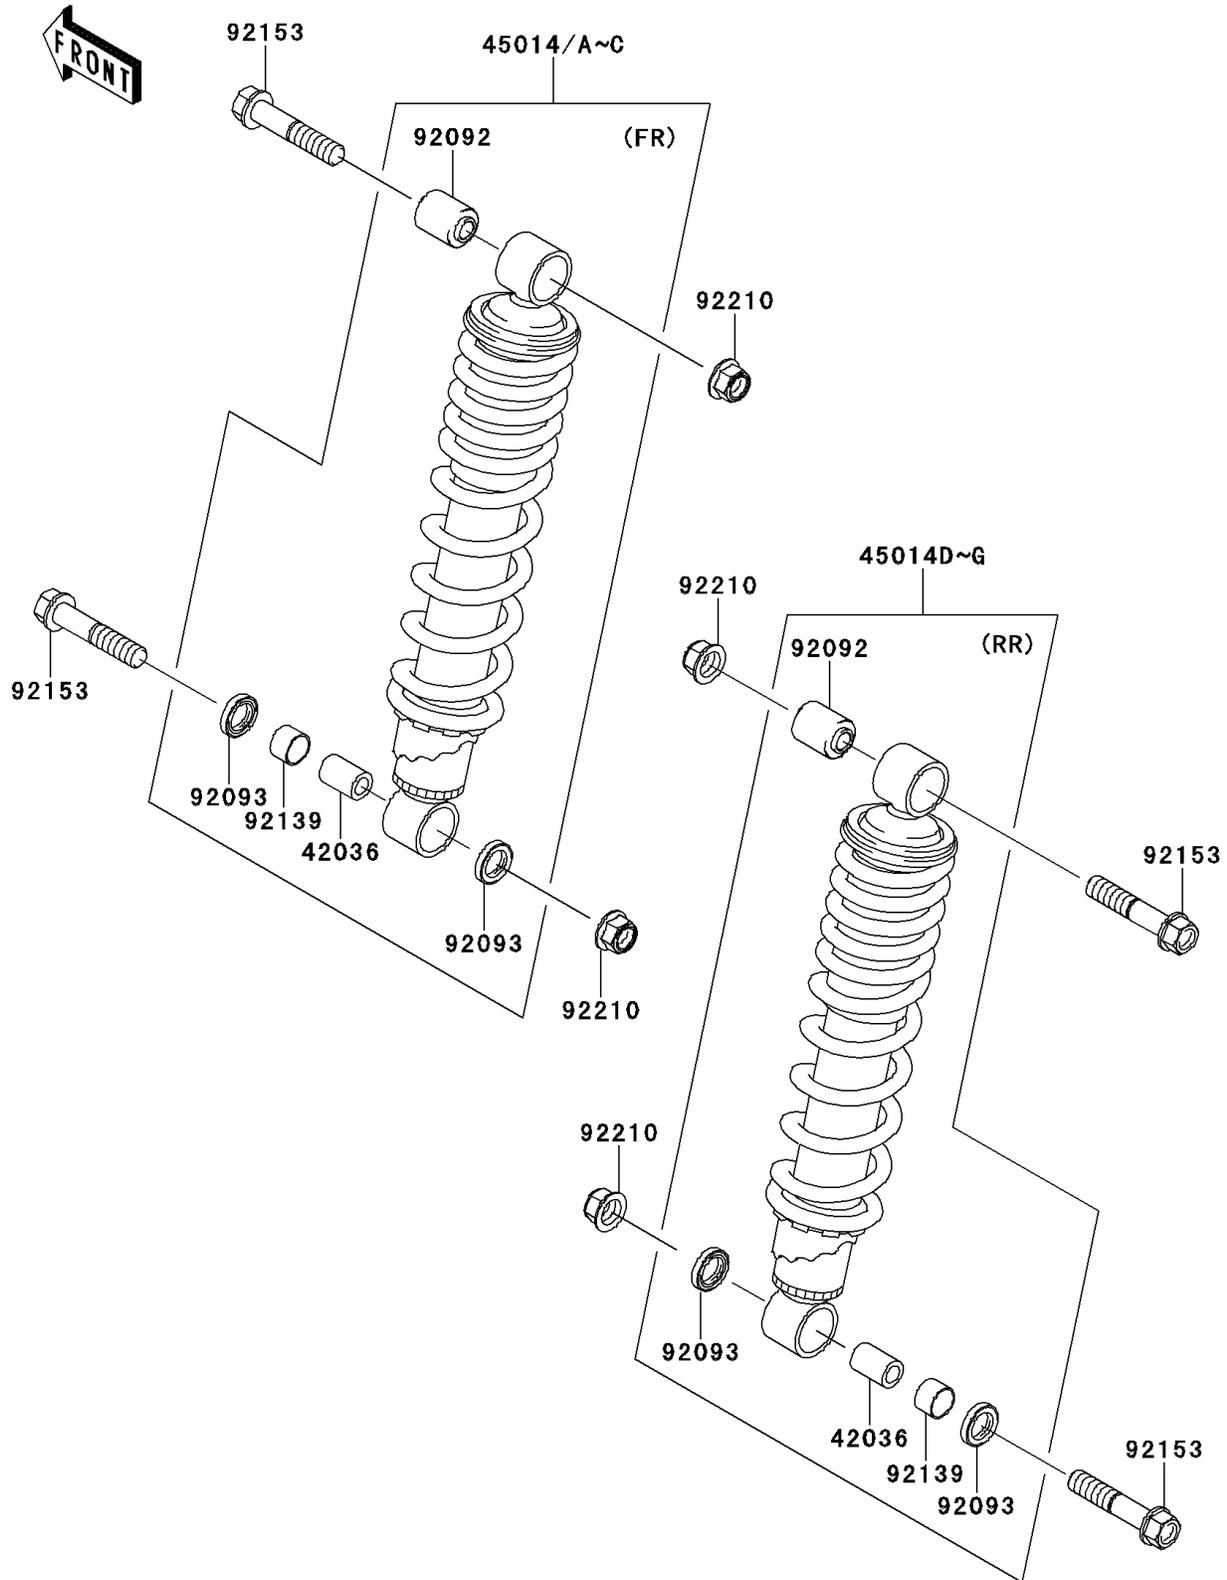

2009 Brute Force® 750 4x4i

PARTS LIST

Shock Absorber(s)

ITEM NAME	PART NUMBER	QUANTITY
SLEEVE (Ref # 42036)	42036-0018	4
SHOCKABSORBER,FR,P.WHITE (Ref # 45014A)	45014-0203-EH	2
SHOCKABSORBER,FR,S.RED (Ref # 45014B)	45014-0203-VM	2
SHOCKABSORBER,FR,BLACK (Ref # 45014C)	45014-0203-17D	2
SHOCKABSORBER,RR,P.WHITE (Ref # 45014E)	45014-0204-EH	2
SHOCKABSORBER,RR,S.RED (Ref # 45014F)	45014-0204-VM	2
SHOCKABSORBER,RR,BLACK (Ref # 45014G)	45014-0204-17D	2
BUSHING-RUBBER (Ref # 92092)	92092-0007	4
SEAL (Ref # 92093)	92093-0033	8
BUSHING (Ref # 92139)	92139-0084	4
BOLT,FLANGED,10X50 (Ref # 92153)	92153-1139	8
NUT,LOCK,FLANGED,10MM (Ref # 92210)	92210-0276	8