


# 2007 Brute Force 650 4x4i PARTS DIAGRAM

Shock Absorber(s)

F2280

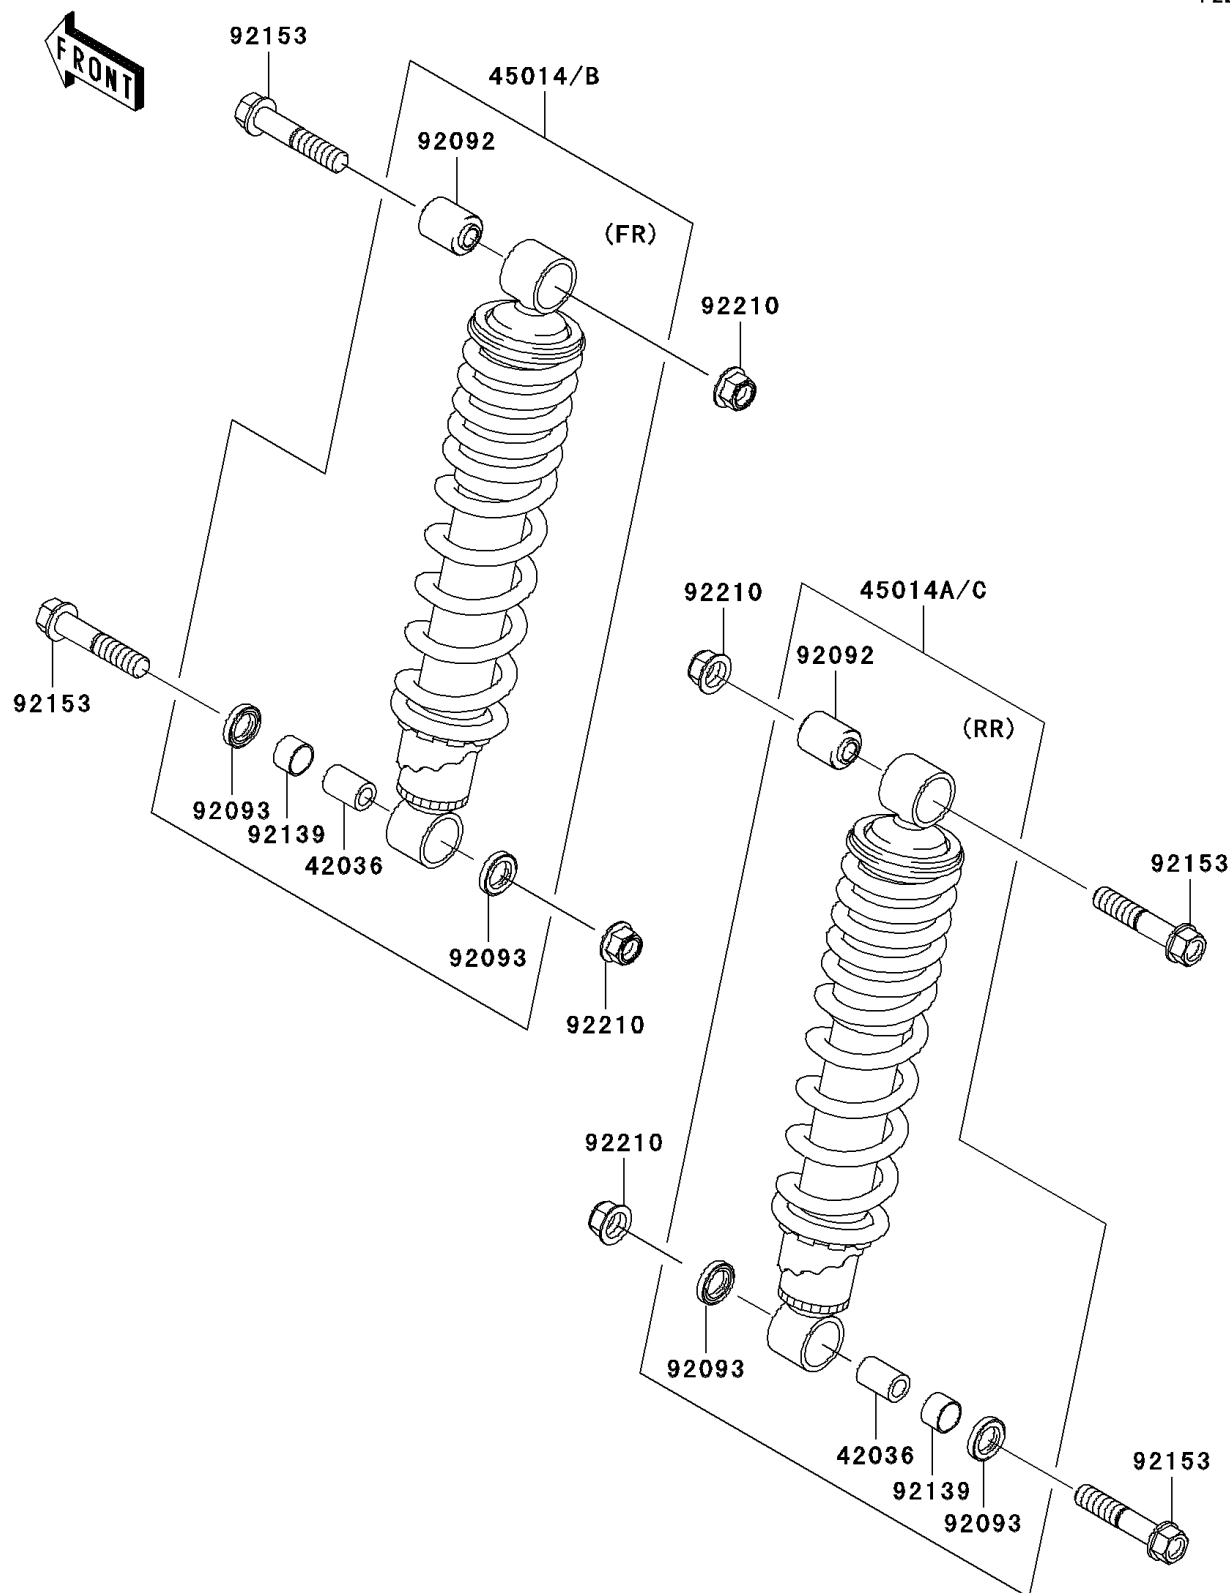

## 2007 Brute Force 650 4x4i PARTS LIST

### Shock Absorber(s)

| ITEM NAME                           | PART NUMBER | QUANTITY |
|-------------------------------------|-------------|----------|
| SLEEVE (Ref # 42036)                | 42036-0018  | 4        |
| SHOCKABSORBER,FR (Ref # 45014)      | 45014-0138  | 2        |
| SHOCKABSORBER,RR (Ref # 45014A)     | 45014-0139  | 2        |
| BUSHING-RUBBER (Ref # 92092)        | 92092-0007  | 4        |
| SEAL (Ref # 92093)                  | 92093-0033  | 8        |
| BUSHING (Ref # 92139)               | 92139-0084  | 4        |
| BOLT,FLANGED,10X50 (Ref # 92153)    | 92153-1139  | 8        |
| NUT,LOCK,FLANGED,10MM (Ref # 92210) | 92210-0276  | 8        |