


2011 VULCAN® 900 CUSTOM PARTS DIAGRAM

Footrests

F2160

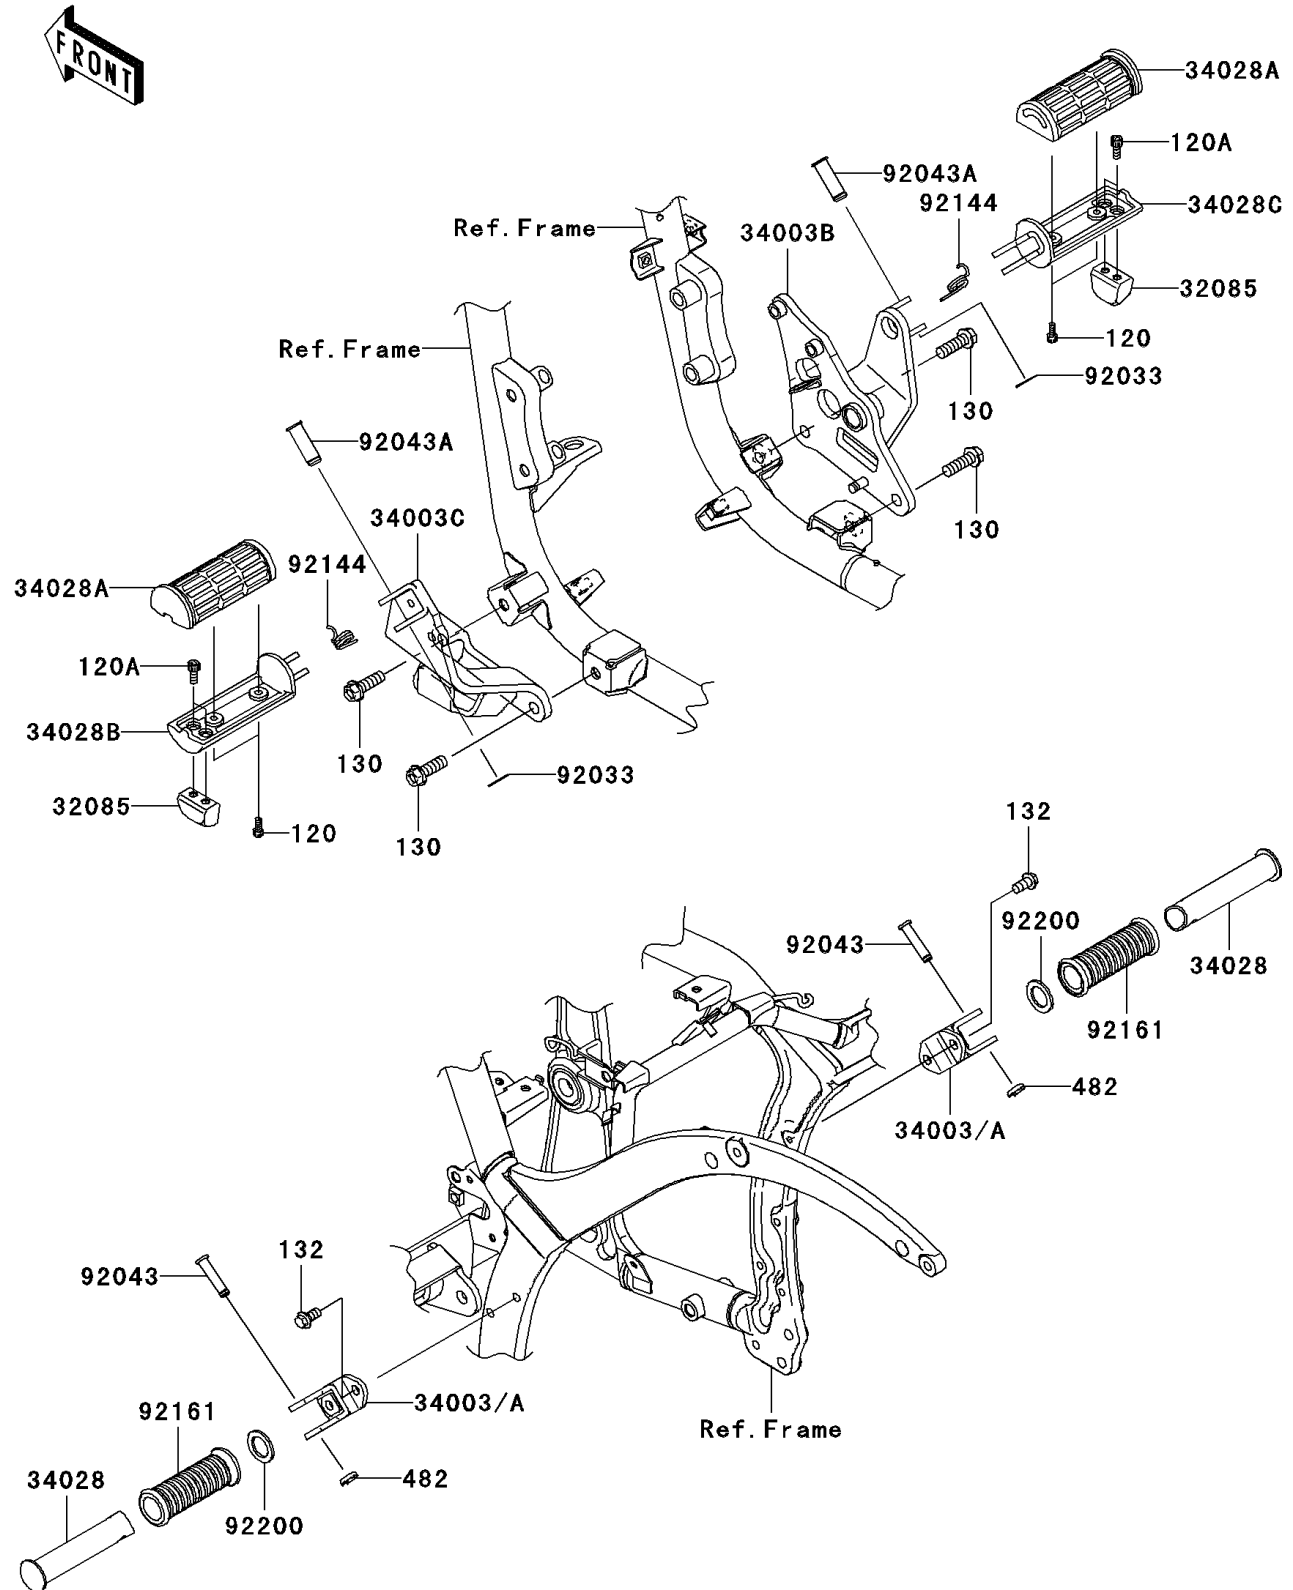

2011 VULCAN® 900 CUSTOM PARTS LIST

Footrests

ITEM NAME	PART NUMBER	QUANTITY
BOLT-SOCKET,5X12 (Ref # 120)	120CB0512	1
BOLT-SOCKET,6X14 (Ref # 120A)	120CB0614	1
BOLT-FLANGED,10X30 (Ref # 130)	130BB1030	1
BOLT-FLANGED-SMALL,8X16 (Ref # 132)	132BB0816	1
CIRCLIP-TYPE-E (Ref # 482)	482EA7000	1
STOPPER,BANK SENSOR (Ref # 32085)	32085-1534	1
HOLDER-STEP,RR,BLACK (Ref # 34003)	34003-0030-18R	1
HOLDER-STEP,FR,RH (Ref # 34003B)	34003-0045	1
HOLDER-STEP,FR,LH (Ref # 34003C)	34003-0051	1
STEP,RR (Ref # 34028)	34028-0017	1
STEP,RUBBER (Ref # 34028A)	34028-0076	1
STEP,FR,LH (Ref # 34028B)	34028-1519	1
STEP,FR,RH (Ref # 34028C)	34028-1520	1
RING-SNAP,10MM (Ref # 92033)	92033-1166	1
PIN,8X36.5 (Ref # 92043)	92043-1339	1
PIN,12X37 (Ref # 92043A)	92043-1358	1
SPRING,STEP RETURN (Ref # 92144)	92144-1126	1
DAMPER,STEP (Ref # 92161)	92161-0232	1
WASHER,22.5X33X2.3 (Ref # 92200)	92200-1482	1