


2014 VULCAN® 900 CUSTOM PARTS DIAGRAM

Footrests

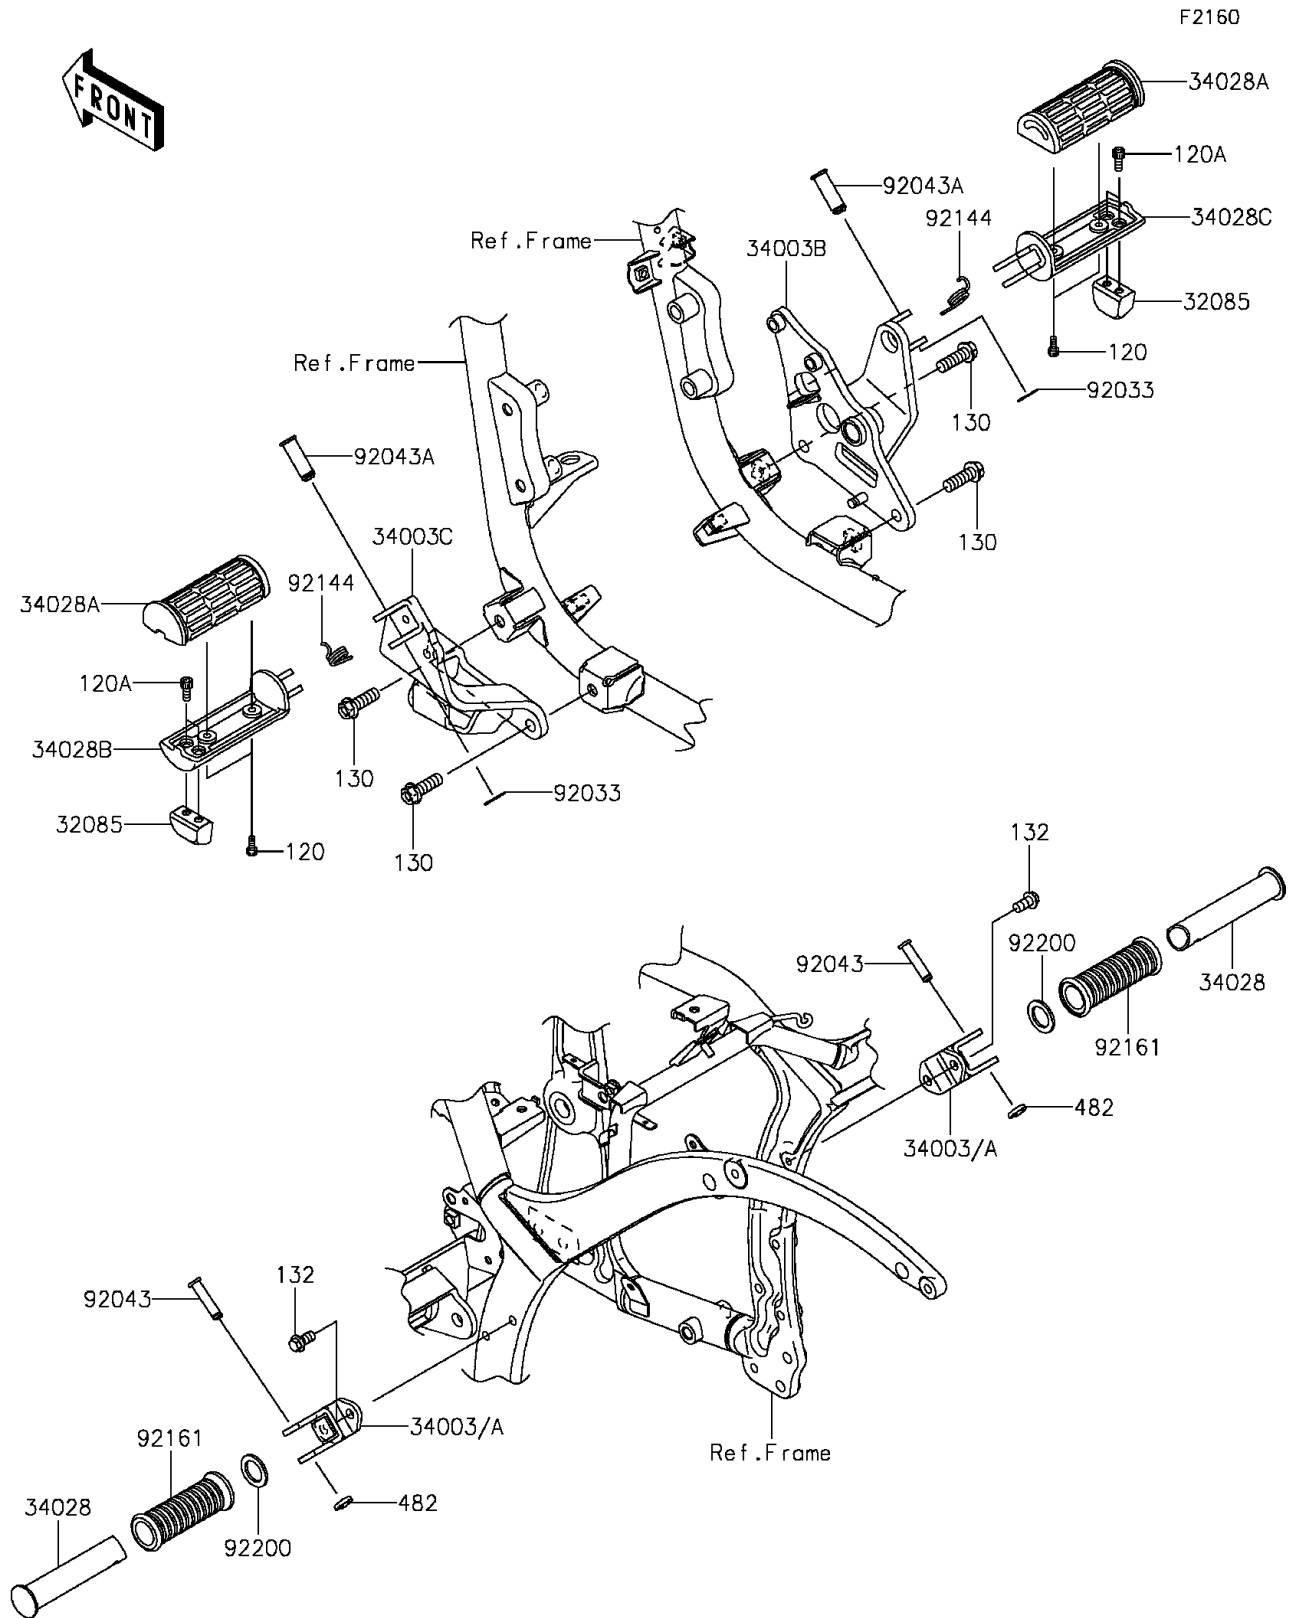

2014 VULCAN® 900 CUSTOM PARTS LIST

Footrests

ITEM NAME	PART NUMBER	QUANTITY
BOLT-SOCKET,5X12 (Ref # 120)	120CB0512	4
BOLT-SOCKET,6X14 (Ref # 120A)	120CB0614	4
BOLT-FLANGED,10X30 (Ref # 130)	130BB1030	4
BOLT-FLANGED-SMALL,8X16 (Ref # 132)	132BB0816	4
CIRCLIP-TYPE-E (Ref # 482)	482EA7000	2
STOPPER,BANK SENSOR (Ref # 32085)	32085-1534	2
HOLDER-STEP,RR,F.S.BLACK (Ref # 34003)	34003-0030-18R	2
HOLDER-STEP,FR,RH (Ref # 34003B)	34003-0045	1
HOLDER-STEP,FR,LH (Ref # 34003C)	34003-0051	1
STEP,RR (Ref # 34028)	34028-0017	2
STEP,RUBBER (Ref # 34028A)	34028-0076	2
STEP,FR,LH (Ref # 34028B)	34028-1519	1
STEP,FR,RH (Ref # 34028C)	34028-1520	1
RING-SNAP,10MM (Ref # 92033)	92033-1166	2
PIN,8X36.5 (Ref # 92043)	92043-1339	2
PIN,12X37 (Ref # 92043A)	92043-1358	2
SPRING,STEP RETURN (Ref # 92144)	92144-1126	2
DAMPER,STEP (Ref # 92161)	92161-0232	2
WASHER,22.5X33X2.3 (Ref # 92200)	92200-1482	2