


# Mule 3010 Trans4x4 Hardwoods Green HD

## PARTS DIAGRAM

### Shock Absorber(s)

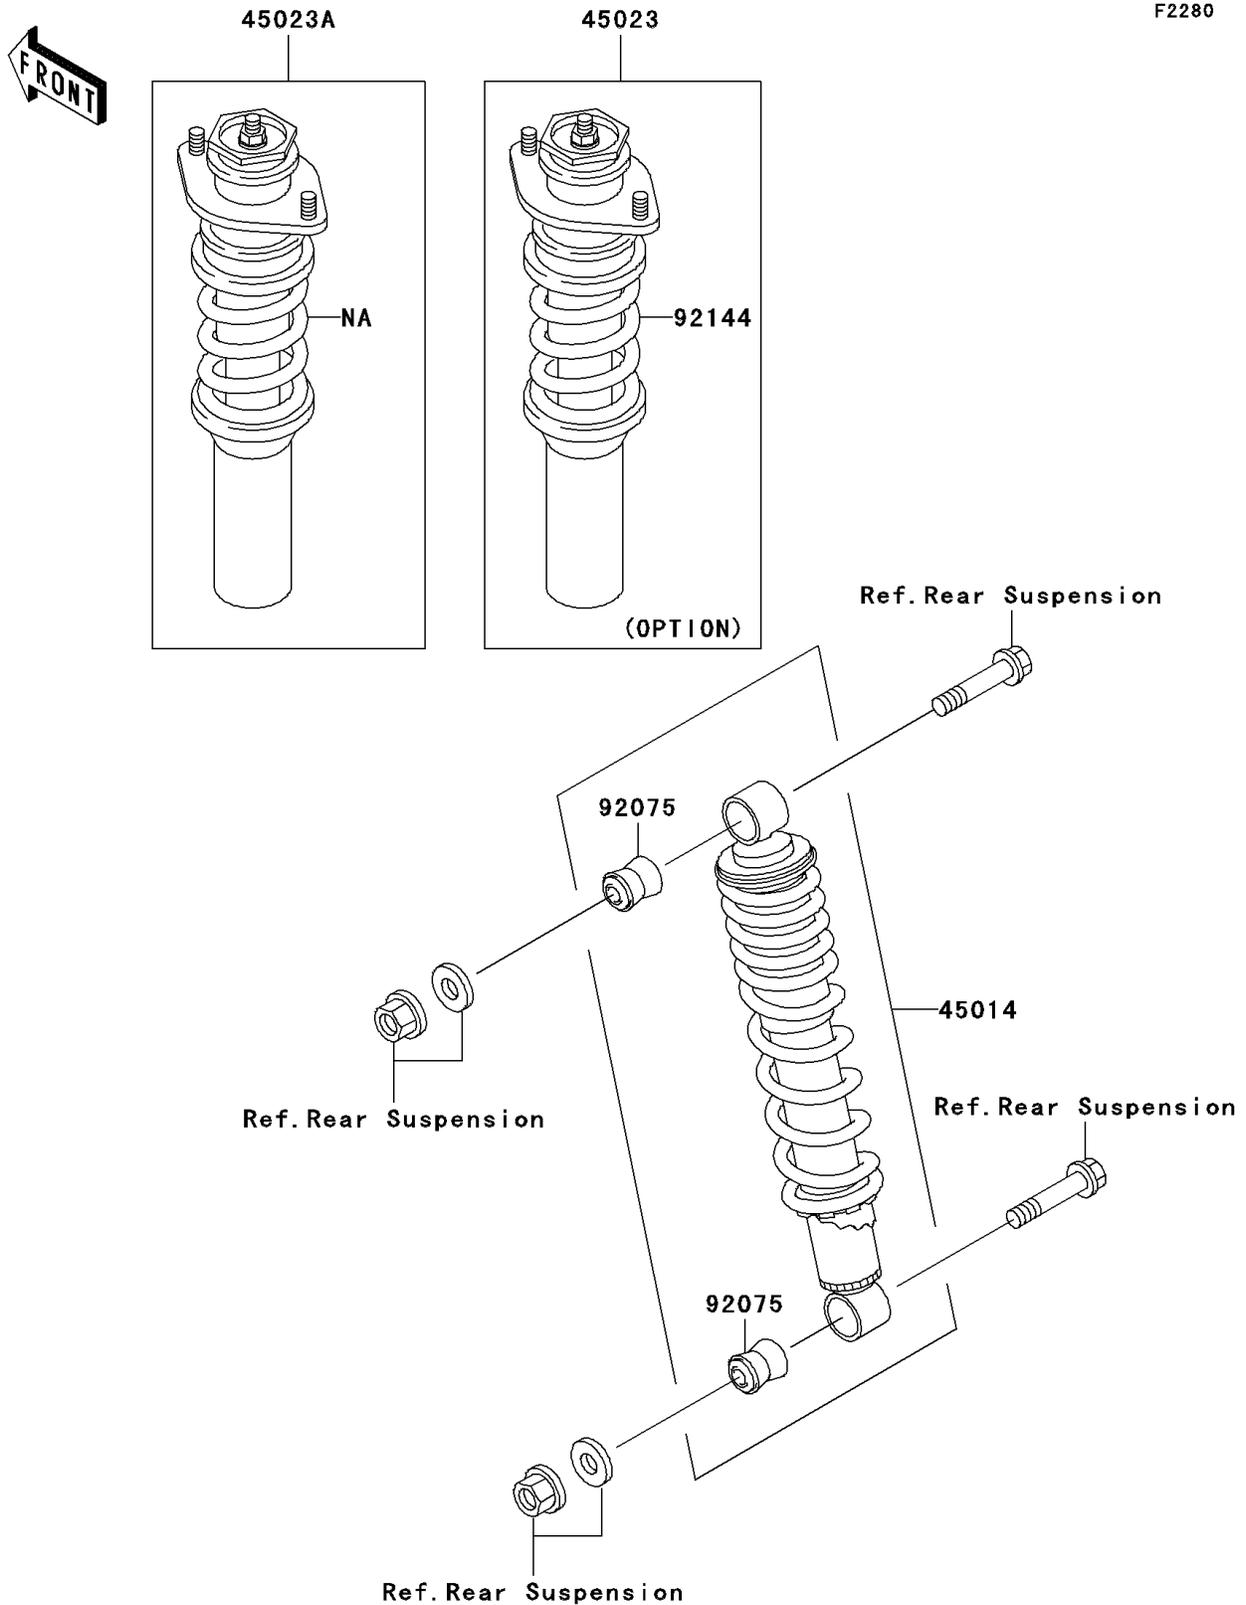

F2280

# Mule 3010 Trans4x4 Hardwoods Green HD

**Kawasaki**  
Let the Good Times Roll®

## PARTS LIST

### Shock Absorber(s)

ITEM NAME	PART NUMBER	QUANTITY
SHOCKABSORBER,RR (Ref # 45014)	45014-1725	2
STRUT,FR,K=3.13 (Ref # 45023)	45023-1006	2
STRUT,FR,K=1.95 (Ref # 45023A)	45023-7503	2
DAMPER,SHOCKABSORBER (Ref # 92075)	92075-1784	4
SPRING,K=3.13 (Ref # 92144)	92144-1919	2