


# 2012 BRUTE FORCE® 650 4x4

**Kawasaki**  
Let the Good Times Roll®

## PARTS DIAGRAM

### Shock Absorber(s)

F2280

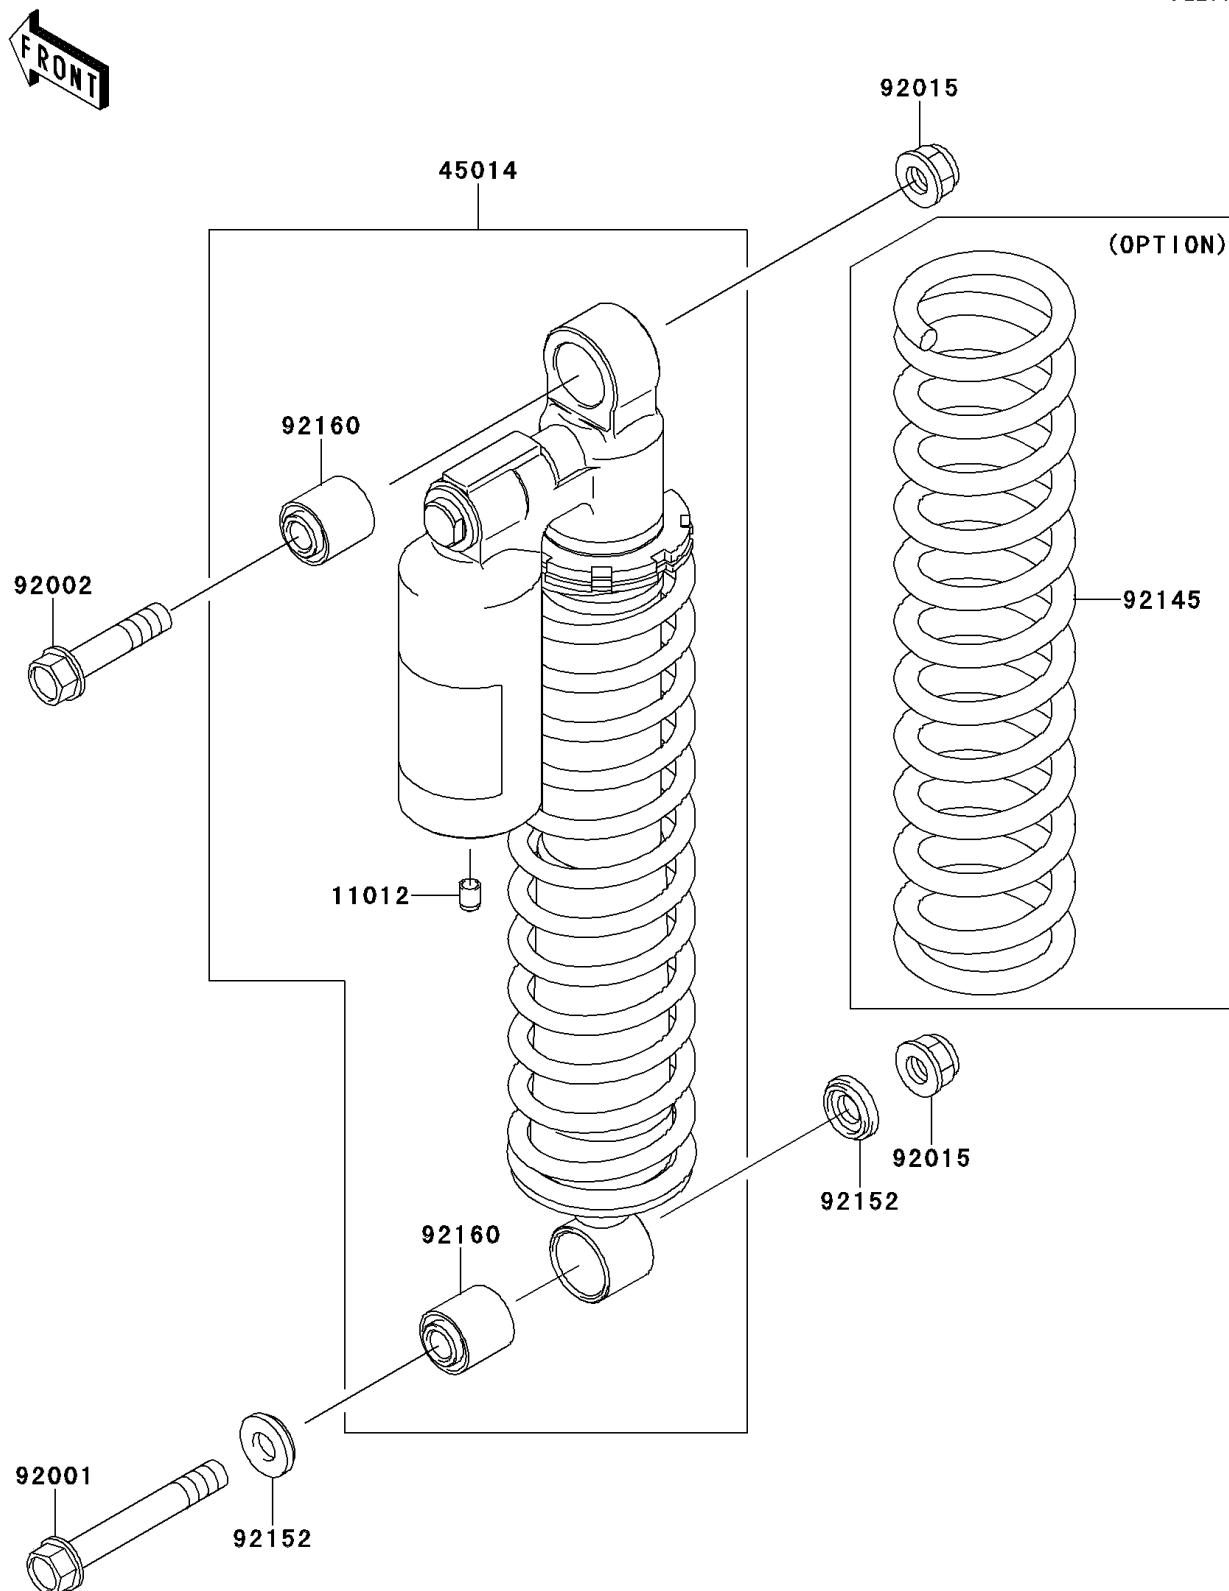

# 2012 BRUTE FORCE® 650 4x4

## PARTS LIST

### Shock Absorber(s)

| ITEM NAME                                  | PART NUMBER | QUANTITY |
|--------------------------------------------|-------------|----------|
| CAP (Ref # 11012)                          | 11012-1283  | 1        |
| SHOCKABSORBER (Ref # 45014)                | 45014-0028  | 1        |
| BOLT,FLANGED,12X88 (Ref # 92001)           | 92001-1693  | 1        |
| BOLT,FLANGED,12X55 (Ref # 92002)           | 92002-1840  | 1        |
| NUT,FLANGED,LOCK,12MM (Ref # 92015)        | 92015-1617  | 2        |
| SPRING,REAR SHOCK,K=24.5N/MM (Ref # 92145) | 92145-0231  | 1        |
| COLLAR (Ref # 92152)                       | 92152-1293  | 2        |
| DAMPER,SHOCKABSORBER (Ref # 92160)         | 92160-1777  | 2        |