


# 2013 BRUTE FORCE® 650 4x4

## PARTS DIAGRAM

### Shock Absorber(s)

F2280

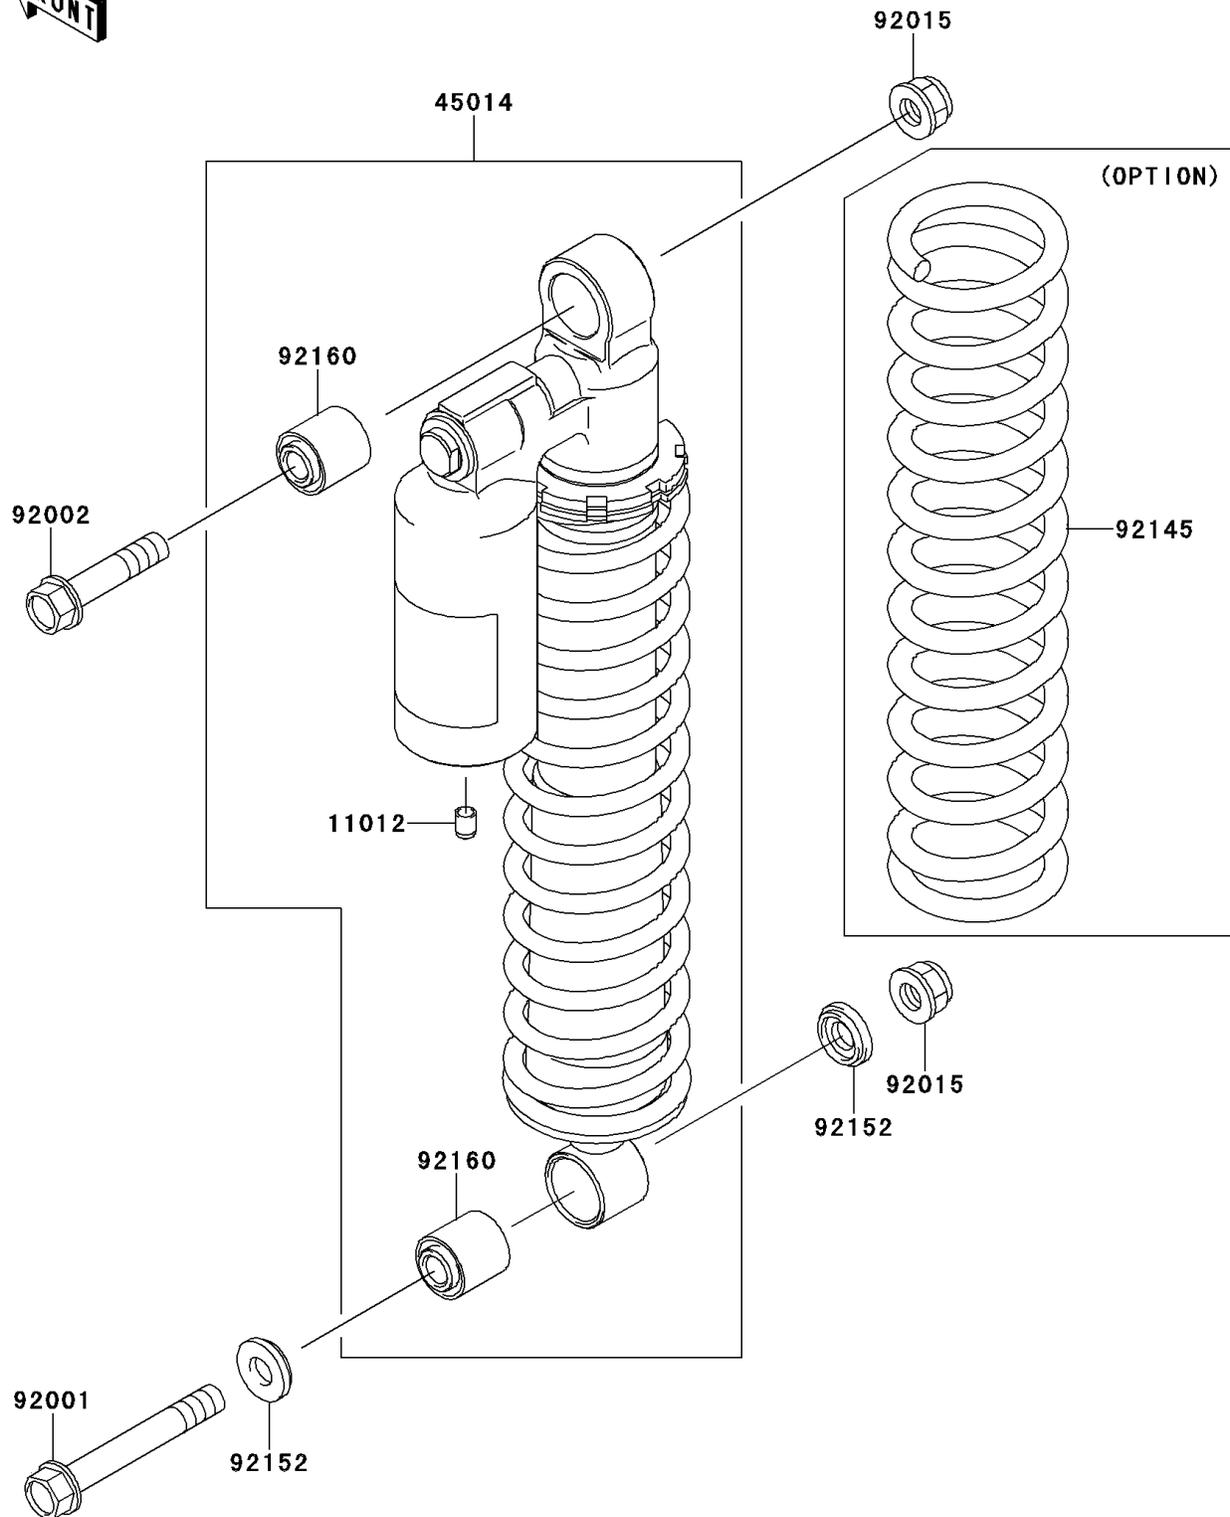

# 2013 BRUTE FORCE® 650 4x4

## PARTS LIST

### Shock Absorber(s)

ITEM NAME	PART NUMBER	QUANTITY
-----------	-------------	----------

---