


2013 BRUTE FORCE® 650 4x4i PARTS DIAGRAM

Meter(s)




F2530

92161

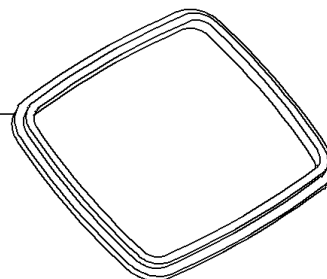

16146

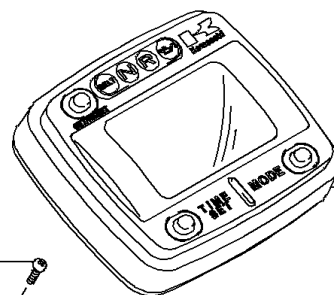

92009C

92009C

25031/A

92009B

92009

11050

92009C

92009D

92015

92160

92009A

92009D

25008

92009A

92015

92009D

25009

92015

311

2013 BRUTE FORCE® 650 4x4i PARTS LIST

Meter(s)

ITEM NAME	PART NUMBER	QUANTITY
NUT-HEX (Ref # 311)	311AB0500	3
BRACKET,METER (Ref # 11050)	11050-1932	1
COVER-ASSY,UPPER (Ref # 16146)	16146-0011	1
BRACKET-METER (Ref # 25008)	25008-0034	1
WASHER,5.2X16X1.2 (Ref # 25009)	25009-004	3
SCREW,TAPPING,4X16 (Ref # 92009)	92009-1163	4
SCREW,TAPPING,5X14 (Ref # 92009A)	92009-1197	3
SCREW,TAPPING,4X12 (Ref # 92009B)	92009-1254	1
SCREW,3X12 (Ref # 92009C)	92009-1326	4
SCREW,5X12 (Ref # 92009D)	92009-1652	3
NUT,5MM (Ref # 92015)	92015-1573	3
DAMPER (Ref # 92160)	92160-1460	3
DAMPER,METER,UPP (Ref # 92161)	92161-1114	1
METER-ASSY,MPH (Ref # 25031)	25031-0034	1
METER-ASSY,KPH (Ref # 25031A)	25031-0057	1